



# Operation Manual

## SV-DA200 AC servo drives



## Preface

Thanks for selecting SV-DA200 servo drives.

SV-DA200 series products apply the modular structure with extension functions and better performance. The upper PC uses high speed USB communication, the bus control can select 485 communication and CANopen communication and PROFIBUS-DP and EtherCAT can be extended by the extension card. This product is armed with the following functions: online/offline inertia identification, gain adjustment, automatic/manual notch filter, automatic/manual vibration control filter, internal position control, full closed loop control, security terminal STO, various encoder inputs and 4M pulse input and so on.

SV-DA200 drive has the electromagnetic compatibility design which can meet the strong electromagnetic interference resistance demand of environmental protection and low noise and weakening electromagnetic interference in the application sites for the customers.

This manual provides installation and configuration, parameters setting, fault diagnoses and daily maintenance and relative precautions to customers. Please read this manual carefully before the installation to ensure a proper installation and operation and high performance of SV-DA200 drives.

If the product is ultimately used for military affairs or manufacture of weapon, it will be listed on the export control formulated by ***Foreign Trade Law of the People's Republic of China***. Rigorous review and necessary export formalities are needed when exported.

Our company reserves the right to update the information of our products.

## Safety precautions

### Safety icons:



Read manual carefully and follow the directions

务必在阅读使用说明书后, 按其步骤操作!



Disconnect all power and wait 15 min. before servicing. May cause electric shock.

通电中或断电15分钟内, 请勿触摸端子, 有触电危险!



Don't touch heatsink, May cause burn.

请勿触摸散热片, 有烫伤危险!



Contact currents up to 0.5mA. Before use must be reliable grounding.

接触电流可达0.5mA, 使用前必须可靠接地!

Safety icons are on the side cover of the servo drive. Please follow these instructions when operation.

### Following safety precautions should be paid attention to before any installation, configuration, operation, maintenance and inspection:

- Check whether the AC power supply is the same as the rated voltage of the servo drive, otherwise fire, hurt, damage to the drive may occur.
- Do not connect input power cables to output terminals, otherwise damage to the drive may occur.
- Do not carry out any insulation and voltage withstand test to the drive, and do not test the control circuit of the drive by megameter.
- Connect drive and motor in correct phase sequence, otherwise drive fault or damage may occur.
- De-couple the motor load and run the motor independently before operation to avoid accidents.
- Please ensure the drive can be disconnected from power supply by E-switch before any operation.
- Set the corresponding parameters before operation, otherwise the drive may run abnormally or beyond the expectation because of the load.
- Only qualified electrical engineers can carry out the wiring, otherwise electric shock or fire may occur.
- Do not touch the conductive parts and components directly. Do not connect the output cables with the enclosure and avoid any short connection, otherwise electric shock and danger may occur.
- Rewire the drive after 15 minutes when disconnecting power supply, otherwise electric shock may occur.
- Ground with proper techniques as the touch current may be 0.5mA, otherwise electric shock may occur.
- Do not touch the heat sink and external braking resistor during operation, otherwise burning may occur for the hot sides.
- Do install the overcurrent protector, leakage current protector and emergency device and ensure the normal usage after wiring, otherwise electric shock, hurt and fire may occur.
- The leakage current may exceed 3.5mA during the drive running. Do ground with proper techniques and ensure the grounding resistor is less than 10Ω. The conductivity of PE earth conductor is the same as the phase conductor (with the same cross area).
- There is heavy metal in the drive components and the drive is industrial waste after scrapping.

## Contents

Preface .....	1
Safety precautions.....	2
Contents .....	1
Chapter 1 Product overview .....	1
1.1 Servo drive .....	1
1.2 Servo motor .....	7
1.3 Cables.....	10
1.4 Braking resistors .....	13
Chapter 2 Installation instruction .....	15
2.1 Drive dimension .....	15
2.2 Drive installation.....	16
2.3 Motor dimension.....	18
2.4 Motor installation.....	24
2.5 Technical parameters of servo motor .....	24
Chapter 3 Wiring instruction .....	27
3.1 System wiring.....	27
3.2 Wiring of the main circuit.....	29
3.3 Wiring of power cables for the motors.....	31
3.4 Control I/O-CN1 terminal layout .....	32
3.5 Wiring of encoder-CN2 terminals .....	33
3.6 Wiring of 485/CAN-CN3 terminals.....	35
3.7 Wiring of USB-CN4 terminals.....	36
3.8 Wiring of STO/Full closed loop-CN5 terminals .....	36
3.9 Wiring of PROFIBUS-DP terminals .....	38
Chapter 4 Control mode applications .....	39
4.1 Standard wiring of the position mode .....	39
4.2 Standard wiring of the speed mode.....	40
4.3 Standard wiring of the torque mode .....	41
4.4 CN1 function instruction .....	41
4.5 CN1 wiring instruction .....	56
Chapter 5 Running and operation .....	62
5.1 Running.....	62
5.2 Display and operation .....	71
Chapter 6 Detailed parameter description .....	78

6.1 Basic control (P0 group parameters).....	78
6.2 Autotuning control parameters (P1).....	101
6.3 Motor control parameters (P2) .....	109
6.4 I/O management parameters (P3).....	119
6.5 Extension and application (P4) .....	136
6.6 Point control and zero returning (P5 and P6) .....	154
6.7 Application function (P6) .....	166
6.8 Point control (PtP0, PtP1, PtP2).....	171
6.9 Factory parameters (P8,P9 and P10).....	199
6.10 State monitoring .....	199
Chapter 7 Commissioning .....	216
7.1 Operation instruction of inertia identification .....	216
7.2 General method for parameters adjusting .....	216
7.3 Suppression of mechanical resonance .....	223
7.4 Gain switching function .....	224
Chapter 8 Communication.....	227
8.1 Instruction .....	227
8.2 RS485 communication protocol .....	227
8.3 CANopen communication protocol.....	232
8.4 PROFIBUS-DP communication protocol.....	238
8.5 Upper PC software.....	242
Chapter 9 Faults and solutions .....	247
9.1 Meanings of the fault alarm codes and countermeasures.....	247
9.2 CANopen communication fault code and countermeasures .....	256
9.3 PROFIBUS-DP communication fault code and countermeasures.....	257
Chapter 10 Appendix.....	259
10.1 List of function parameters .....	259
10.2 State monitoring .....	282
10.3 General monitoring parameters.....	285
10.4 Fault code .....	286
10.5 Record table of parameter setting .....	290

# Chapter 1 Product overview

## 1.1 Servo drive

### 1.1.1 Instruction for the drive

DA200 series servo drive (100W~22kW)			
Specification		Description	
Power supply	220V system input voltage	1P/3P AC220V(-15%)~240V(+10%) 47Hz~63Hz	
	400V system input voltage	3P AC380V(-15%)~440V(+10%) 47Hz~63Hz	
Interface	Control signal	Input	Universal type 10 inputs, EtherCAT bus type servo 7 inputs, Motionnet type servo 5 inputs (the function can be configured by relevant parameters)
		Output	Universal type 6 outputs, EtherCAT bus type servo 4 outputs, Motionnet type servo 1 output (the function can be configured by relevant parameters)
	Analog value	Input	Standard type 3 inputs (one 16-bit, two 12-bit analog input), other 2 inputs (two 12-bit analog inputs)
		Output	2 outputs (analog monitoring output)
	Pulse signal	Input	2 inputs (open collector input/differential input)
		Output	6 outputs (3 differential outputs, 3 open collector outputs)
	The 2nd encoder	Input	Incremental encoder interface (The 2nd encoder or full closed-loop grating ruler)
	Communication	USB	1:1 communication upper PC software (standard)
		RS485	1:n communication (standard)
		CANopen	1:n communication (standard)
		Profibus-DP	1:n communication (standard)
		EtherCAT	1:n communication (standard)
	Safety terminals	STO	Safe torque off (conform to the latest European safety standards) (optional)
Control mode	1 Position control; 2 Speed control; 3 Torque control; 4 Position/Speed mode switching; 5 Speed/Torque mode switching; 6 Position/Torque mode switching; 7 Full closed loop control; 8 CANopen mode; 9 EtherCAT mode; 10 MotionNet mode		
Function	Position control	Control input	1. Retention pulse clear; 2. Command pulse input disabled; 3. Command frequency division/doubling switching; 4. Vibration control switching


DA200 series servo drive (100W~22kW)			
Specification		Description	
Control	Positioning	Control output	Output after positioning finished
		Max. pulse input frequency	Optical coupling: differential input 4Mpps, open collector input 200kpps;
		Pulse input mode	1. Positive/Negative direction; 2. A phase/B phase; 3. Command pulse/Command direction
		Electric gear	1/10000~1000 times
		Filter	1. Command smoothing filter; 2. FIR filter
		Analog input	Torque Limit command input Can independently perform clockwise/ counterclockwise torque limit
		Vibration control	Control 5~200Hz forward and whole machine vibration
		Pulse output	1. Can perform arbitrary frequency division settings under the encoder resolution; 2. B phase reverse function
		Control input	1. Internal command speed 1; 2. Internal command speed 2; 3. Internal command speed 3; 4. Zero speed clamp
		Control output	Speed reaching
Speed control	Positioning	Analogue input	Speed command input Can be speed command input after relevant setting based on analog voltage DC±10V
		Torque limit input	Can independently arrange clockwise/ counterclockwise torque limit
	Internal speed commands	8 step speed can be switched according to the external control input	
	ACC/DEC adjustment of speed command	ACC/DEC time setting and S curve setting	
	Zero speed	In the speed mode, it can set the operation mode as	

DA200 series servo drive (100W~22kW)			
Specification		Description	
	clamp	the speed mode and position mode	
	Speed command filter	A delay filter of analog input speed command	
	Speed command zero drift control	Zero drift control against outside interference with 0.3mV precision	
Torque control	Control input	Zero speed clamp input	
	Control output	Speed reaching	
	Analog input	Torque command input	Analog torque command input, gain and polarity can be set based on analog voltage with 4.88mV precision
		Speed limit input	Analog speed limit
	Speed limit	Set the speed limit by parameters	
	Torque command filter	A delay filter of analog input torque command	
	Torque command zero drift control	Zero drift control against the outside interference with 4.88mV precision	
	Plan bits	128 bits internal position planning, the positioning can be controlled through communication	
	Route setting	1. Position; 2. Speed; 3. ACC time; 4. DEC time; 5. Stop timer; 6. Various state output; 7. Operational mode	
	Origin returning	1. LS signal; 2. Z phase signal; 3. LS signal+Z phase signal; 4. Torque limit signal	
Protection	Hardware protection	Overspeed, undervoltage, overcurrent, overspeed, overload, braking resistor overload, drive overheat, encoder fault and so on	
	Software protection	Storage fault, initialization fault, I/O distribution abnormalities and large position deviation	
	Protection and fault record	1. Record up to 10 faults 2. Can record the key parameters when fault occurs	
Environment	Temperature	Operation temperature	0~45°C
		Storage temperature	-20~80°C (no freezing)
	Humidity	Operation/storage: ≤90%RH (no condensation)	


DA200 series servo drive (100W~22kW)		
Specification		Description
	IP degree	IP20
	Altitude	Below 1000m altitude
	Vibration	$\leq 5.88\text{m/s}^2$ , 10~60Hz(Not allowed to work at the resonance bit)

### 1.1.2 External appearance of the drive

- ◆ Standard

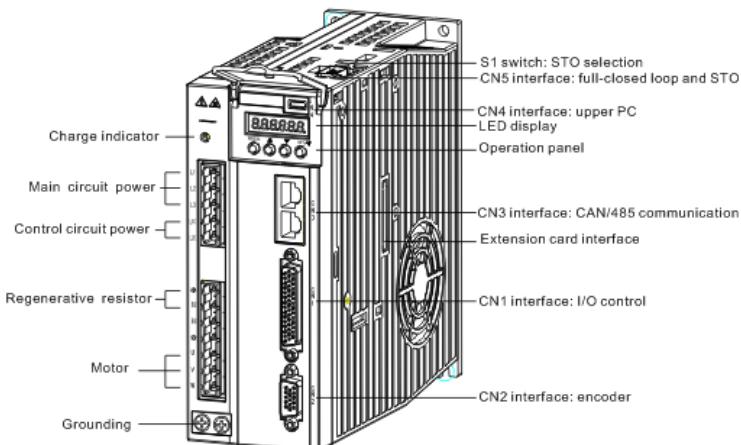

- ◆ With extension cards

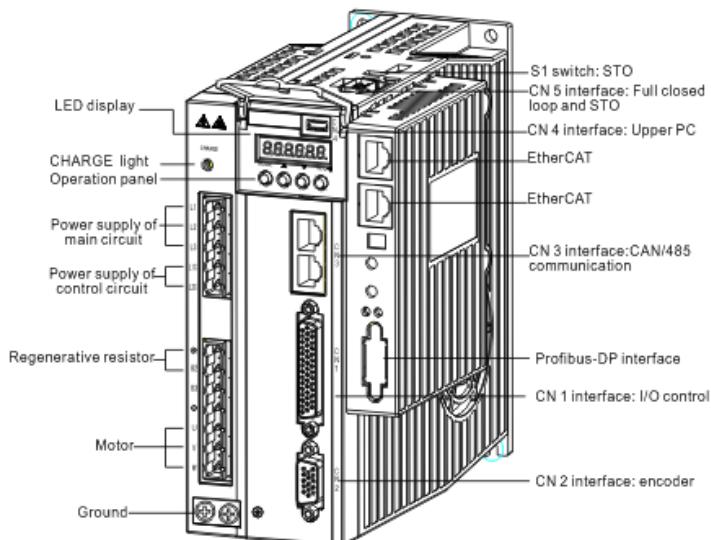

### 1.1.3 Naming of the drive

**SV-DA200-0R4-2-E 0-XXXX**

①      ②      ③      ④      ⑤ ⑥      ⑦

Symbol	Instruction	Naming instance
①	Product category	SV: Servo system product
②	Product series	DA200: Product series
③	Power class	0R1: 100W 0R2: 200W 0R4: 400W 0R7: 750W 1R0: 1.0kW 1R5: 1.5kW 2R0: 2.0kW 3R0: 3.0kW 4R4: 4.4kW 5R5: 5.5kW 7R5: 7.5kW 011: 11kW 015: 15kW 022: 22kW
④	Input voltage class	2: 220VAC 4: 400VAC
⑤	Servo type	E: Pulse type S: Standard C: CANopen bus type P: PROFIBUS-DP bus type N: EtherCAT bus type M: MotionNet bus type K: Customized
⑥	Encoder type	0: Photoelectric encoder (2500-wire standard incremental, 17-bit single/multi-turn absolute value, 23-bit multi-turn absolute value) 7: Rotary transformer
⑦	Lot no.	Manufacturer lot no. used for differentiating models with special functions. Default lot no.

Function difference between machine types:

Small power range: 100W-5.5kW													
Pulse type	Symbol	Pulse input	16-bit analog quantity	2 <sup>nd</sup> encoder	STO	RS485	CAN open	Profibus-DP	EtherCAT	Motion Net	Optoelectric encoder (2500-wire, 17/23-bit)	Rotary transformer	
Standard	E	○	×	○	×	○	×	×	×	×	○	○	
	S	○	○	○	○	○	×	×	×	×	○	○	
Bus	C	×	×	○	×	×	○	×	×	×	○	×	
	P	×	×	○	×	×	×	○	×	×	○	×	
	N	×	×	○	×	×	×	×	○	×	○	×	
	M	×	×	○	×	○	×	×	×	○	○	×	
Customized	K	○	×	○	×	○	○	×	×	×	○	○	

## Medium-power range: 7.5kW-22kW

Pulse type	Symbol	Pulse input	16-bit analog quantity	2 <sup>nd</sup> encoder	STO	RS485	CAN open	Profibus-DP	EtherCAT	Motion Net	Optoelectric encoder (2500-wire, 17/23-bit)	Rotary transformer
Standard	S	○	○	○	○	○	○	×	×	×	○	○
Bus	N	×	×	○	○	×	×	×	○	×	○	○
Customized	K	○	×	○	○	○	○	×	×	×	○	○

## 1.1.4 Name plate of the drive


伺服驱动器 SERVO DRIVES		型号: SV-DA200-0R4-2-S0 MODEL: SV-DA200-0R4-2-S0
输入 INPUT		1P/3P AC 220V(-15%)~240V(+10%) 47~63Hz
输出 OUTPUT		3P AC 0V~V <sub>in</sub> 0~400Hz 2.8A 400W
S/N:   		CE Made in China
<b>invt</b> 上海英威腾工业技术有限公司 INVT INDUSTRIAL TECHNOLOGY (SHANGHAI) CO., LTD.		

### 1.1.5 Power ratings and volumes

Model	Input	Output		Volume
	Voltage (V)	Power (kW)	Rated current (A)	
SV-DA200-0R1-2	Single/Three phase 220	0.1	1.3	A
SV-DA200-0R2-2	Single/Three phase 220	0.2	1.8	A
SV-DA200-0R4-2	Single/Three phase 220	0.4	2.8	A
SV-DA200-0R7-2	Single/Three phase 220	0.75	4.5	B
SV-DA200-1R0-2	Single/Three phase 220	1.0	5	B
SV-DA200-1R5-2	Three phase 220	1.5	7.6	B
SV-DA200-2R0-2	Three phase 220	2.0	10	D
SV-DA200-3R0-2	Three phase 220	3.0	13	D
SV-DA200-4R4-2	Three phase 220	4.4	16.5	D
SV-DA200-1R0-4	Three phase 400	1.0	3.5	B
SV-DA200-1R5-4	Three phase 400	1.5	4.5	B
SV-DA200-2R0-4	Three phase 400	2.0	6.5	C
SV-DA200-3R0-4	Three phase 400	3.0	8.5	C
SV-DA200-4R4-4	Three phase 400	4.4	12	D
SV-DA200-5R5-4	Three phase 400	5.5	16	D
SV-DA200-7R5-4	Three phase 400	7.5	25	F
SV-DA200-011-4	Three phase 400	11.0	33	F
SV-DA200-015-4	Three phase 400	15.0	50	F2
SV-DA200-022-4	Three phase 400	22.0	66	G

### 1.2 Servo motor

#### 1.2.1 Nameplate of the motor

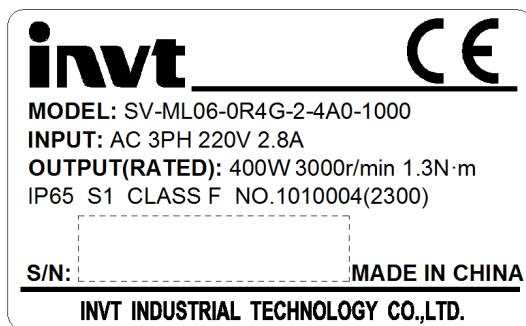

**Note:** "No. 1010004" in the nameplate is the motor model code (motor code for short). Please input this code into servo parameter P0.00 correctly (P0.00 is long parameter which can be set via keypad. See details at chapter 5.2.1 (8)), otherwise, the servo system may not operate normally and major fault may occur to the drive and motor.

### 1.2.2 Naming of the servo motor

**SV-M M 13-3R0 E-4-1 A 0-XXXX**

(1)      (2)      (3)      (4)      (5)      (6)      (7)      (8)      (9)      (10)      (11)

Symbol	Instruction	Naming instance
①	Product category	SV: Servo system product
②	Product series	M: M series C: C series S: S series
③	Inertial class	L: Small inertia general servo motor M: Medium inertia general servo motor H: Large inertia general servo motor
④	Base no.	04: 40mm (3) 06: 60mm 08: 80mm 11: 110mm 13: 130mm 18: 180mm 20: 200mm 26: 263mm
⑤	Rated power	0R1: 100W 0R2: 200W 0R4: 400W 0R7: 750W 0R8: 800W 1R0: 1.0kW 1R2: 1.2kW 1R5: 1.5kW 1R8: 1.8kW

Symbol	Instruction	Naming instance
		2R0: 2.0kW 3R0: 3.0kW 4R4: 4.4kW 5R5: 5.5kW 7R5: 7.5kW 011: 11kW 015: 15kW 022: 22kW .....
⑥	Rated speed	A: 1000rpm B: 1500rpm E: 2000rpm F: 2500rpm G: 3000rpm
⑦	Voltage class	2: 220VAC 4: 380VAC
⑧	Encoder type	1: 2500-wire standard incremental type 2: 2500-wire multiplexed incremental type (1) 3: 17-bit single-turn absolute value (2) 4: 17-bit multi-turn absolute value 7: Rotary transformer 9: 23-bit multi-turn absolute value
⑨	Shaft end connection	A: solid with threaded hole and key (standard) B: Solid optical axis
⑩	Optional part	0: with oil seal but no brake 1: without oil seal or brake (4) 2: with oil seal and permanent magnet brake 3: without oil seal but with permanent magnet brake (4) 4: with oil seal and electromagnetic brake 5: without oil seal but with electromagnetic brake (4)
⑪	Lot no.	Internal Invt lot no. (5)

**Remark:**

- (1): Non-stock up model, the lead time is 15~45 days more than that of the standard model.  
 (2): 17-bit absolute single turn motor belongs to a separate series and its dimension and parameters

are different. Only electromagnetic brake is used. Please pay attention to corresponding series when selecting models;

(3): 40-base motor, only supports 2500-wire and 17-bit absolute encoder;

(4) Non-stock up model, the ordering cycle will be delayed for 3~5 days;

(5): No need to fill in for the first-time model selection by customers;

In addition, the non-17 bit single-turn absolute motor with 40 or 60 bases supports permanent magnet brake only.

## 1.3 Cables

### 1.3.1 Nameplate of cables



### 1.3.2 Naming of the power cables

**DA ML-075-05-A A F-00**

(1) (2) (3) (4) (5) (6) (7) (8)

Symbol	Instruction	Naming instance
①	Product series	For internal use by manufacturer
②	Power cable	ML: Power cable
③	Cable diameter	075: 0.75mm <sup>2</sup> 100: 1.0mm <sup>2</sup> 150: 1.5mm <sup>2</sup> 250: 2.5mm <sup>2</sup> 400: 4.0mm <sup>2</sup> 10R: 10.0mm <sup>2</sup>

Symbol	Instruction	Naming instance
④	Cable length	03: 3m 05: 5m 10: 10m .....
⑤	Plug on motor end	A: 4PIN plastic plug B: 4PIN regular aviation plug YD28 C: 4PIN metal plug D: 7PIN regular aviation plug YD28 E: 4PIN regular aviation plug YD18 N: 4PIN regular aviation plug YD32 S: Copper tube terminal SC
⑥	Plug on drive end	B: Euro 7PIN 20A plug W: No plug S: Copper tube terminal SC
⑦	Cable material	0: Regular cable F: Flexible drag chain cable
⑧	Serial no.	00: Standard part 01: Serial no. for non-standard parts .....

### 1.3.3 Naming of power cable fittings

**DA ML-A A**  
 (1) (2) (5) (6)

Symbol	Instruction	Naming instance
①	Product series	For internal use by manufacturer
②	Power cable	ML: Power cable
⑤	Plug on motor end	A: 4PIN plastic plug B: 4PIN regular aviation plug YD28 C: 4PIN metal plug D: 7PIN regular aviation plug YD28 E: 4PIN regular aviation plug YD18 N: 4PIN regular aviation plug YD32 S: Copper tube terminal SC
⑥	Plug on drive end	B: Euro 7PIN 20A plug

Symbol	Instruction	Naming instance
		W: No plug S: Copper tube terminal SC

### 1.3.4 Naming of the encoder cables

**DB EL-15-03-A F-01 00**

①    ②    ③    ④    ⑤    ⑥    ⑦    ⑧

Symbol	Instruction	Naming instance
①	Product series	For internal use by manufacturer
②	Encoder cable	EL: Encoder cable
③	Cable number	06: 6-core cable 09: 9-core cable 15: 15-core cable
④	Cable length	03: 3m 05: 5m 10: 10m .....
⑤	Plug on motor end	A: 15PIN DB plug B: 15PIN regular aviation plug YD28 C: 9PIN metal plug D: 6PIN plastic head
⑥	Cable material	0: regular cable without battery holder D: regular cable with battery holder F: Flexible drag chain cable without battery holder H: Flexible drag chain cable with battery holder
⑦	Encoder type	01: 2500-wire standard incremental type 04: 17-bit single-turn/17-bit multi-turn/23-bit multi-turn absolute value 07: Rotary transformer
⑧	Serial no.	00: Standard part 01: Serial no. for non-standard part .....

### 1.3.5 Naming of encoder cables fittings

**DB EL-A F**

(1)      (2)      (9)      (5)

Symbol	Instruction	Naming instance
①	Product series	For internal use by manufacturer
②	Encoder cable	EL: Encoder cable
⑨	Plug on drive end	A: 15PIN plastic plug
⑤	Plug on motor end	A: 15PIN DB plug B: 15PIN regular aviation plug YD28 C: 9PIN metal plug D: 6PIN plastic head

### 1.3.6 Naming of motor braking cables

**BRKL - 03 - A**

(1)      (2)      (3)

Symbol	Instruction	Naming instance
①	Product series	BRKL: motor brake cable
②	Cable length	03: 3m 05: 5m 10: 10m 30: 30m
③	Plug on motor end	A: 2PIN metal plug B: 3PIN regular aviation plug C: 3PIN metal plug

## 1.4 Braking resistors

Drive model	Embedded braking resistor	Min. resistance of external braking resistors
SV-DA200-0R1-2	/	60Ω
SV-DA200-0R2-2	/	60Ω
SV-DA200-0R4-2	/	60Ω
SV-DA200-0R7-2	30Ω 60W	30Ω

Drive model	Embedded braking resistor	Min. resistance of external braking resistors
SV-DA200-1R0-2	30Ω 60W	30Ω
SV-DA200-1R5-2	30Ω 60W	20Ω
SV-DA200-2R0-2	15Ω 120W	15Ω
SV-DA200-3R0-2	15Ω 120W	15Ω
SV-DA200-4R4-2	15Ω 120W	15Ω
SV-DA200-1R0-4	60Ω 60W	60Ω
SV-DA200-1R5-4	60Ω 60W	60Ω
SV-DA200-2R0-4	60Ω 60W	40Ω
SV-DA200-3R0-4	60Ω 60W	30Ω
SV-DA200-4R4-4	30Ω 120W	30Ω
SV-DA200-5R5-4	30Ω 120W	30Ω
SV-DA200-7R5-4	/	30Ω
SV-DA200-011-4	/	20Ω
SV-DA200-015-4	/	15Ω
SV-DA200-022-4	/	10Ω

## Chapter 2 Installation instruction

### 2.1 Drive dimension

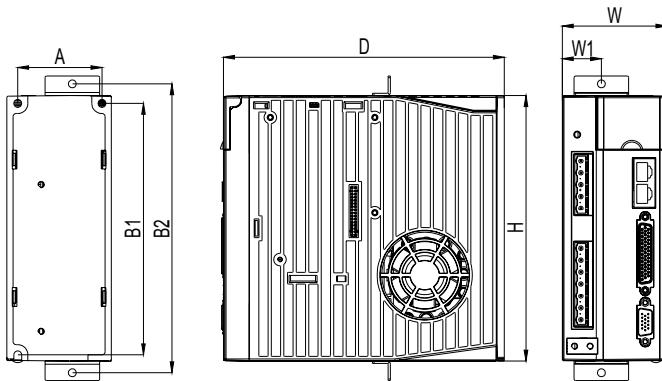


Fig 2-1 A, B, C, D volume and dimension diagram

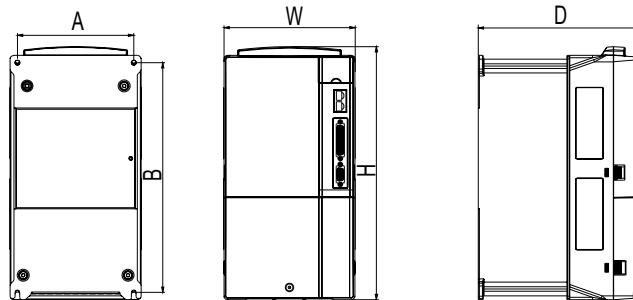


Fig 2-2 F, F2 volume and dimension diagram

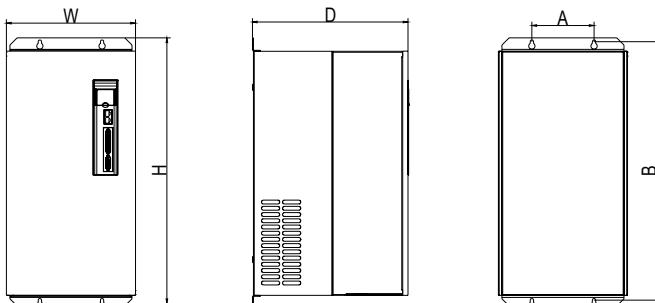


Fig 2-3 G volume and dimension diagram

Volume	Model	External dimension			Installation dimension			Installation hole (mm)
		H(mm)	W(mm)	D(mm)	A (mm)	B1 (mm)	B2 (mm)	
A	SV-DA200-0R1-2	170	45	170	33	162	185	22.5
	SV-DA200-0R2-2							
	SV-DA200-0R4-2							
B	SV-DA200-0R7-2	170	67	180	54	162	185	25
	SV-DA200-1R0-2							
	SV-DA200-1R5-2							
D	SV-DA200-2R0-2	245	92	190	79	237	260	45
	SV-DA200-3R0-2							
	SV-DA200-4R4-2							
B	SV-DA200-1R0-4	170	67	180	54	162	185	25
	SV-DA200-1R5-4							
C	SV-DA200-2R0-4	170	84	180	71	162	185	42
	SV-DA200-3R0-4							
D	SV-DA200-4R4-4	245	92	190	79	237	260	45
	SV-DA200-5R5-4							
F	SV-DA200-7R5-4	342	230	208	210	311	/	M5(Φ6)
	SV-DA200-011-4							
F2	SV-DA200-015-4	407	255	238	237	384	/	/
G	SV-DA200-022-4	555	270	325	130	540	/	M6(Φ7)

## 2.2 Drive installation

### 2.2.1 Installation mode

- 1) Base installation (there is an Ø5 installation hole at the lower left corner and upper right corner of the rear board)

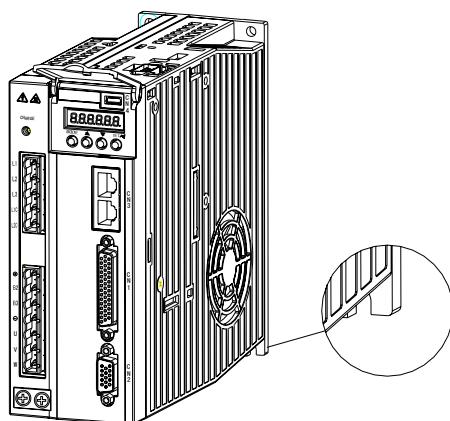


Figure 2-4 Installation hole

## 2) Bracket installation (the installation bracket is optional)

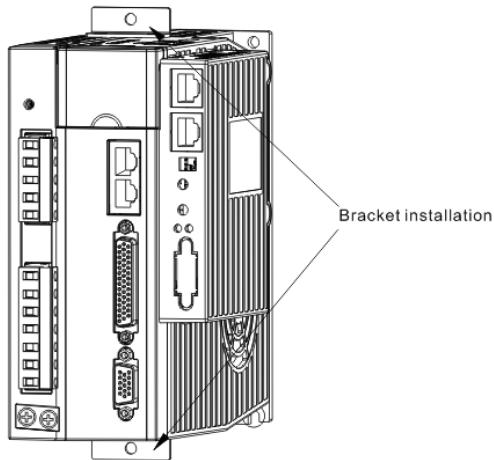


Figure 2-5 Installation bracket

### 2.2.2 Installation space and direction

Please install the servo drive vertically and keep enough installation space for good ventilation. Install fans if necessary to ensure the temperature inside the control cabinet is lower than 45°C.

#### 1) Single drive installation

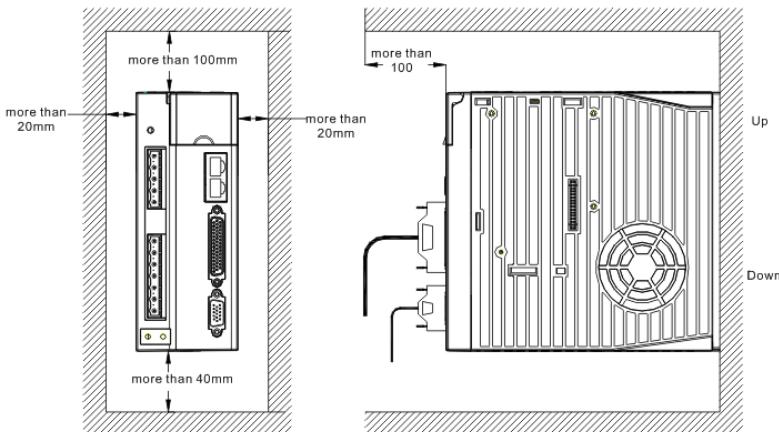


Figure 2-6 Installation space for installing one drive

## 2) Multiple drives installation


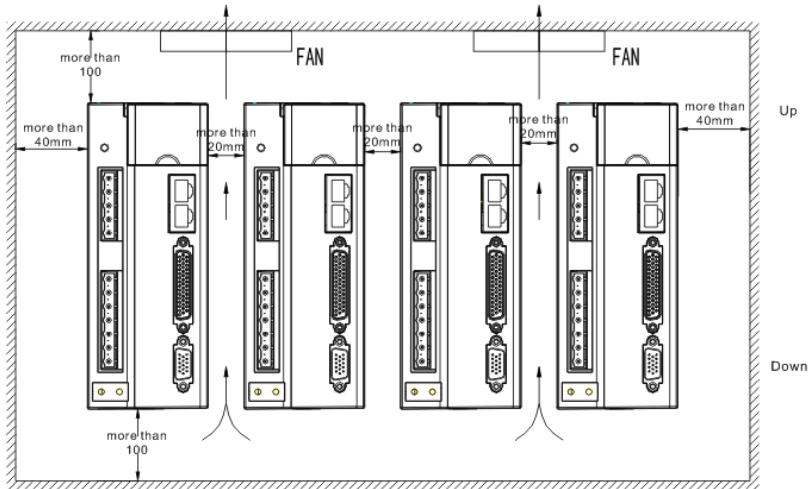


Figure 2-4 Installation space of multiple drives


## 2.3 Motor dimension

**Note:** As motor structure and dimension may vary slightly with design modification, for those who are sensitive to the installation length of motor, please confirm the installation length with our business staff before ordering.

### 2.3.1 Outline and installation dimension for 40 bases (mm)

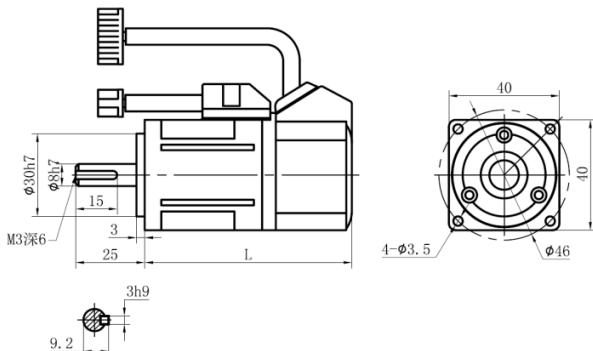


Motor model (2500-wire/multi-turn absolute value)	L(mm)	
	No brake	Permanent magnet brake
SV-ML04-0R1G-2-□A□	90	124

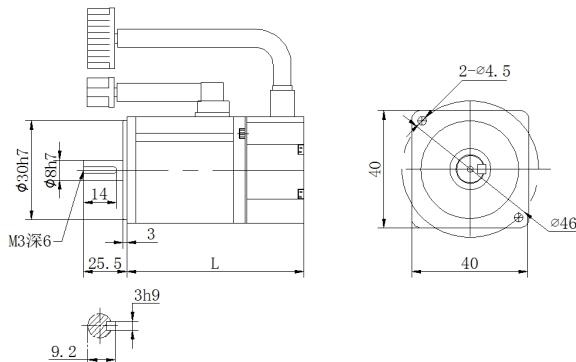


Motor model (17-bit single-turn encoder)	L(mm)	
	No brake	Electromagnetic brake
SV-ML04-0R1G-2-3A□	90.3	123

### 2.3.2 Outline and installation dimension for 60 bases (mm)

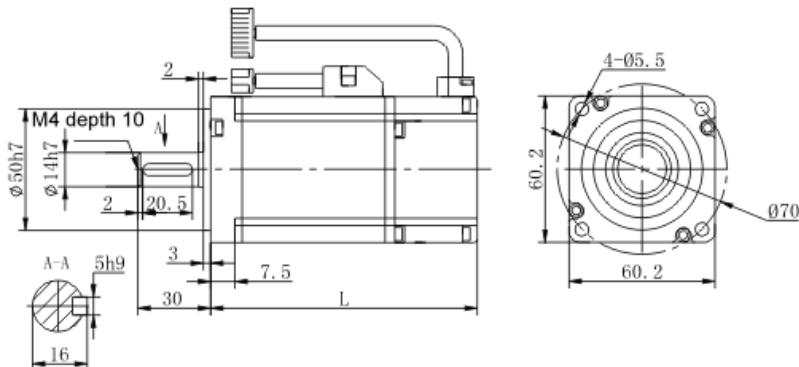


Motor model (2500-wire/multi-turn absolute value/rotary transformer)	L(mm)	
	No brake	Permanent magnet brake
SV-ML06-0R2G-2-□A□	116	164
SV-ML06-0R4G-2-□A□	141	189
SV-MH06-0R4G-2-□A□	147	191

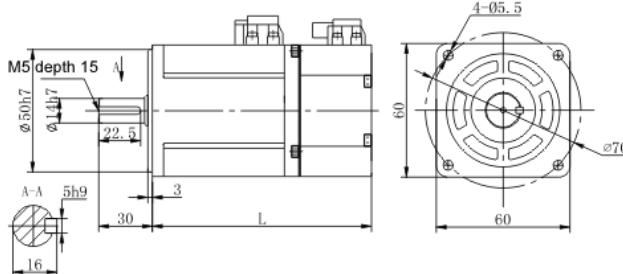


Motor model (17-bit single-turn encoder)	L(mm)	
	No brake	Electromagnetic brake
SV-ML06-0R2G-2-3A□	114	147
SV-ML06-0R4G-2-3A□	133	167

### 2.3.3 Outline and installation dimension for 80 bases (mm)

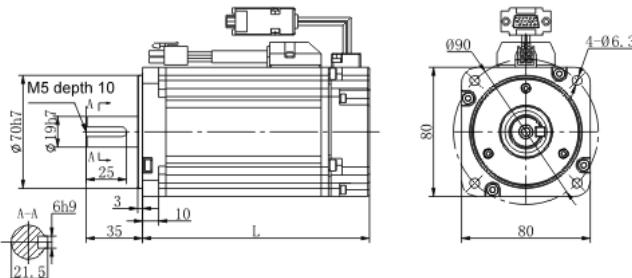


Motor model (2500-wire/multi-turn absolute value/rotary transformer)	L(mm)		
	No brake	Permanent magnet brake	Electromagnetic brake
SV-ML08-0R7G-2-□A□	140	186	186
SV-MH08-0R7G-2-□A□	151	205	205

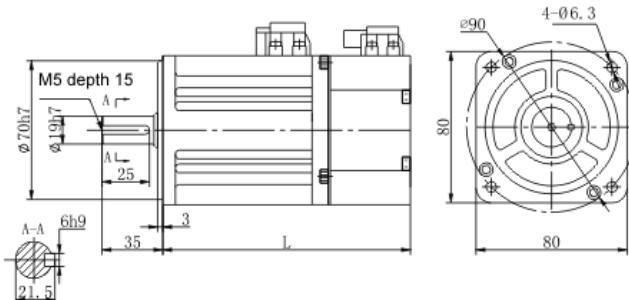


Motor model (17-bit single-turn encoder)	L(mm)	
	No brake	Electromagnetic brake
SV-ML08-0R7G-2-3A□	141	173

### 2.3.4 Outline and installation dimension for 110 bases (mm)

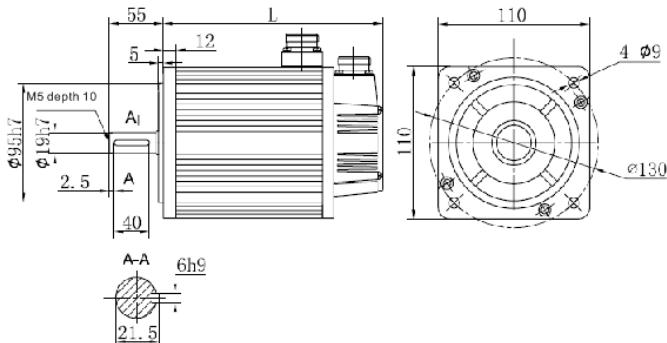


Motor model (2500-wire/multi-turn absolute value/rotary transformer)	L(mm)		
	No brake	Permanent magnet brake	Electromagnetic brake
SV-MM11-0R8E-2-□A□	189	245	263
SV-MM11-1R2G-2-□A□	204	260	278
SV-MM11-1R5G-2-□A□	219	275	293
SV-MM11-1R2E-2-□A□			
SV-MM11-1R8G-2-□A□			

### 2.3.5 Outline and installation dimension for 130 bases (mm)

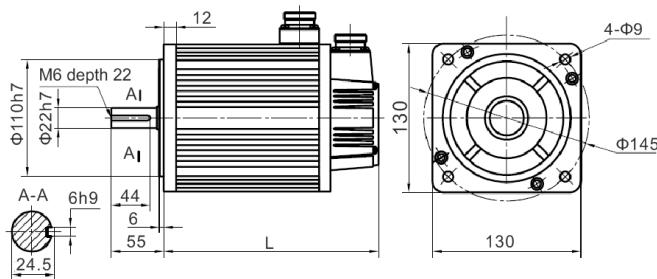


<b>Motor model (2500-wire/multi-turn absolute value/rotary transformer)</b>	<b>L(mm)</b>		
	<b>No brake</b>	<b>Permanent magnet brake</b>	<b>Electromagnetic brake</b>
SV-MM13-1R0E-□-□A□	143	185	185
SV-MM13-1R5E-□-□A□	159	201	201
SV-MM13-2R0E-□-□A□	175	217	217
SV-MM13-3R0E-□-□A□	207	249	249
SV-MH13-0R8B-□-□A□	167	209	209
SV-MH13-1R3B-□-□A□	202	244	244

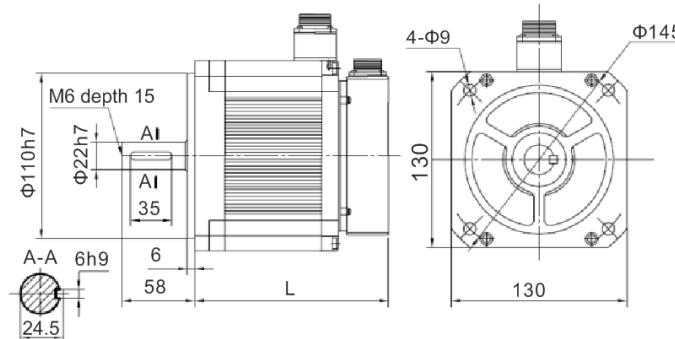


<b>Motor model</b> <b>(17-bit single-turn encoder)</b>	<b>L(mm)</b>	
	<b>No brake</b>	<b>Electromagnetic brake</b>
SV-MM13-1R0E-□-3A□	165	220
SV-MM13-1R5E-□-3A□	185	240
SV-MM13-2R0E-□-3A□	215	270
SV-MM13-3R0E-□-3A□	265	320

### 2.3.6 Outline and installation dimension for 180 bases (mm)

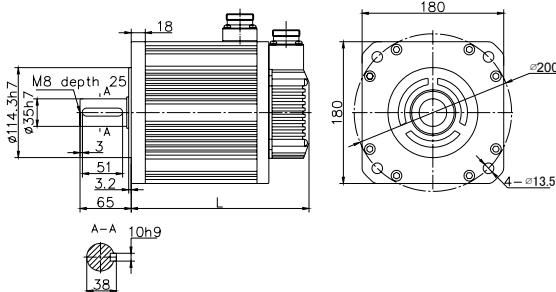


Motor model (2500-wire/multi-turn absolute value/rotary transformer)	L(mm)		
	No brake	Permanent magnet brake	Electromagnetic brake
SV-MM18-3R0B-□-□A□	232	314	304
SV-MM18-4R4B-□-□A□	262	344	334
SV-MM18-5R5B-4-□A□	292	382	364
SV-MM18-7R5B-4-□A□	346	436	418

**SV-SM18-7R5B shaft extension dimension (mm):**

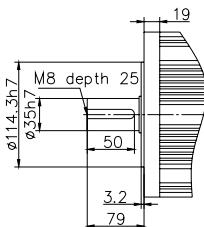


Motor model (2500-wire/multi-turn absolute value/rotary transformer)	L(mm)		
	No brake	Permanent magnet brake	Electromagnetic brake
SV-SM18-7R5B-4-□A□	375	465	455

### 2.3.7 Outline and installation dimension for 200 bases (mm)

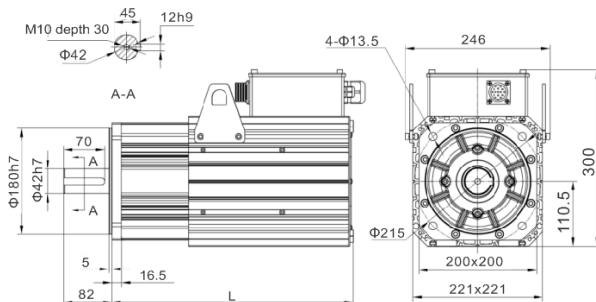

Motor model (2500-wire/multi-turn absolute value/rotary transformer)	L(mm)		
	No brake	Permanent magnet brake	Electromagnetic brake
SV-MH20-011B-4-□A□	411	547	547
SV-MH20-015B-4-□A□	446	582	582

### 2.3.8 Outline and installation dimension for 263 bases (mm)

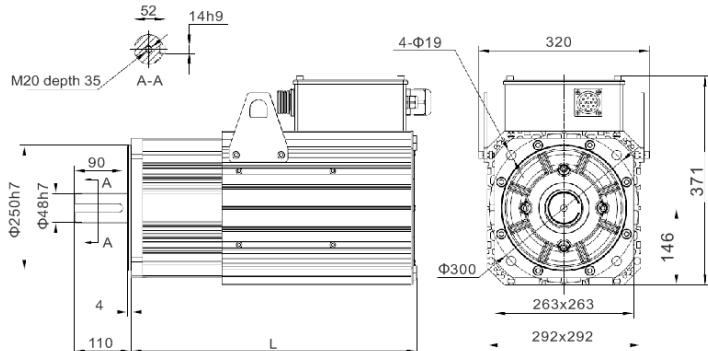

Motor model (2500-wire/multi-turn absolute value/rotary transformer)	L(mm)
	No brake
SV-SH26-022B-4-□A□	537

### 2.4 Motor installation

- ◆ Do not pull the motor leads or output shaft during fetching and moving the motor;
- ◆ Do not beat or hammer during the motor assembly to avoid damage to the encoder or shafts;
- ◆ Please wipe the slushing oil on the motor shaft before using.

### 2.5 Technical parameters of servo motor

#### 2.5.1 Motor specification (2500-wire/multi-turn absolute /rotary transformer)

Motor model (2500-wire/multi- turn absolute/ rotary transformer)	Rated power (kW)	Rate d curre nt (A)	Max. transie nt curre nt (A)	Rated torque (Nm)	Max. transient torque (Nm)	Rated speed (rpm)	Max. speed (rpm)	Rotation inertia standard/ with brake (kg·cm <sup>2</sup> )	Volt age (V)	Weight standard/ with brake (kg)
<b>ML series small inertia</b>										
SV-ML04-0R1G-2-□A□	0.1	0.6	1.2	0.32	0.64			0.051/0.055		0.47/0.67
SV-ML06-0R2G-2-□A□	0.2	1.2	3.6	0.64	1.91			0.175/0.22		1.16/1.66
SV-ML06-0R4G-2-□A□	0.4	2.8	8.4	1.27	3.9			0.29/0.33		1.6/2.1
SV-ML08-0R7G-2-□A□	0.75	4.5	13.5	2.39	7.2			1.28/1.51		3.0/3.5
<b>MM/SM series medium inertia</b>										
SV-MM11-0R8E-2-□A□	0.8	3.5	10.5	4	12			5.4/6.7		6/7.7
SV-MM11-1R2E-2-□A□	1.2	4.5	13.5	6	18			7.6/8.9		7.9/9.6
SV-MM11-1R2G-2-□A□	1.2	5	15	4	12			5.4/6.7		6/7.7
SV-MM11-1R5G-2-□A□	1.5	6	18	5	15			6.3/7.6		6.8/8.5

<b>Motor model (2500-wire/multi- turn absolute/ rotary transformer)</b>	<b>Rated power (kW)</b>	<b>Rate d curre nt (A)</b>	<b>Max. transie nt curre nt (A)</b>	<b>Rated torque (Nm)</b>	<b>Max. transient torque (Nm)</b>	<b>Rated speed (rpm)</b>	<b>Max. speed (rpm)</b>	<b>Rotation inertia standard/ with brake (kg·cm<sup>2</sup>)</b>	<b>Volt age (V)</b>	<b>Weight standard/ with brake (kg)</b>			
SV-MM11-1R8G-2-□A□	1.8	6	18	6	18	2000	3000	7.6/8.9	380	7.9/9.6			
SV-MM13-1R0E-2-□A□	1	4.8	14.4	4.78	14.3			6.4/8.3		5.8/7.5			
SV-MM13-1R5E-2-□A□	1.5	7.6	22.8	7.16	21.4			9.3/11.2		7.1/8.8			
SV-MM13-2R0E-2-□A□	2	9.5	28.5	9.55	28.6			12.2/14.1		8.4/10.1			
SV-MM13-3R0E-2-□A□	3	13.6	40.8	14.3	42			18/19.9		10.8/12.5			
SV-MM13-1R0E-4-□A□	1	2.8	8.4	4.78	14.3			6.4/8.3		5.8/7.5			
SV-MM13-1R5E-4-□A□	1.5	4.5	13.5	7.16	21.4			9.3/11.2		7.1/8.8			
SV-MM13-2R0E-4-□A□	2	5.5	16.5	9.55	28.6			12.2/14.1		8.4/10.1			
SV-MM13-3R0E-4-□A□	3	7.8	23.4	14.3	42			18/19.9		10.8/12.5			
SV-MM18-3R0B-2-□A□	3	12	29.7	19	47	1500	2000	70/74	220	20.5/25			
SV-MM18-4R4B-2-□A□	4.4	16	39.7	27	67			97/101		25.5/30			
SV-MM18-3R0B-4-□A□	3	7.5	18.7	19	47			70/74		20.5/25			
SV-MM18-4R4B-4-□A□	4.4	10	25	27	67			97/101		25.5/30			
SV-MM18-5R5B-4-□A□	5.5	12	24	35	70			86/127	380	30.5/35.7			
SV-MM18-7R5B-4-□A□	7.5	20	40	48	96			168/179		40/46.5			
SV-SM18-7R5B-4-□A□	7.5	24	62	48	120	1500	3000	190/201	380	46/52.5			
<b>MH/SH series large inertia</b>													
SV-MH06-0R4G-2-□A□	0.4	2.8	8.4	1.27	3.81	1500	2000	0.67/0.77	220	2.0/2.2			
SV-MH08-0R7G-2-□A□	0.75	4.5	13.5	2.39	7.2			2.5/2.73		3.3/3.8			
SV-MH13-0R8B-2-□A□	0.85	5.5	16.5	5.41	16.2			13.4/15.4		6.6/8.3			
SV-MH13-1R3B-2-□A□	1.3	8.2	24.6	8.34	25			23.4/25.4		9.3/11			
SV-MH13-0R8B-4-□A□	0.85	3.2	9.6	5.41	16.2			13.4/15.4	380	6.6/8.3			
SV-MH13-1R3B-4-□A□	1.3	4.8	14.4	8.34	25			23.4/25.4		9.3/11			
SV-MH20-011B-4-□A□	11	22.7	69	70	175	1500	2000	98.3/106.3	380	49/66			
SV-MH20-015B-4-□A□	15	42.5	107	95.5	240			119/127		56/73			
SV-SH26-022B-4-□A□	22	61	153	140	350			390/412		103/133			
<b>Insulation class</b>	Class F(155°C)												
<b>Protection class</b>	IP65												
<b>Application environment</b>	Temp.: -20°C ~ +40°C (non-frozen); RH: below 90%RH (No condensation)												

## 2.5.2 Motor specification (17-bit single-turn absolute value)

Motor model (17-bit single-turn absolute value)	Rated power (kW)	Rated curre nt (A)	Max. transi ent curre nt (A)	Rated torqu e (Nm)	Max. transi ent torque (Nm)	Rated speed (rpm)	Max. spee d (rpm)	Rotational inertia standard/wit h brake (kg·cm <sup>2</sup> )	Volta ge (V)	Weight standard/wit h brake (kg)			
<b>ML series small inertia</b>													
SV-ML04-0R1G-2-3A□	0.1	1.1	3.3	0.32	0.96	3000	6000	0.036/0.037	220	0.47/0.67			
SV-ML06-0R2G-2-3A□	0.2	1.2	3.6	0.64	1.92	3000	5000	0.176/0.179		1.01/1.4			
SV-ML06-0R4G-2-3A□	0.4	2.3	6.9	1.27	3.81			0.3/0.302		1.37/1.78			
SV-ML08-0R7G-2-3A□	0.75	4.3	12.9	2.5	7.5			1.015/1.018		2.5/3.4			
<b>MM series medium inertia</b>													
SV-MM13-1R0E-2-3A□	1	4.72	14.2	4.77	14.3	2000	2500	8.71/8.72	220	6.41/7.94			
SV-MM13-1R5E-2-3A□	1.5	6.87	20.6	7.16	21.5			12.08/12.1		7.9/9.4			
SV-MM13-2R0E-2-3A□	2	9.18	27.5	9.55	28.6			17.14/17.16		10.12/11.67			
SV-MM13-3R0E-2-3A□	3	12.95	38.85	14.3	42.9			25.58/25.59		13.8/15.4			
SV-MM13-1R0E-4-3A□	1	2.5	7.5	4.77	14.3			8.71/8.72	380	6.41/7.94			
SV-MM13-1R5E-4-3A□	1.5	4.1	12.3	7.16	21.5			12.08/12.1		7.9/9.4			
SV-MM13-2R0E-4-3A□	2	6.5	19.5	9.55	28.6			17.14/17.16		10.12/11.67			
SV-MM13-3R0E-4-3A□	3	9.6	28.8	14.3	42.9			25.58/25.59		13.8/15.4			
<b>Insulation class</b>	Class F(155°C)												
<b>Protection class</b>	IP65												
<b>Application environment</b>	Temp.: -20°C~+40°C (non-frozen); RH: below 90%RH (no condensation)												

## Chapter 3 Wiring instruction

### 3.1 System wiring

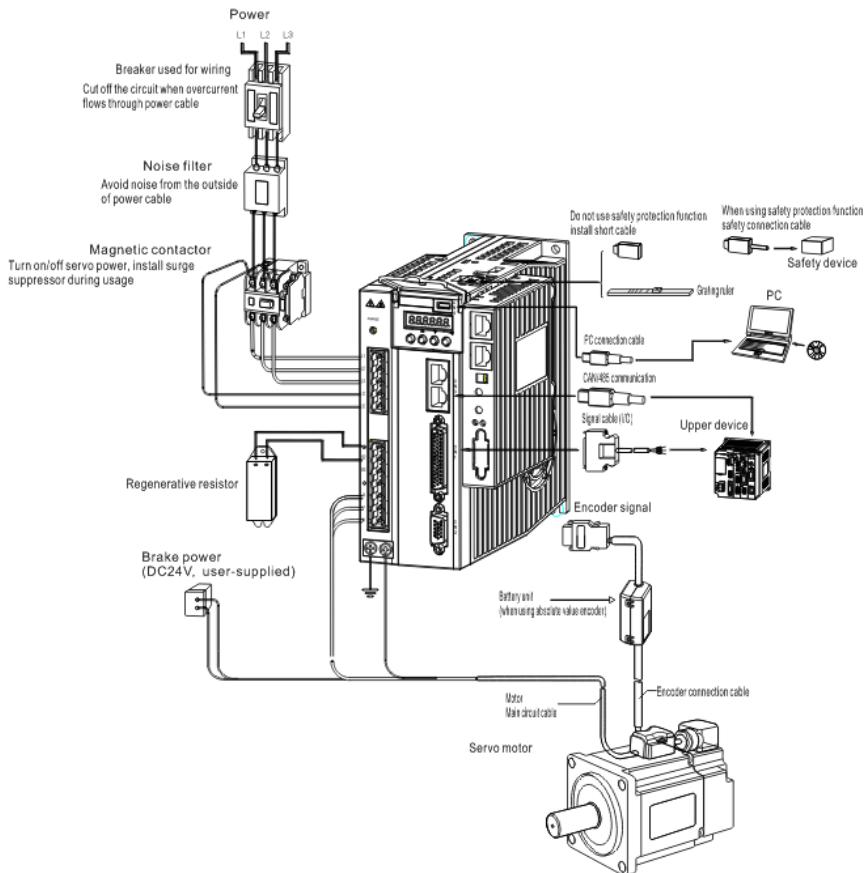


Figure 3-1 Wiring diagram between servo drive and external devices

- ◆ Check to ensure the input power supply indicated on the name plate is the same as that of the grid before connecting the input power supply of the drive.
- ◆ The electromagnetic contactor is used to switch on/off the power supply of the main circuit of the servo drive. Do not use it to start/stop the servo drive.
- ◆ In the figure 3-1, the built-in regenerative braking resistor is used by default. If an external regenerative braking resistor is used, please refer to relevant wiring diagram. The regenerative braking resistor must be mounted on non-flammable materials, such as metal.

### 3.1.1 Coil diameter

Drive model	Specification of main circuit cable
SV-DA200-0R1-2	0.75mm <sup>2</sup> /18AWG
SV-DA200-0R2-2	
SV-DA200-0R4-2	
SV-DA200-0R7-2	
SV-DA200-1R0-2	1.5mm <sup>2</sup> /15AWG
SV-DA200-1R5-2	
SV-DA200-2R0-2	
SV-DA200-3R0-2	4mm <sup>2</sup> /11AWG
SV-DA200-4R4-2	
SV-DA200-1R0-4	
SV-DA200-1R5-4	
SV-DA200-2R0-4	1.5mm <sup>2</sup> /15AWG
SV-DA200-3R0-4	
SV-DA200-4R4-4	
SV-DA200-5R5-4	4mm <sup>2</sup> /11AWG
SV-DA200-7R5-4	
SV-DA200-011-4	
SV-DA200-015-4	16mm <sup>2</sup> /5AWG
SV-DA200-022-4	

### 3.1.2 EMI filter


Drive model	EMI filter model
SV-DA200-0R1-2	FLT-P04006L-B
SV-DA200-0R2-2	
SV-DA200-0R4-2	
SV-DA200-0R7-2	
SV-DA200-1R0-4	FLT-P04016L-B
SV-DA200-1R5-4	
SV-DA200-2R0-2	
SV-DA200-3R0-2	
SV-DA200-2R0-4	FLT-P04032L-B
SV-DA200-3R0-4	
SV-DA200-2R0-2	
SV-DA200-4R4-4	
SV-DA200-4R4-4	FLT-P04045L-B
SV-DA200-5R5-4	
SV-DA200-7R5-4	
SV-DA200-011-4	

Drive model	EMI filter model
SV-DA200-015-4	FLT-P04065L-B
SV-DA200-022-4	FLT-P04100L-B


**Note:** The EMI filter models in the table are the models of our company and they are used for power input terminal.

## 3.2 Wiring of the main circuit

### 3.2.1 Wiring of single phase 220V

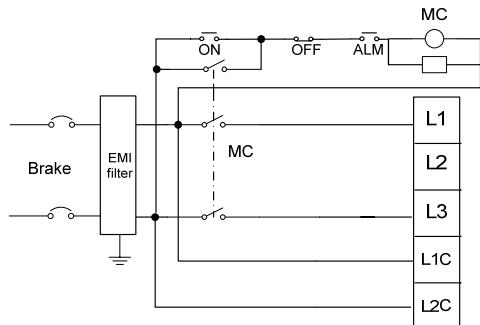


- The user is required to make this emergency stop protection circuit.
- Fit surge absorbing devices on both ends of the electromagnetic contactor winding.
- The input voltage range of main circuit and control circuit is AC 220V(-15%)-240V(+10%)
- Please connect terminal R with terminal T.
- Note: Please use 3-phase input power for the drive of 1.5kW and above.

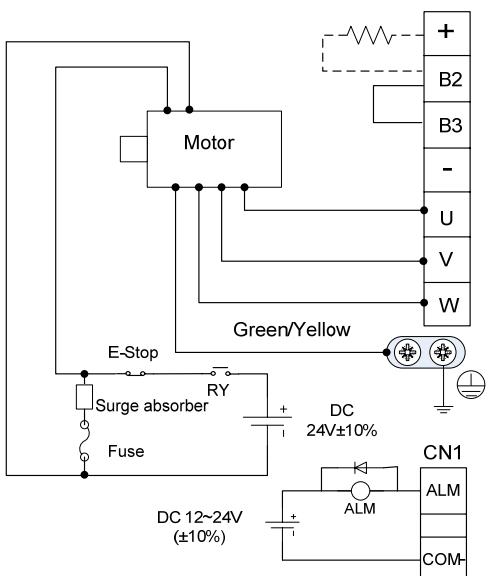


- Connect the output U, V and W of the drive to the servo motor correctly according to the phase sequence of the motor cable of the servo motor. Wrong phase sequence will cause drive fault.
- Do not disconnect the short circuit wire between B2 and B3 unless an external regenerative braking resistor is used.
- When an external regenerative braking resistor is used, disconnect the short circuit wire between B2 and B3, and connect it according to the dashed in the figure.
- Be sure to ground the servo drive to avoid accident of electrical shock.
- The electromagnetic brake Uses 24V power supply which should be provided by the user. Moreover, it must be isolated with the 12-24V power supply which is used for the control signal.
- Pay attention to the connection of the freewheeling diode. Reversed polarity may damage the drive.

### 3.2.2 Wiring of three phase 220V/400V

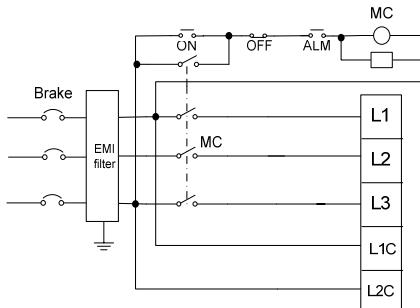


- The user is required to make this emergency stop protection circuit.
- Fit surge absorbing devices on both ends of the electromagnetic contactor winding.
- The input voltage range of 220V system: AC 220V(-15%)~240V(+10%)
- The input voltage range of 400V system: AC 380V(-15%)~440V(+10%)

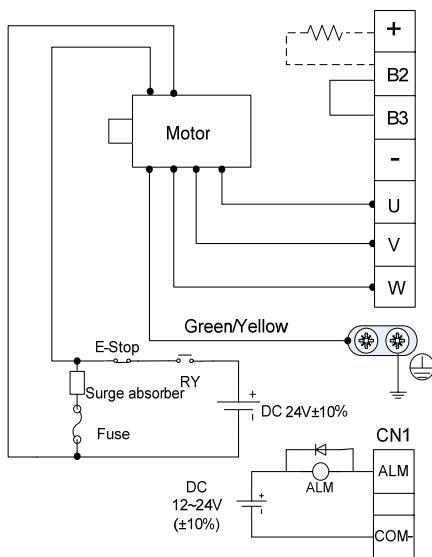


- Connect the output U, V and W of the drive to the servo motor correctly according to the phase sequence of the motor cable of the servo motor. Wrong phase sequence will cause drive fault.
- Do not disconnect the short circuit wire between B2 and B3 unless an external regenerative braking resistor is used.
- When an external regenerative braking resistor is used, disconnect the short circuit wire between B2 and B3, and connect it according to the dashed in the figure.
- Be sure to ground the servo drive to avoid accident of electrical shock.
- The electromagnetic brake Uses 24V power supply which should be provided by the user. Moreover, it must be isolated with the 12-24V power supply which is used for the control signal.
- Pay attention to the connection of the freewheeling diode. Reversed polarity may damage the drive.

### 3.3 Wiring of power cables for the motors


#### 3.3.1 2500-wire 40, 60, 80-base 200W~750W motor power cable

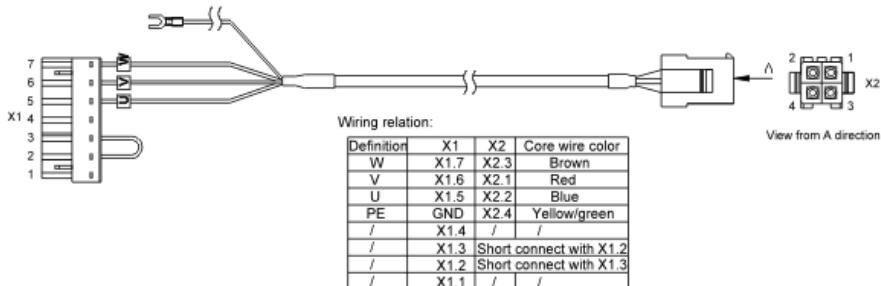


#### 3.3.2 17-bit or 23-bit 40, 60, 80-base 200W~750W motor power cable

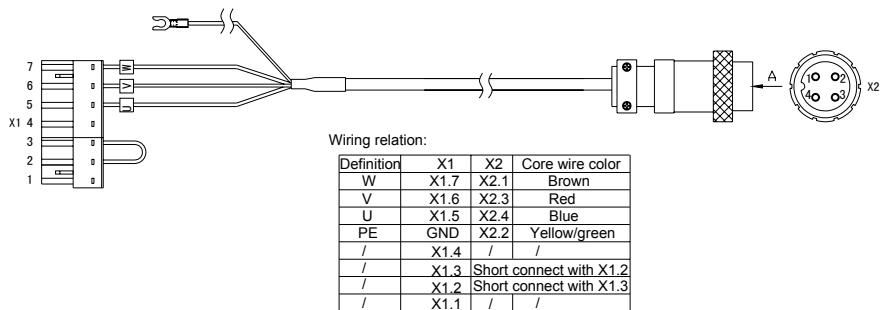

#### 3.3.3 110, 130-base 1kW~1.5kW and 2kW~3kW (380V) motor power cable (except for 130-base 17-bit single-turn with brake)

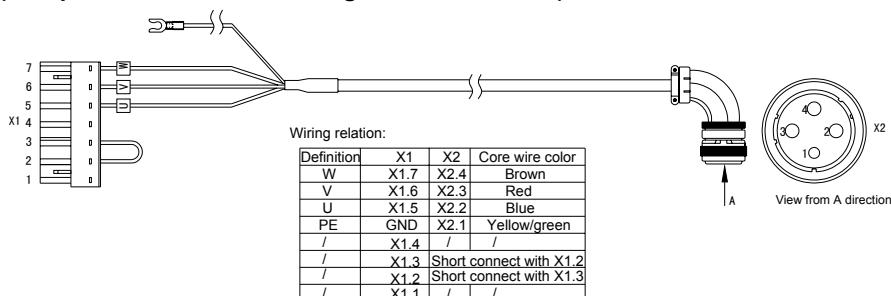


### 3.3.4 130, 180-base 2kW~4.4kW (220V) and 4.4kW~7.5kW (380V) motor power cable (except for 130-base 17-bit single-turn with brake)

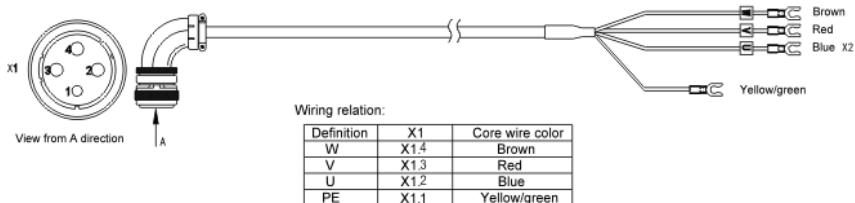



### 3.3.5 200-base 11kW~15kW (380V) motor power cable



### 3.3.6 130-base 17-bit single-turn with brake

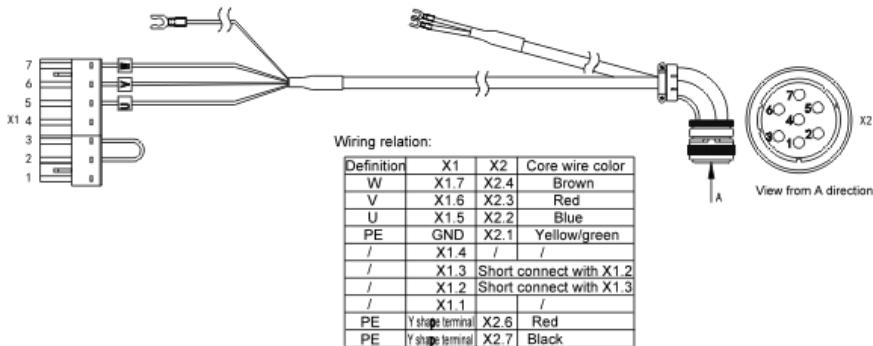


## 3.4 Control I/O-CN1 terminal layout

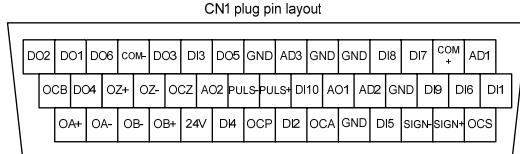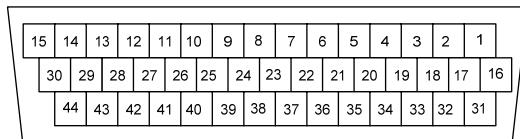

Remark: Refer to chapter 4 for terminal function and application.


### 3.5 Wiring of encoder-CN2 terminals

#### 3.5.1 CN2 terminals

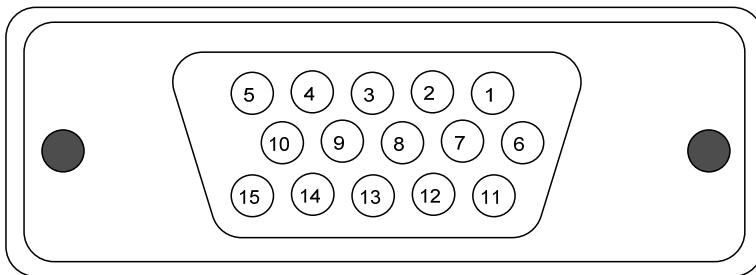


CN2 terminal function			
Pin	Name	Function	Remark
1	V+/SD+	Parallel encoder V+/Serial encoder data+	Different encoders use different cables
2	W+	Signal of parallel encoder W+	
3	A+	Signal of parallel encoder A+	
4	A-	Signal of parallel encoder A-	
5	5V	Encoder power supply	
6	U+	Signal of parallel encoder U+	
7	V- /SD-	Parallel encoder V-/Serial encoder data-	
8	W-	Signal of parallel encoder W-	
9	B-	Signal of parallel encoder B-	
10	B+	Signal of parallel encoder B+	
11	U-	Signal of parallel encoder U-	
12	GND	Power ground	
13	Z-	Signal of parallel encoder Z-	
14	Z+	Signal of parallel encoder Z+	
15	/	/	


### 3.5.2 2500-wire 40, 60, 80-base encoder cable

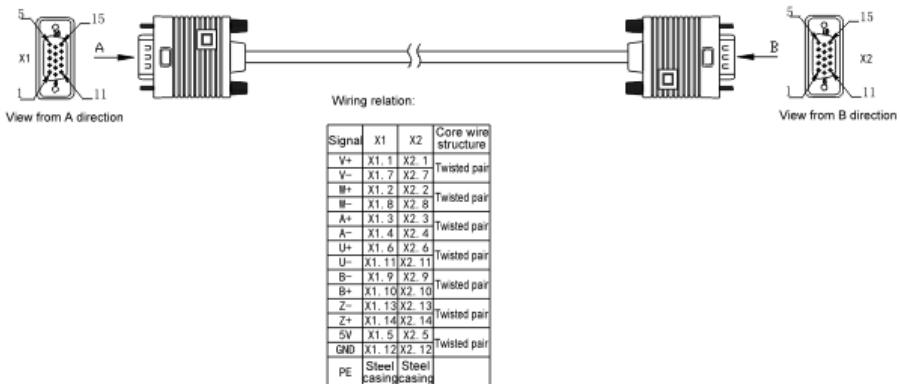


### 3.5.3 2500-wire 110, 130, 180, 200-base encoder cable

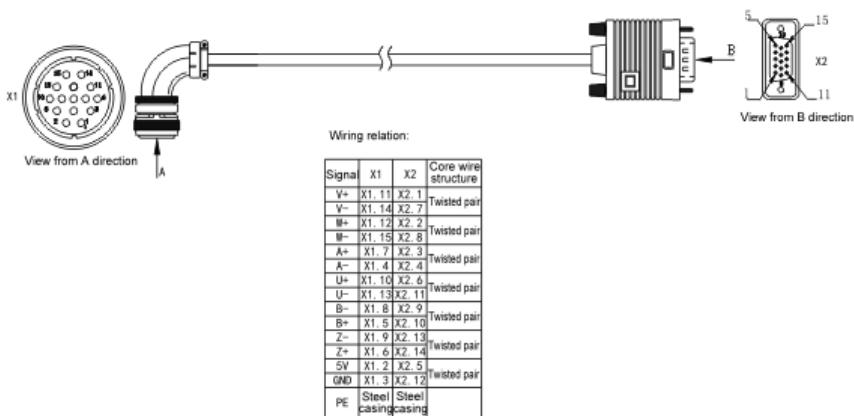


### 3.5.4 17-bit and 23-bit 40, 60, 80-base encoder cable

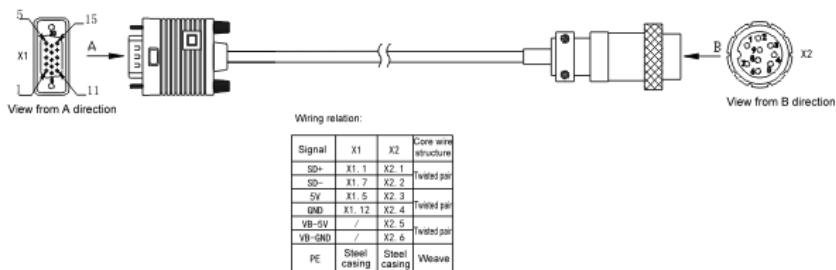


### 3.5.5 17-bit and 23-bit 110, 130, 180, 200-base encoder cable

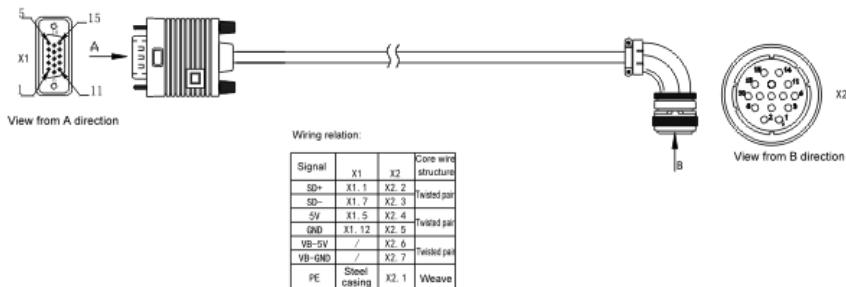

### 3.5.6 Rotary transformer encoder cable

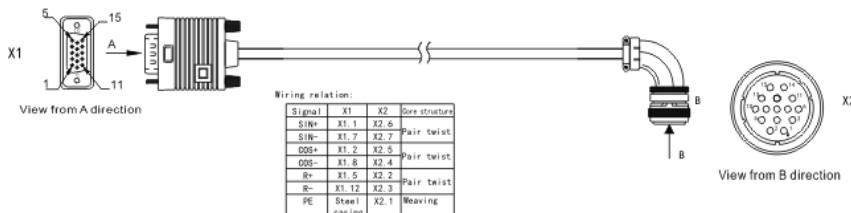


## 3.6 Wiring of 485/CAN-CN3 terminals

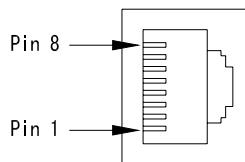

CN3 terminal function			
Pin	Name	Function	Remark
1	GND_CAN	CAN chip power GND	485 and CAN use the same interface and each signal has two pins for multiple networking.
2	GND_485	485 chip power GND	
3	/		
4	RS485+	RS485 data +	
5	RS485-	RS485 data -	
6	/		
7	CAN_L	CAN data -	
8	CAN_H	CAN data +	



### 3.7 Wiring of USB-CN4 terminals

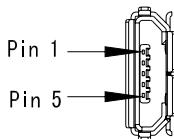


CN4 USB terminal function			
Pin	Name	Functions	Remark
1	VBUS	External power supply +5V	The standard cable for USB micro to USB-A conversion is available.
2	D-	Data -	
3	D+	Data +	
4	-	Not used	
5	GND	Signal ground	

### 3.8 Wiring of STO/Full closed loop-CN5 terminals

#### 3.8.1 Small power terminal interface and definition

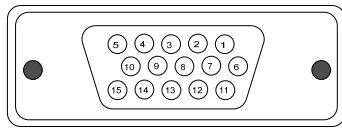

CN5 pin arrangement




CN5 signal arrangement

CN5 terminal function			
Pin	Name	Function	Remark
1	SF1+	Safety input 1+	Only receive the parallel signal of grating ruler
2	SF2+	Safety input 2+	
3	EXA+	Grating A+	
4	EXA-	Grating A-	
5	EX5V	Power supply +5V	
6	EDM+	Safety monitoring output +	
7	SF1-	Safety input 1-	


CN5 terminal function			
Pin	Name	Function	Remark
8	SF2-	Safety input 2-	
9	EXB-	Grating B-	
10	EXB+	Grating B+	
11	EDM-	Safety monitoring output -	
12	EX0V	Power ground, be connected with internal GND	
13	EXZ-	Grating Z-	
14	EXZ+	Grating Z+	
15	-	Not used	

### 3.8.2 Medium-power terminal interface and definition

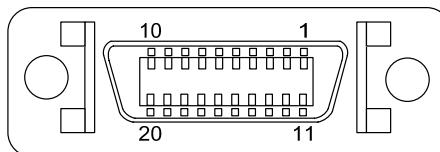


CN5 terminal function table			
Pin no.	Name	Function	Remark
1	EXA+	Grating A+	Connect with grating ruler or the 2 <sup>nd</sup> encoder
2	EXA-	Grating A-	
3	EXB+	Grating B+	
4	EXB-	Grating B-	
5	EXZ+	Grating Z+	
6	EXZ-	Grating Z-	
7, 9	EX5V	Power +5V	
8, 10	EX0V	Power GND, connected to internal GND	
11	HWBB1+	Safety input 1+	
12	HWBB1-	Safety input 1-	
13	EDM1+	Safety monitoring input+	
14	EDM1-	Safety monitoring input-	
15	HWBB2+	Safety input 2+	
16	HWBB2-	Safety input 2-	
17	OC_EXZ	Z phase open collector output	
18	OC_EXB	B phase open collector output	
19	OC_EXA	A phase open collector output	
20	-	Unused	

### 3.9 Wiring of PROFIBUS-DP terminals

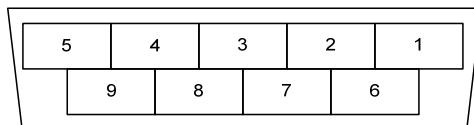

DP plug pin layout

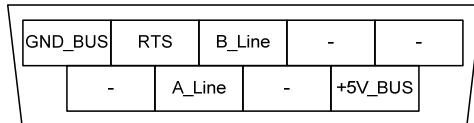


DP plug signal layout


DP terminal function				Remark
Pin	Name	Function		
1	-	Not used		DP standard terminals and pin connection
2	-	Not used		
3	B-Line	Data +		
4	RTS	Request sending		
5	GND_BUS	Isolation ground		
6	+5V_BUS	Isolation of 5V power supply		
7	-	Data -		
8	A-Line	Data -		
9	-	Not used		

# Chapter 4 Control mode applications


#### **4.1 Standard wiring of the position mode**

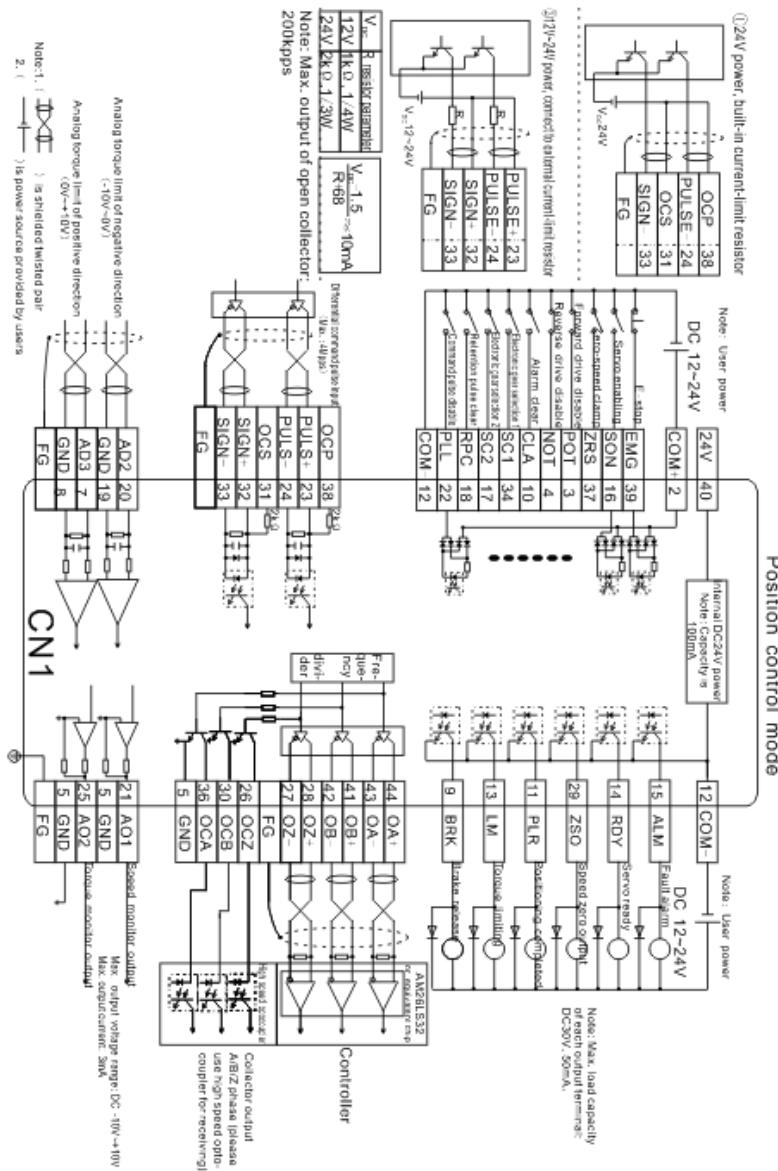

## 4.2 Standard wiring of the speed mode


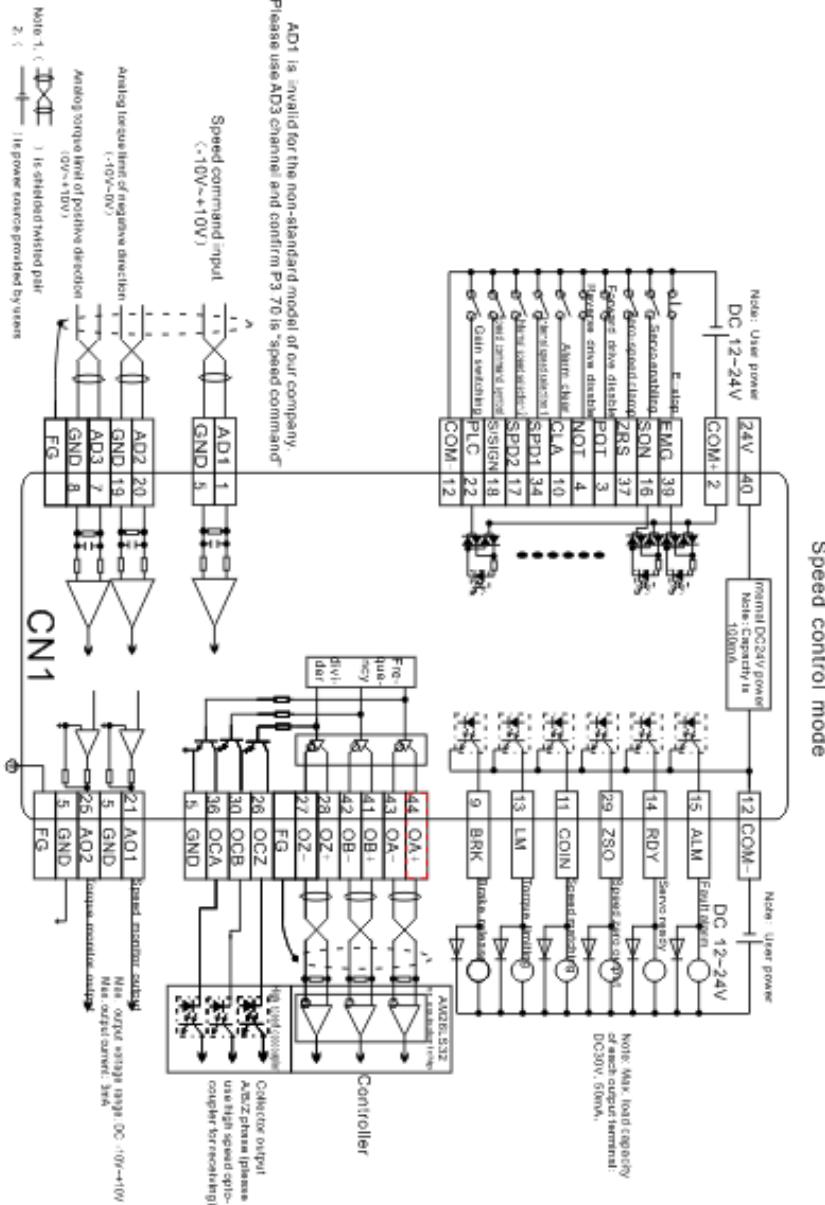


## 4.3 Standard wiring of the torque mode

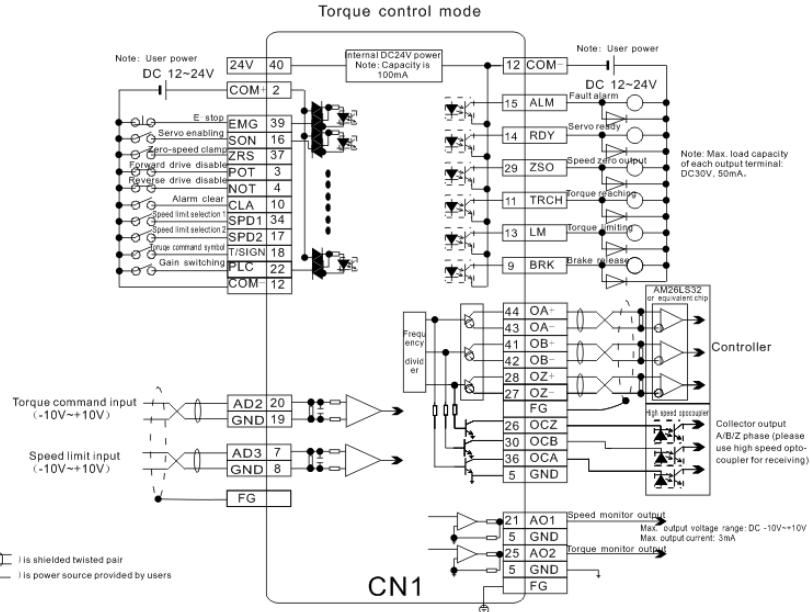

## 4.4 CN1 function instruction

### 4.4.1 Pins of CN1 terminal

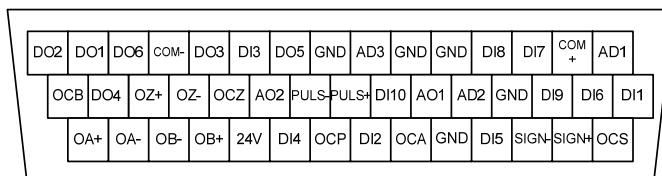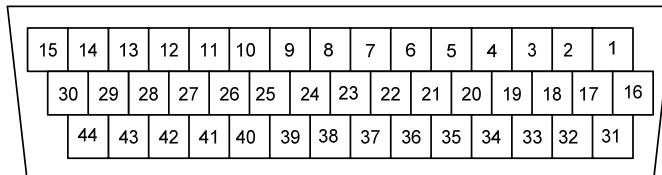

#### 4.4.2 Definition of CN1 terminals

Pin	Sign	Function	Pin	Sign	Function
1	AD1	Analog command speed	23	PULSE+	Differential command pulse +
2	COM+	Control signal power supply +	24	PULSE-	Differential command pulse -
3	DI7	Digital input 7	25	AO2	Digital monitoring output 2
4	DI8	Digital input 8	26	OCZ	Open collector output of Z phase
5	GND	Analog signal ground	27	OZ-	Differential output - of Z phase
6	GND	Analog signal ground	28	OZ+	Differential output + of Z phase
7	AD3	Analog input 3	29	DO4	Digital output 4
8	GND	Analog signal ground	30	OCB	Open collector output of B phase
9	DO5	Digital output 5	31	OCS	Open collector command direction
10	DI3	Digital input 3	32	SIGN+	Differential command direction +
11	DO3	Digital output 3	33	SIGN-	Differential command direction -
12	COM-	Control signal power supply -	34	DI5	Digital input 5
13	DO6	Digital output 6	35	GND	Analog signal ground
14	DO1	Digital output 1	36	OCA	Open collector output of A phase
15	DO2	Digital output 2	37	DI2	Digital input 2
16	DI1	Digital input 1	38	OCP	Open collector command pulse
17	DI6	Digital input 6	39	DI4	Digital input 4
18	DI9	Digital input 9	40	24V	Internal 24V power supply
19	GND	Analog signal ground	41	OB+	Differential output + of B phase
20	AD2	Analog command torque	42	OB-	Differential output - of B phase
21	AO1	Analog monitoring output 1	43	OA-	Differential output - of A phase
22	DI10	Digital input 10	44	OA+	Differential output + of A phase

#### 4.4.3 Power supply signal

Sign	Pin	Name	Function
24V	40	Internal 24V power supply	COM- is the ground terminal of the 24V power. Its capacity is 100mA. If the actual load is higher than this value, the user shall provide the power supply by themselves.
GND	5,6,8,19,35	Signal ground	The ground of the internal power supply (except the 24V power supply) of the servo drive, it is also the ground of the phase A/B/Z open-collector signal of the encoder and the analog output signal. It is isolated from COM-.
COM+	2	“+” pole of external DC power supply 12V~24V	<ul style="list-style-type: none"> <li>If the DC power supply is provided by the user, the positive pole of the DC power supply must be connected to this terminal.</li> <li>If the 24V power supply of the drive is used, the 24V</li> </ul>

Sign	Pin	Name	Function
			terminal must be connected to this terminal.
COM-	12	“-” pole of power supply	<ul style="list-style-type: none"> <li>Local 24V power ground</li> <li>“-” pole of external DC power supply 12V~24V</li> </ul>
FG	Enclosure	Enclosure ground	The enclosure of CN1 terminal is connected with the enclosure of the drive

#### 4.4.4 Configuration table for different digital modes

Pin	Sign	Name	Position/fully-closed loop mode			Speed mode			Torque mode		
			Default value	Key	Function	Default value	Key	Function	Default value	Key	Function
16	DI1	Digital input 1	0x03	SON	Servo enabling	0x03	SON	Servo enabling	0x03	SON	Servo enabling
37	DI2	Digital input 2	0x0D	ZRS	Zero speed clamp	0x0D	ZRS	Zero speed clamp	0x0D	ZRS	Zero speed clamp
10	DI3	Digital input 3	0x04	CLA	Alarm clearance	0x04	CLA	Alarm clearance	0x04	CLA	Alarm clearance
39	DI4	Digital input 4	0x16	EMG	Emergency stop	0x16	EMG	Emergency stop	0x16	EMG	Emergency stop
34	DI5	Digital input 5	0x19	SC1	Molecule 1 of electric gear ratio	0x0A	SPD1	Internal speed command selection 1	0x0A	SPD1	Internal speed command selection 1
17	DI6	Digital input 6	0x1A	SC2	Molecule 2 of electric gear ratio	0x0B	SPD2	Internal speed command selection 2	0x0B	SPD2	Internal speed command selection 2
3	DI7	Digital input 7	0x01	POT	Positive direction drive disabled	0x01	POT	Positive direction drive disabled	0x01	POT	Positive direction drive disabled
4	DI8	Digital input 8	0x02	NOT	Negative direction drive disabled	0x02	NOT	Negative direction drive disabled	0x02	NOT	Negative direction drive disabled
18	DI9	Digital input 9	0x07	RPC	Retention pulse clear	0x0E	S-SIGN	Speed command sign	0x0F	T-SIGN	Torque command sign
22	DI10	Digital input	0x08	PLL	Command pulse	0x06	PLC	Gain switching	0x06	PLC	Gain switching

Pin	Sign	Name	Position\fully-closed loop mode			Speed mode			Torque mode		
			Default value	Key	Function	Default value	Key	Function	Default value	Key	Function
		10			disabled						
14	DO1	Digital output 1	0x01	RDY	Servo output ready	0x01	RDY	Servo output ready	0x01	RDY	Servo output ready
15	DO2	Digital output 2	0x03	ALM	Fault output	0x03	ALM	Fault output	0x03	ALM	Fault output
11	DO3	Digital output 3	0x07	PLR	Positioning finished	0x09	COIN	Speed matching	0x10	TRCH	Torque arrival
29	DO4	Digital output 4	0x0D	ZSO	Speed zero output	0x0D	ZSO	Speed zero output	0x0D	ZSO	Speed zero output
9	DO5	Digital output 5	0x05	BRK	Signal clearing of external breaker	0x05	BRK	Signal clearing of external breaker	0x05	BRK	Signal clearing of external breaker
13	DO6	Digital output 6	0x0E	LM	Torque limiting	0x0E	LM	Torque limiting	0x0E	LM	Torque limiting

Pin	Sign	Name	MotionNet mode		
			Default value	Key	Function
16	DI1	Digital input 1	0x00	OFF	Invalid
37	DI2	Digital input 2	0x00	OFF	Invalid
10	DI3	Digital input 3	0x00	OFF	Invalid
39	DI4	Digital input 4	0x00	OFF	Invalid
34	DI5	Digital input 5	0x00	OFF	Invalid
17	DI6	Digital input 6	0x103	SON	Servo enabling
3	DI7	Digital input 7	0x107	RPC	Retention pulse clear
4	DI8	Digital input 8	0x104	CLA	Alarm clearance
18	DI9	Digital input 9	0x116	EMG	Emergency stop
22	DI10	Digital input 10	0x00	OFF	Invalid
14	DO1	Digital output 1	0x05	BRK	Signal clearing of external breaker
15	DO2	Digital output 2	0x01	RDY	Servo output ready
11	DO3	Digital output 3	0x03	ALM	Fault output
29	DO4	Digital output 4	0x07	PLR	Positioning finished

Pin	Sign	Name	MotionNet mode		
			Default value	Key	Function
9	DO5	Digital output 5	0x0D	ZSO	Speed zero output
13	DO6	Digital output 6	0x0E	LM	Torque limiting

#### 4.4.4.1 Function description of the digital input:

Signal name	Sign	Function No.	Available mode				
Positive direction drive disabled	POT	0x01	P	S	T	F	
Negative direction drive disabled	NOT	0x02	P	S	T	F	
This function input is the drive prohibition against positive/negative direction. The concrete action is related to the setting of P3.40 [travel limit switch setting]:							
When P3.40 is set to 0 and positive direction input is disabled, the motor stops at the current position, only negative direction command input can be accepted. If the negative direction drive input is disabled, the motor stops at the current position, only positive direction command input can be accepted.							
P3.40 is 1, the function is invalid;							
P3.40 is 2, and prohibition of positive/negative drive input is valid, the drive alarms.							

Signal name	Sign	Function number	Available mode				
Servo enabling	SON	0x03	P	S	T	F	
This function is the control signal of the servo enabling/disabling.							
When it is valid, the drive will provide power to the motor and when invalid, the drive will cut off the connection.							

Signal name	Sign	Function number	Available mode				
Alarm clear	CLA	0x04	P	S	T	F	
This function is the control signal of alarm clear when the drive alarms.							
Some alarms cannot be cleared by this function. Please refer to section 10.4 for detailed information.							

Signal name	Sign	Function number	Available mode				
Control mode switching	MCH	0x05	P	S	T		
This function is the control signal of mode switching when P0.03 is 3, 4 and 5.							
When the control mode is 0, 1, 2, 6 and 7 the function input is invalid.							

Signal name	Sign	Function number	Available mode				
Gain switching	PLC	0x06	P	S	T	F	
This function is the control signal of the 1 <sup>st</sup> and 2 <sup>nd</sup> gain switching.							

Signal name	Sign	Function number	Available mode		
Retention pulse clear	RPC	0x07	P		F
This function is the control signal of retention pulse clear and the detailed operation is relative to the setting of P3.45. P3.45=0 means electrical level clear. When the digital input is valid, retention pulse will be 0; P3.45=1 means rising edge clear. When the digital input triggers retention pulse clear from the edge of 0→1, only clear once.					

Signal name	Sign	Function number	Available mode		
Command pulse disabled	PLL	0x08	P		F
This function is the control signal of stopping receiving the command pulse and the detailed operation is relative to the setting of P3.44. P3.44 is 0, the function is valid and when P3.44 is 1, the function is invalid.					

Signal name	Sign	Function number	Available mode		
Torque limit switching	TLC	0x09	P	S	F
This function is the control signal of the 1 <sup>st</sup> and 2 <sup>nd</sup> torque limit switching. Please refer to the instruction of P0.09.					

Signal name	Sign	Function number	Available mode		
Internal speed command 1	SPD1	0x0A		S	T
Internal speed command 2	SPD2	0x0B		S	T
Internal speed command 3	SPD3	0x0C		S	

There are 1~8 signal selections for the internal speed command and 1~4 for the internal speed limit.

Control mode	P0.40 setting value	SPD3	SPD2	SPD1	Parameters and setting value
Speed mode	0	0	0	0	P0.46 internal speed 1
		0	0	1	P0.47 internal speed 2
		0	1	0	P0.48 internal speed 3
		0	1	1	P0.49 internal speed 4
		1	0	0	P0.50 internal speed 5
		1	0	1	P0.51 internal speed 6
		1	1	0	P0.52 internal speed 7
		1	1	1	P0.53 internal speed 8
Torque mode	0	0	0	0	P0.46 speed limit 1
		0	0	1	P0.47 speed limit 2
		0	1	0	P0.48 speed limit 3
		0	1	1	P0.49 speed limit 4

Signal name	Sign	Function number	Available mode		
Zero speed clamp	ZRS	0x0D		S	T
This function is the control signal of zero speed clamp and please refer to P0.58 for detailed information.					

Signal name	Sign	Function number	Available mode		
Speed command sign	S-SIGN	0x0E		S	
This function is the sign selection of speed command input in speed control mode. If P0.41 is 1, the input function is valid, and when the setting is 0, the function is invalid.					

Signal name	Sign	Function number	Available mode		
Torque command sign	T-SIGN	0x0F			T
This function is the sign selection of torque command input in torque control mode. If P0.61 is 1, the input function is valid, and when the setting is 0, the function is invalid.					

Signal name	Sign	Function number	Available mode		
Internal position command 1	POS1	0x10	P		
Internal position command 2	POS2	0x11	P		
Internal position command 3	POS3	0x12	P		
Internal position command 4	POS4	0x13	P		
Internal position command 5	POS5	0x20	P		
Internal position command 6	POS6	0x21	P		
Internal position command 7	POS7	0x22	P		

These functions are the selections of 0~127 in the point control mode. It has the same function with P5.20 and is valid when P0.20 is 2.

The combination of 7 digital inputs is used to select the different target position of PtP0.00~PtP2.55 and the corresponding target speed, ACC/DEC time and the delay time of P5.21~P5.68.

Control mode	POS7	POS6	POS5	POS4	POS3	POS2	POS1	Parameters and setting value
Position mode	0	0	0	0	0	0	0	PtP0.01[position of 00 step]
	0	0	0	0	0	0	1	PtP0.03[position of 01 step]
	0	0	0	0	0	1	0	PtP0.05[position of 02 step]
	0	0		0	0	1	1	PtP0.07[position of 03 step]
	0	0	0	0	1	0	0	PtP0.09[position of 04 step]
	0	0	0	0	1	0	1	PtP0.11[position of 05 step]
	0	0	0	0	1	1	0	PtP0.13[position of 06 step]
	0	0	0	0	1	1	1	PtP0.15[position of 07 step]
	0	0	0	1	0	0	0	PtP0.17[position of 08 step]

	0	0	0	1	0	0	1	PtP0.19[position of 09 step]
	0	0	0	1	0	1	0	PtP0.21[position of 10 step]
	0	0		1	0	1	1	PtP0.23[position of 11 step]
	0	0	0	1	1	0	0	PtP0.25[position of 12 step]
	x	x	x	x	x	x	x	xxx
	1	1	1	1	1	1	0	PtP2.53[position of 126 step]
	1	1	1	1	1	1	1	PtP2.55[position of 127 step]

Signal name	Sign	Function number	Available mode			
External fault	EXT	0x14	P	S	T	F

This function is the signal of external input fault alarm.  
If the digital input is valid, the drive will report Er10-3 and stop.

Signal name	Sign	Function number	Available mode			
Inertia ratio switching	JC	0x15	P	S	T	F

This function is the control signal of inertia ratio switching between 1<sup>st</sup> inertia ratio and 2<sup>nd</sup> inertia ratio.  
When the digital input is valid, the internal software uses P1.02; and when invalid, use P1.01.

Signal name	Sign	Function number	Available mode			
E-stop	EMG	0x16	P	S	T	F

This function is the control signal of E-stop.  
If P3.41 is set to 0 and when the digital input is valid, the drive will stop to report Er10-4.

Signal name	Sign	Function number	Available mode			
HOME switch input	HOME	0x17	P			

This function is the input signal of HOME SWITCH.  
When the drive carries out HOME action, in some HOME mode, if the digital input is detected to be valid, HOME is finished. Refer to P5.10 for information..

Signal name	Sign	Function number	Available mode			
HOME trigger	HTRG	0x18	P			

This function is the trigger control signal of HOME function, and the rising edge is valid.  
In the bus control mode, the digital input function has the same function with P5.15.

Signal name	Sign	Function number	Available mode			
Molecule 1 of electric gear ratio	SC1	0x19	P			
Molecule 2 of electric gear ratio	SC2	0x1A	P			

The function is the selection signal of the electric gear ratio, up to 4 groups of electric gears can be switched.

Signal name	Sign	Function number	Available mode
Before using the function, it is necessary to set P0.22 to 0 and then set different electric gear ratio (P0.25~P0.29).			

**Note:** If the electric gear is switched by digital value, it is necessary to set P4.10 to 0.

SC1	SC2	Electric gear ratio	
		Molecule	Denominator
0	0	P0.25	P0.26
0	1	P0.27	P0.26
1	0	P0.28	P0.26
1	1	P0.29	P0.26

Signal name	Sign	Function number	Available mode			
Point control trigger	TRIG	0x1B	P			

In the point control mode, it needs to be used with internal position command 1~4.  
During using, select the target step by the internal position command selection 1~4, and then trigger the switching action selected by target step via the rising edging of this digital value.

Signal name	Sign	Function number	Available mode			
Vibration control switching input	VS-SEL	0x1C	P			F

The function is the control signal of 1<sup>st</sup> and 2<sup>nd</sup> vibration control frequency.  
When the digital input is valid, the internal software uses P1.38; when invalid, use P1.36.

Signal name	Sign	Function number	Available mode			
Fast stop	Q-STOP	0x1D	P	S	T	F

This function is the control signal of the fast stop of external control.  
When the digital input is valid, the motor decelerates to 0 from current speed at the curve set by P0.69; when the input is invalid, the motor will restore to the operation state before stop.

Signal name	Sign	Function number	Available mode			
Point control stop	PTP-ST	0x1E	P			

This function is the control signal of stopping bit operation in the point control mode. In the bus control mode, it has the same function with P5.20 when it is 100.

Signal name	Sign	Function number	Available mode			
Zero clearing of absolute position	PCLR	0x1F	P			

This function is used to clear the multi-turn absolute encoder.  
When this digital input is valid, the multi-turn data of the encoder will be cleared while the single-turn data remains unchanged, however, the absolute position feedback of the system will be cleared.

Signal name	Sign	Function number	Available mode		
Forward jogging	FJOG	0x23	P		

This function is forward jogging. When this digital input is valid, forward jogging operation will be applied.

Signal name	Sign	Function number	Available mode		
Reverse jogging	RJOG	0x24	P		

This function is reverse jogging. When this value is valid, reverse jogging operation will be applied.

Signal name	Sign	Function number	Available mode		
High/low speed switching of jogging	JOGC	0x25	P		

This function is high/low speed switching of jogging. When this digital input is valid, high speed jogging will be applied.

Signal name	Sign	Function number	Available mode		
Position lock or positioning 1	PCB1	0x26	P		

When this digital input is valid, this function is position lock or positioning 1.

Signal name	Sign	Function number	Available mode		
Position lock or positioning 2	PCB2	0x27	P		

When this digital input is valid, this function is position lock or positioning 2.

Signal name	Sign	Function number	Available mode		
Position lock or positioning 3	PCB3	0x28	P		

When this digital input is valid, this function is position lock or positioning 3.

Signal name	Sign	Function number	Available mode		
Position lock or positioning 4	PCB4	0x29	P		

When this digital input is valid, this function is position lock or positioning 4.

Signal name	Sign	Function number	Available mode		
Position lock or positioning 5	PCB5	0x2A	P		

When this digital input is valid, this function is position lock or positioning 5.

Signal name	Sign	Function number	Available mode		
Position lock or positioning switching	PCBC	0x2B	P		

When this digital input is valid, this function is digital input or positioning function switching.

Signal name	Sign	Function number	Available mode		
JOG function of the terminal	DJOG	0x2C	P		

When this digital input is valid, JOG function of the terminal is valid.

Signal name	Sign	Function number	Available mode				
Gantry synchronization input clear	GIN	0x2D	P				
When this digital input is valid, gantry synchronous is removed.							

Signal name	Sign	Function number	Available mode				
Master gantry synchronization alignment sensor	GSM	0x2E	P				
Master gantry synchronization alignment sensor							

Signal name	Sign	Function number	Available mode				
Slave gantry synchronization alignment sensor	GSS	0x2F	P				
Slave gantry synchronization alignment sensor							

Signal name	Sign	Function number	Available mode				
Dynamic braking relay feedback	DBS	0x30	P	S	T	F	
When this digital input is valid, the dynamic braking relay will be closed.							

Signal name	Sign	Function number	Available mode				
Manual and automatic switching of turret	DAT	0x31	P				
When this digital input is valid, the turret is manual mode.							

Signal name	Sign	Function number	Available mode				
Forward jogging of turret	DFJ	0x32	P				
When this digital input is valid, the turret is forward jogging.							

Signal name	Sign	Function number	Available mode				
Reverse jogging of turret	DRJ	0x33	P				
When this digital input is valid, the turret is reverse jogging.							

#### 4.4.4.2 Digital output instruction:

Signal name	Sign	Function number	Available mode				
Servo output ready	RDY	0x01	P	S	T	F	
This function is the state signal of the drive. When valid, the drive can be enabled and provide power to the motor and when invalid, the drive gives no response to the command.							

Signal name	Sign	Function number	Available mode				
Servo operation output	RUN	0x02	P	S	T	F	
This function is the state signal of the enabled drive.							
When valid, the motor is power on.							

Signal name	Sign	Function number	Available mode			
Fault output	ALM	0x03	P	S	T	F

The function is the state signal when the drive displays the fault alarm.

When it is valid, the drive has fault.

Signal name	Sign	Function number	Available mode			
Signal clearing of external brake	BRK	0x05	P	S	T	F

The function is the control signal clearance of output motor brake.

When it is valid, the control brake is cleared and then it receives the motor control command; when invalid, the control brake will be disconnected.

Signal name	Sign	Function number	Available mode				
Position command or not	PCMD	0x06	P				F

The function is the state signal of whether there is position command or not.

When it is valid, the motor is controlled by the non-zero position command.

Signal name	Sign	Function number	Available mode				
Positioning finished	PLR	0x07	P				F

The function is the state signal of positioning finished.

When it is valid, the positioning is finished.

Signal name	Sign	Function number	Available mode				
Control mode switching	MCHS	0x08	P	S	T		

This function is the state signal during control mode switching in output compound control mode. When it is valid, control mode 1 is switched to mode 2; if the function output is invalid, the control mode 2 is switched back to mode 1.

Signal name	Sign	Function number	Available mode				
Speed matching	COIN	0x09	P	S	T		F

The function is the state signal of speed matching.

When it is valid, the deviation between current speed feedback and speed command is in the range of P3.53.

Signal name	Sign	Function number	Available mode				
Speed reaching	SR	0x0A	P	S	T		F

The function is the state signal of output speed reaching.

When it is valid, the current speed feedback is in the setting value of P3.54.

Signal name	Sign	Function number	Available mode				
Speed limiting	SL	0x0B			T		
The function is the state signal of speed limiting.							
When it is valid, in the torque mode, if the current torque does not reach the torque command, the speed feedback is in the speed limiting.							

Signal name	Sign	Function number	Available mode				
Speed command or not	SCMD	0x0C	P	S	T	F	
The function is the state signal of whether there is speed command or not.							
When it is valid, non-zero speed command controls the motors.							

Signal name	Sign	Function number	Available mode				
Speed zero output	ZSO	0x0D	P	S	T	F	
The function is the state signal of whether the current speed feedback is 0.							

Signal name	Sign	Function number	Available mode				
Torque limiting	LM	0x0E	P	S	T	F	
The function is the state signal of torque limiting.							
When it is valid, it means current torque output has reached the max. torque limit setting.							

Signal name	Sign	Function number	Available mode				
Zeroing finished	HEND	0x0F	P				
The function is the state signal of zero finished.							
When it is valid, the drive has finished returning to zero and found zero position successfully.							

Signal name	Sign	Function number	Available mode				
Torque reaching	TRCH	0x10			T		
The function is the state signal of output torque reaching.							
When it is valid, the deviation between current torque output and torque command will be in the setting range of P3.59; there is 5% detection retention.							

Signal name	Sign	Function number	Available mode				
Position lock or positioning completed 1	PCO1	0x11	P				
This function is output position lock or positioning completed 1 signal.							

Signal name	Sign	Function number	Available mode				
Position lock or positioning completed 2	PCO2	0x12	P				
This function is output position lock or positioning completed 2 signal.							

Signal name	Sign	Function number	Available mode			
Position lock or positioning completed 3	PCO3	0x13	P			

This function is output position lock or positioning completed 3 signal.				
--	--	--	--	--

Signal name	Sign	Function number	Available mode	
Position lock or positioning completed 4	PCO4	0x14	P	
This function is output position lock or positioning completed 4 signal.				

Signal name	Sign	Function number	Available mode	
Position lock or positioning completed 5	PCO5	0x15	P	
This function is output position lock or positioning completed 5 signal.				
Signal name	Sign	Function number	Available mode	
Bit arrival	PTPF	0x16	P	
This function is output bit arrival signal.				

Signal name	Sign	Function number	Available mode	
Bit output 1	PTPO1	0x17	P	
This function is output bit output 1 signal.				

Signal name	Sign	Function number	Available mode	
Bit output 2	PTPO2	0x18	P	
This function is output bit output 2 signal.				

Signal name	Sign	Function number	Available mode	
Bit output 3	PTPO3	0x19	P	
This function is output bit output 3 signal.				

Signal name	Sign	Function number	Available mode	
Bit output 4	PTPO4	0x1A	P	
This function is output bit output 4 signal.				

Signal name	Sign	Function number	Available mode	
Bit output 5	PTPO5	0x1B	P	
This function is output bit output 5 signal.				

Signal name	Sign	Function number	Available mode	
Bit output 6	PTPO6	0x1C	P	
This function is output bit output 6 signal.				

Signal name	Sign	Function number	Available mode	
Bit output 7	PTPO7	0x1D	P	
This function is output bit output 7 signal.				

Signal name	Sign	Function number	Available mode	
Gantry synchronization output clear	GSC	0x1E	P	

This function is to output the clearance signal of gantry synchronization
---

Signal name	Sign	Function number	Available mode				
Dynamic brake relay control	DBRC	0x1F	P	V	T	F	
This function is output dynamic brake relay control signal.							

#### 4.4.5 Pulse input signals and functions

Sign	Pin	Name	Function
OCP	38	Position command pulse input 1	● In the position control mode, act as the position command input terminal
PULS+	23		● In other control mode, the terminal is invalid
PULS-	24	Position command pulse input 2	● Allowed Max. input pulse frequency: 4MHz in differential motion mode, 200kHz in open-collector mode.
OCS	31		
SIGN+	32		
SIGN-	33		

#### 4.4.6 Analog input signals and functions

Sign	Pin	Name	Function
AD1	1	Analog input 1	● Precision of AD1 is 16-bit and precision of AD2,AD3 is 12-bit
AD2	20	Analog input 2	● If standard model (there is “-S” in the drive nameplate) is used as the speed control, AD1 channel is invalid, please take AD3 as the speed command input terminal and modify P3.70 to “speed command”
AD3	7	Analog input 3	
GND	5,6,8, 19,35	Signal ground	● External analog input terminals. The input impedance is 10kΩ. The input voltage range is -10V~+10V. A voltage exceeding ±11V may damage the drive ● The range and offset setting and function definition can be set

#### 4.4.7 Encoder output signals and functions

Sign	Pin	Name	Function
OA+	44	A phase output	● Output the frequency divided encoder signal, comply with the standard of TIA/EIA-422-B
OA-	43		● The output phase A pulse and phase B pulse is still orthogonal. When it rotates forward, phase B leads phase A by 90°. When it rotates in reverse, phase A leads phase B by 90°.
OB+	41	B phase output	● Frequency division and frequency multiplication with any integer and decimal fraction is allowable
OB-	42		● The output signals have no isolation.
OZ+	28	Z phase output	● Output the open-collector signal of phase Z, without isolation
OZ-	27		● Output the open-collector signal of phase Z, without isolation
OCA	36	A phase output	● Output the open-collector signal of phase A, without isolation
OCB	30	B phase output	● Output the open-collector signal of phase B, without isolation
OCZ	26	Z phase output	● Output the open-collector signal of phase Z, without isolation


#### 4.4.8 Analog output signals and functions

Sign	Pin	Name	Function
AO1	21	Analog monitoring output 1	Its output function definition can be set, and the range and offset settings can be set
AO2	25	Analog monitoring output 2	Its output function definition can be set, and the range and offset settings can be set


### 4.5 CN1 wiring instruction

#### 4.5.1 Wiring of digital input circuit

Connection diagram when the power supply is self-provided by user:

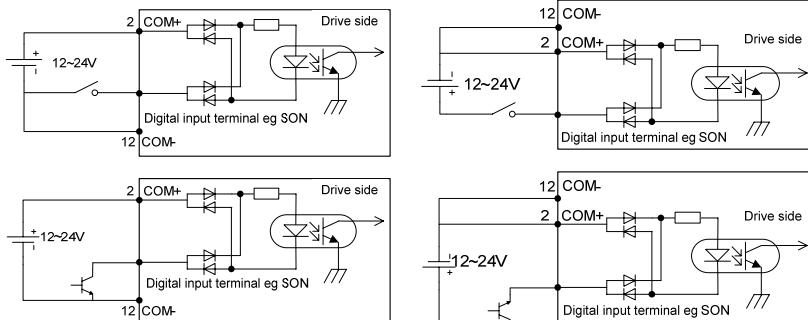

Connection diagram when the local power supply is used:

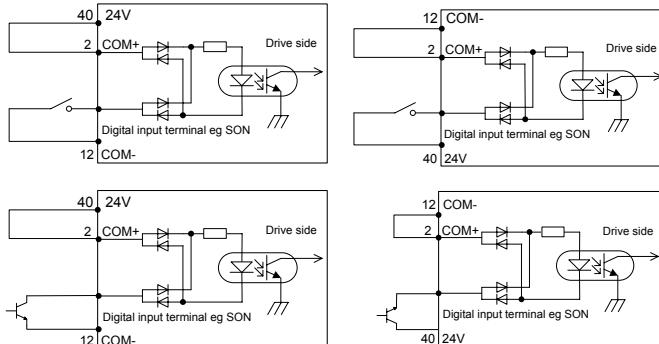


The digital input circuit can be connected with mechanical switch connection and the open-collector connection of audion shown in the figure.

- ◆ The user can use either the 24V power supply carried by the servo drive (it only can provide 100mA current) or 12V~24V power supply provided by the user.

#### 4.5.2 Wiring of the pulse input circuit


Connect method 1: the differential connection

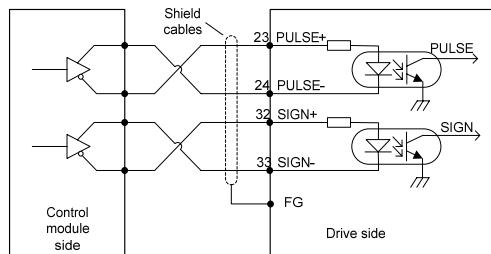


- ◆ The maximum frequency of input pulse is 4MHz and the input signal voltage is ±5V;
- ◆ With the best anti-noise capability, this signal transmit method is recommended as the preferred.

Connection method 2: the open collector circuit 1

The control module is NPN (common cathode)

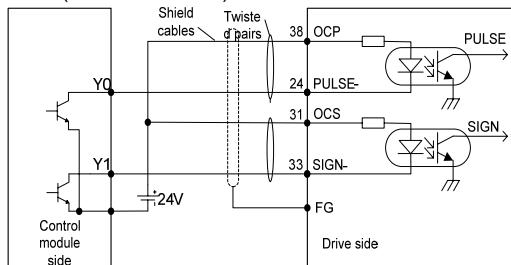


The control module is PNP module (common anode):

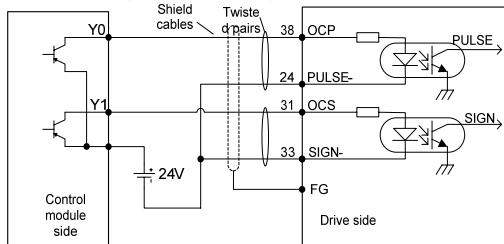


- ◆ The max. input pulse frequency is 200kHz; apply the local 24V power supply (it only can provide 100mA current) or the 24V power supply provided by the user without the current-limiting resistor. Generally, most of Japanese PLC (such as Mitsubishi, Panasonics and OMRON) is NPN module, while most of European PLC (such as Siemens) is PNP module.

Connection method 3: the open collector circuit 2

The control module is NPN (common cathode):

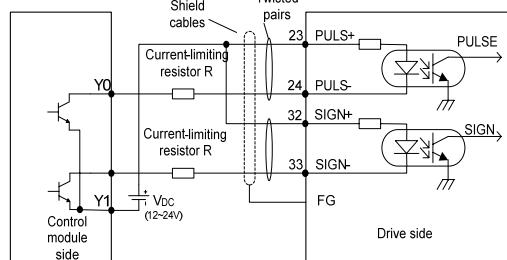

The control module is PNP (common anode):

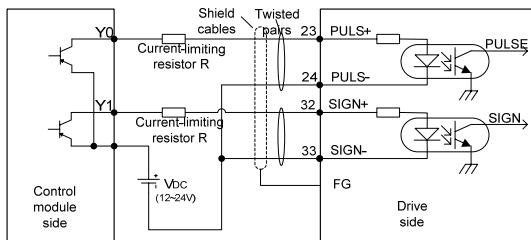


◆ The Max. input pulse frequency is 200kHz; apply the local 24V power supply (it only can provide 100mA current) or the 12~24V power supply provided by the user with the current-limiting resistor (the resistance is selected as the below table). Generally, most of Japanese PLC (such as Mitsubishi, Panasonics and OMRON) is PNP module, while most of European PLC (such as Siemens) is NPN module.

V <sub>DC</sub>	Resistor parameters
12V	1KΩ, 1/4W
24V	2KΩ, 1/3W

$$V_{DC} = 1.5 \quad R + 68 \quad \approx 10 \text{ mA}$$

For all the 3 methods, shielded twisted-pair must be used and the length must be less than 3m.

#### 4.5.3 Wiring of the analog input circuit

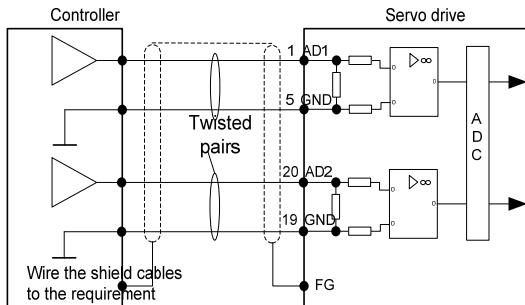


◆ There are three analog input circuits, AD1, AD2 and AD3, precision of AD1 is 16-bit (optional for standard models), precision of AD2 and AD3 is 12-bit (standard). The input impedance is 10kΩ. The

input voltage range is -10V~+10V. If the voltage is higher than  $\pm 11V$ , the circuits may be damaged.


- ◆ If the non-standard model is used as the speed control, AD1 channel is invalid, please take AD3 as the speed command input terminal and modify P3.70 to "speed command".

#### 4.5.4 Wiring of digital output circuit

Connection diagram when the power supply is provided by user:

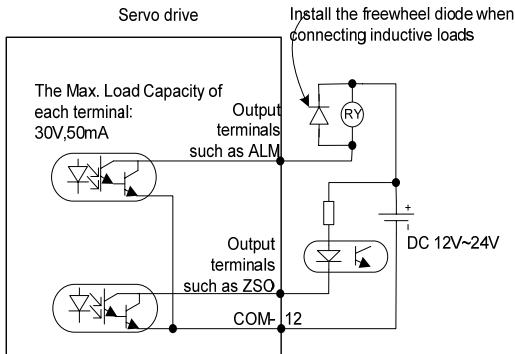


Connection method when the local power supply is used:

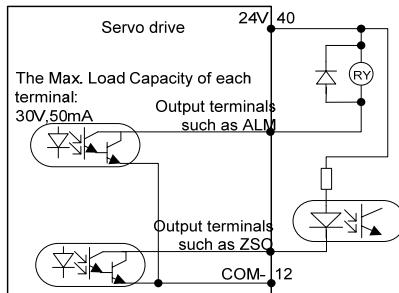


- ◆ There are 6 digital output circuits in total and all of them adopt the open-collector output as shown in the figure. They can be used to drive the relay coil or optical coupled load. The loading capacity is shown in the figure.
- ◆ When inductive loads such as relay coil are connected, a free wheel diode must be fitted as shown in the figure. Otherwise the drive will be damaged.
- ◆ The local 24V power supply only can provide 100mA current. If the actual load current is larger than 100mA, the user should provide the power supply by themselves. The recommended capacity is greater than 500mA.

#### 4.5.5 Wiring of frequency division output circuit of encoder feedback signal

Differential mode:

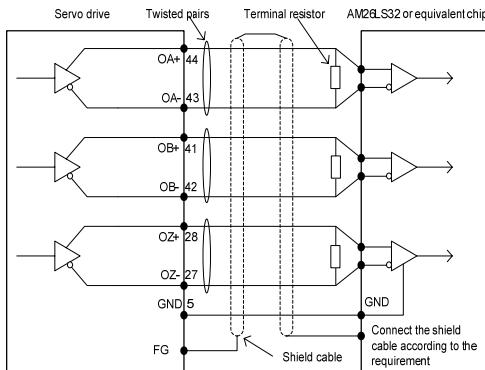


Open-collector mode:

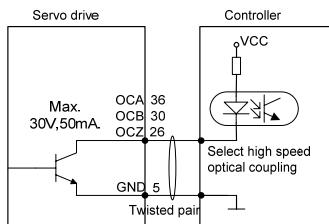

- ◆ Phase A, B and Z all provide differential output and open-collector output signals.
- ◆ For differential output signal, it is recommended to use AM26C32 or equivalent differential receiving chip and be sure to fit a terminal matching resistor of about  $220\Omega$ .
- ◆ For the phase A, B, Z signal of open-collector output, as the signal pulse width is very narrow, the user shall use high speed optical coupler to receive this signal.
- ◆ Both output circuits have no isolation.

#### 4.5.6 Wiring of the analog output circuit

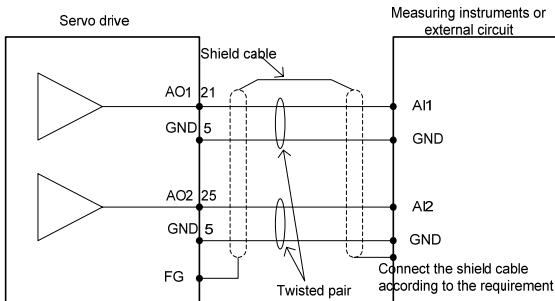


- ◆ There are two analog output circuits in all. The output voltage range is -10V~10V. The Max output

current is 3mA.

#### 4.5.7 Wiring of the electromagnetic brake

If the servo drive is used in the vertical shaft applications, the electromagnetic brake can be used to stop and keep the dropping speed when servo drive is power off. The wiring diagram is:

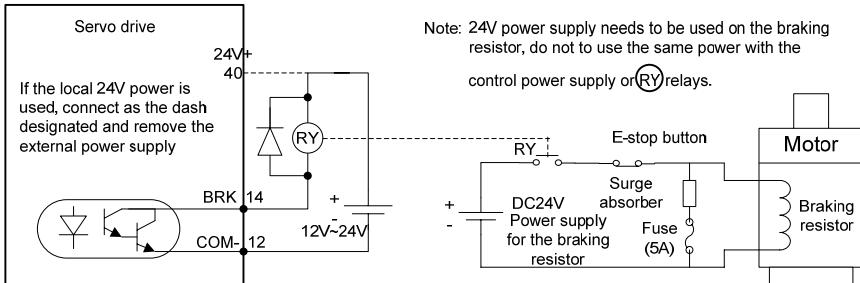

- ◆ 24V power supply specific for the electromagnetic brake cannot be used with the power supply for control signal;
- ◆ is the relay coil, please pay attention to the direction of the diode;
- ◆ The electromagnetic brake is used to keep the speed, other than stop;
- ◆ Please install the external braking devices besides the electromagnetic brake.

# Chapter 5 Running and operation

## 5.1 Running

### 5.1.1 First powering on

Please check following items before power on:

#### 1) Wiring

- ◆ The power supply of the servo drive (L1, L2, L3, L1C, L2C) should be connect with proper techniques;
- ◆ The output phase of the servo drive (U, V and W) should be the same as that of the cables of the servo motor;
- ◆ There is no short circuit between the output of the servo drive (U, V and W) and the input power supply (L1, L2 and L3);
- ◆ All wiring comply with the standard wiring shown in 4;
- ◆ Ensure the external terminal (SON) for servo enabling is set to OFF;
- ◆ Ensure the servo drive and the servo motor are grounded to properly;
- ◆ When using external braking resistor, the short cable between B2-B3 on X2 terminal should be removed;
- ◆ Do not put voltage above DC24V on CN1;
- ◆ The cable stress is within the designated range.

#### 2) Environment

- ◆ There are no foreign objections, such as metal and other wire lead which can cause short connection of signal and power wires.

#### 3) Mechanical parts

- ◆ The installation of the servo motor and the connection of shafts and mechanics are reliable;
- ◆ The servo motor and the machines are available to run;
- ◆ Do not run the motor at negative load (the direction of the output torque of the motor is contrary to the motor speed direction).

If all above items are checked OK, switch on the power supply:

#### 5.1.1.1 Sequence of powering ON/OFF

The control circuit and the main circuit of the drive are supplied separately. In principle, when powering on, switch on the power supply of the control circuit (terminals L1C, L2C) first and then switch on the power supply of the main circuit (terminals L1, L2, L3). When powering off, switch off the power supply of the main circuit first and then switch off the power supply of the control circuit.

After switching on the control circuit power supply and before switching on the main circuit power supply, R0.30 will display "0" and after power on of the main circuit, R0.30 will display "2" and the servo drive can be enabled.

### 5.1.1.2 Checking after powering-on

After switching on both of the control circuit and main circuit power supplies, if the power supply is OK, the LED indicator will display 0 first and then display 8. If there is no fault alarm of the servo drive, the LED on the front panel displays the current speed of the servo motor as default. The default parameter can be set through parameter P0.15. If there is a fault of the servo drive, the LED displays current alarm sign and flickers. Please fix the fault by referring to chapter 9.1.

### 5.1.1.3 Set the motor code

Before enabling operation, please set P0.00 according to the motor code on motor nameplate, otherwise, the motor may operate abnormally or reversely and cause safety issues.

## 5.1.2 Trial jogging


Trial jogging can check whether the servo drive and the servo motor are intact and conduct preliminary debugging of the system including the servo drive, servo motor and peripheral equipment.

Run the servo motor by JOG operation after ensuring that the wiring is correct and there is no fault alarm and no abnormal running. See chapter 5.2.5 for detailed instructions. Before jog running, ensure:

- ◆ The motor isn't in running state. If the motor is running, JOG operation is invalid;
- ◆ The load inertia shouldn't exceed 15 times of the motor inertia. Otherwise it may cause serious mechanical vibration;
- ◆ The jog speed can be set via parameter P0.05.
- ◆ The accelerating/decelerating time during jogging can be set via parameters P0.54, P0.55 and P0.56, P0.57.

## 5.1.3 Running at the position control mode

Simple connection:

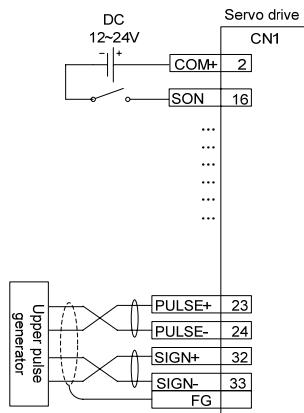

Parameter	Function	Setting value
P0.03 <sup>1</sup>	Control mode selection	0
P0.21 <sup>1</sup>	Command pulse input selection	Set according to the requirement
P0.22 <sup>1</sup>	The pulse number when the motor rotates a cycle	Set according to the requirement
P0.23 <sup>1</sup>	Pulse input	Set according to the requirement
P0.24 <sup>1</sup>	Pulse input direction reverse	0

Figure 5-1 Simple connection of the position control mode

Steps:

1. Complete the connection between the drive and the servo motor.
2. Set P0.03 to “0”, the position control mode.
3. Confirm the pulse output of the upper controller and adjust P0.23. Keep the pulse type the same with that of the upper controller. Please refer to the instruction of P0.23.
4. Connect the corresponding terminal of CN1 and ensure the pulse wires (differential output and open collector output) and adjust P0.21. Please refer to the instruction of P0.21.
5. Disconnect the control power supply after the modification of P0.03, P0.21, P0.23 and then power on again.
6. Connect CN1 to the drive and apply the power supply. Control the connection between SON and COM-. And then, the servo enters into the locking state.
7. Send the low frequency pulse command from the upper controller and rotate the motor at low speed.
8. Ensure the rotating direction of the motor is as the designated. The direction can be modified through the upper controller or operate on P0.24.
9. Ensure the pulse number is as the designated. Please refer to the instruction of P0.22, P0.25 and P0.26.

#### 5.1.4 Running at the speed control mode

Simple connection

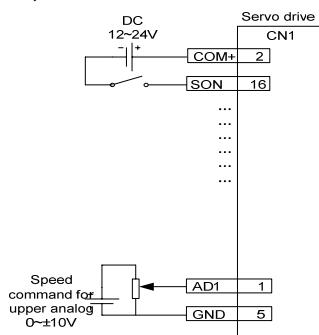


Figure 5-2 Simple connection of the speed control mode

Parameter	Function	Setting value
P0.03 <sup>1</sup>	Mode selection	1
P0.40	Speed command selection	1
P0.42	Analog input 1 gain	500
P3.20	Analog speed command offset	Set according to the requirement


Steps:

1. Complete the connection between the drive and the servo motor.
2. Set P0.03 to “1”, the speed control mode.
3. It is necessary to disconnect the control power supply after saving the modified value of P0.03. And it will be valid after repowering on.

4. Set P0.40 to "1", external analog speed command mode.
5. Set P0.42 to the required value. Please refer to the instruction of P0.42.
6. Connect the corresponding terminals of CN1.
7. Connect the CN1 to the drive and power on. Control the connection between SON and COM-. Then the servo enters into the locking state.
8. The motor shaft may rotate at a low speed if there is no upper command voltage. It is necessary to adjust P3.20. Please refer to the detailed instruction of P3.20.

### 5.1.5 Running at the torque control mode

Simple connection:

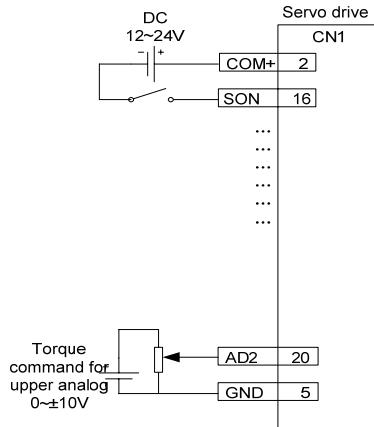

Parameter	Function	Setting value
P0.03 <sup>1</sup>	Mode selection	2
P0.60	Torque command selection	1
P0.61	Torque command direction selection	Set according to requirement
P0.62	Analog input 2 gain	10
P3.23	Analog input 2 offset	Set according to requirement
P0.46	Speed limit 1	100

Figure 5-3 Simple connection of the  
torque control mode

Steps:

1. Complete the connection between the drive and the servo motor.
2. Set P0.03 to "2", the torque control mode.
3. It is necessary to disconnect the control power supply after saving the modified value of P0.03. And it will be valid after repowering on.
4. Set P0.60 to "1", external analog torque command mode.
5. Set P0.61 to the required value. Please refer to the instruction of P0.61.
6. Set P0.62 to the required value. Please refer to the instruction of P0.62.
7. Connect the corresponding terminals of CN1.
8. Connect the CN1 to the drive and power on. Control the connection between SON and COM-. Then the servo enters into the locking state.
9. The motor shaft may rotate at a low speed if there is no upper command voltage. It is

necessary to adjust P3.23. Please refer to the detailed instruction of P3.23.

10. In the torque mode, please adjust the speed limit and set P0.46 to the required value. Please refer to the detailed instruction of P0.46.

### 5.1.6 Parameter setting before running the servo

Parameter setting must be conducted before running the servo. Relevant parameters can be set via the panel, PC software or communication to meet the function and performance requirements of the site application. See chapter 6 for the detailed description of all parameters of the servo drive. Some of these parameters need to be set according to the site application demand. For examples, pulse input mode, electronic gear, frequency division coefficient of encoder output, upper/lower limit of analog input, etc. Some of these parameters need to be set according to the site debugging. For example, the parameters of the regulator loop which affect the system performance and other similar parameters. For most parameters the factory default values are appropriate.

Hereunder only some necessary parameters are listed:

#### 1) Mode setting

The control mode (position mode, speed mode, torque mode, full-closed loop mode or other compound control mode) can be set through setting parameter P0.03 according to the control requirements on the site. The mode will be valid after repowering on.

#### 2) Command input

Set or enter relevant commands to control the position, speed or torque of the servo motor's shaft according to the setting of parameter P0.03.

- ◆ In the position, fully close loop mode: pulse command (3 kinds of input mode), internal torque limit command or external analog torque limit command;
- ◆ In the speed mode: internal speed command or external analog speed command, internal torque limit command or external analog torque limit command;
- ◆ In the torque mode: internal torque command or external analog torque command, internal speed limit command or external analog speed limit command.

### 5.1.7 Servo enabling

Enable the servo via the external servo enabling terminal (SON) or internal servo enabling parameter (P0.04). See the function description of terminal SON and detailed explanation of parameter P0.04.

When servo enabling:

- ◆ If no alarm occurs, the panel will display the default monitoring parameters;
- ◆ The fan starts to run;
- ◆ In position, fully close loop mode, if there is no pulse command input, the servo is in locked state;
- ◆ In the speed mode, the servo motor runs at the given speed;

- ◆ In the torque mode, if no torque is applied externally, the servo motor accelerates from zero speed to the limit speed. If the external torque is larger than the internal setting one, the servo motor maintains the state of zero speed output;
- ◆ If a servo alarm occurs, the panel will display ErXX-X and flicker and the servo motor will get into the inertia running state.


### 5.1.8 Coast to Stop/Stop

If the servo drive is in the following conditions, the servo motor will coast to stop or stop normally. Coasting to stop means the drive cuts off output immediately, the motor coasts to stop under the action of inertia, and does not keep in locked state. Stopping means the drive outputs reverse torque to make the motor to decelerate to zero speed and, after that, the motor is in a locked state.

- ◆ When the servo enabling terminal (SON) signal is set to OFF, the servo motor will stop. Select the stopping method through setting parameter P4.30. See description of P4.30 for details. This process will not cause regenerative braking.
- ◆ When a fault alarm occurs, the servo motor will stop. Select the stopping method of the servo motor when an alarm occurs through setting parameter P4.30. See description of P4.30 for details. This process will not cause regenerative braking.
- ◆ When the digital input terminal configured as zero speed clamp (ZRS) is set to ON and P0.58 is at non-zero value, the servo motor stops running. When P0.58 is set to 1~3, the motor stops running based on the DEC time set by P0.55 and P0.57 in speed mode, and servo is in locked state after stop; in torque mode, the servo motor stops running immediately. Such stopping process may cause regenerative braking. If braking overload fault alarm occurred, please connect with proper external braking resistor.
- ◆ If the travellimit switch block function is invalid (parameter P3.40=0), and digital input terminal signal configured as travel limit (POT/NOT) is set to ON, P0.55 and P0.57 of the servo motor will immediately decelerate to stop based on the set value of P0.55 and P0.57. it will be in locked state after stop. If reverse running command input is generated after motor stops, the motor can run in reverse direction.
- ◆ If the emergency stop switch block function is invalid (parameter P3.41=0), and the digital input terminal configured as E-stop is set to ON, the servo motor will coast to stop.
- ◆ If the duration of servo disable signal is too short (less than 500mS), PWM signal may be in off state once servo is enabled again.

## 5.1.9 Sequence diagram

### 5.1.9.1 Sequence diagram of power-on and servo ON

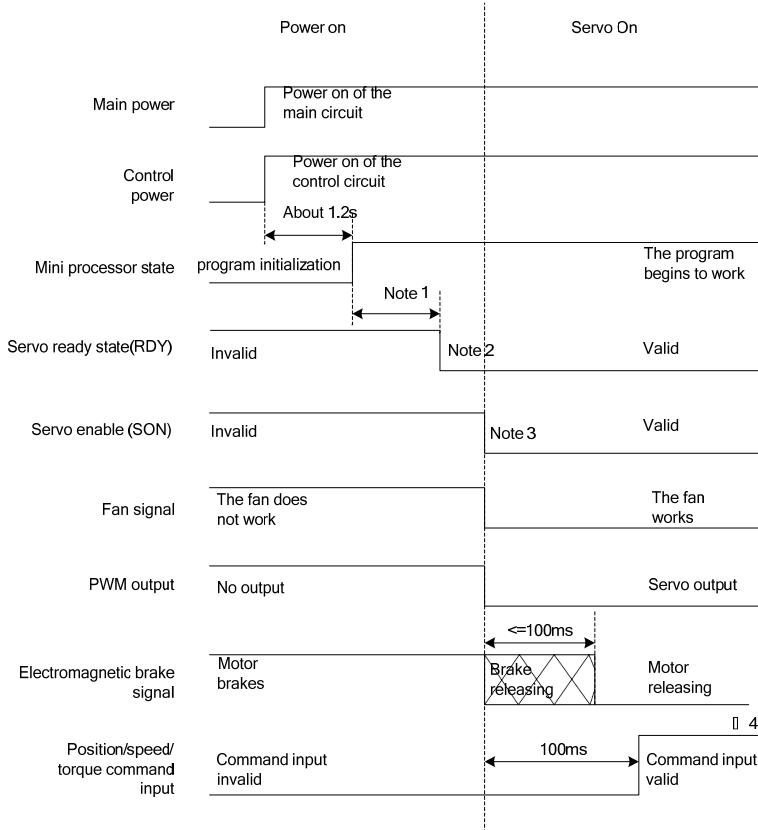

Note 1: the delay time from the microprocessor initialization to servo ready output valid can be set by P4.54

Note 2: the condition of less level of the servo ready output signal: the servo has no fault or the DC voltage of the main circuit is established (the voltage is higher than 250V/430V)(220V/400V), if the voltage of the main circuit is less than 170V/310V(220V/400V), Er13-1 will be reported and the time from the servo ready to the servo enabling can be controlled.


Note 3: only when the servo ready output signal is valid, the servo enable signal is valid

Note 4: the actual level corresponding to input/output valid state can be set by P3.00~P3.15

Figure

5-4 Sequence diagram of power-on and servo ON

### 5.1.9.2 Sequence diagram of power loss during running

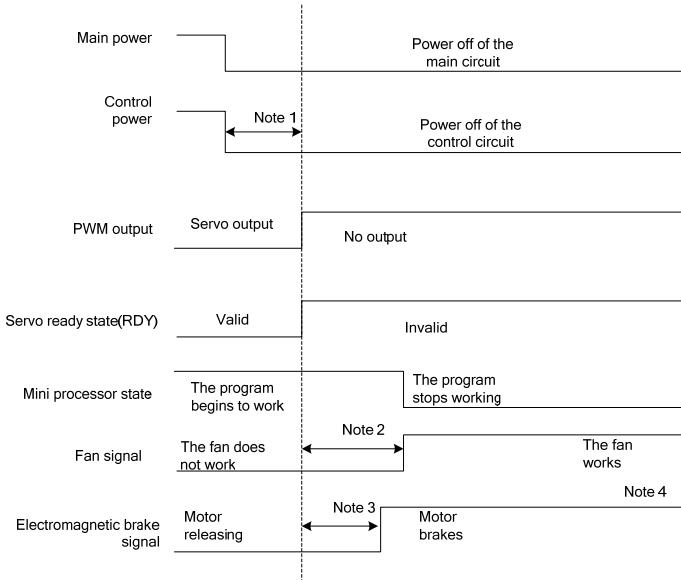

Note 1: if the voltage of the main circuit is less than 170V/330V(220V/400V), the undervoltage fault will occur and the output level of the servo fault (ALM) is increasing

Note 2: if the drive temperature is less than 45 degrees, the fan stops, if the drive temperature is higher than 45 degrees, the fan will stop after the mini processor stops Note 3: the electromagnetic brake signal is set by P3.57; if the speed is less than the setting value of P3.58 during the time of P3.57, the BRK signal is valid

Note 4: the actual level corresponding to input/output valid state can be set by P3.00~P3.15

Figure 5-5 Sequence diagram of power loss during running

### 5.1.9.3 Servo OFF sequence in a locked state

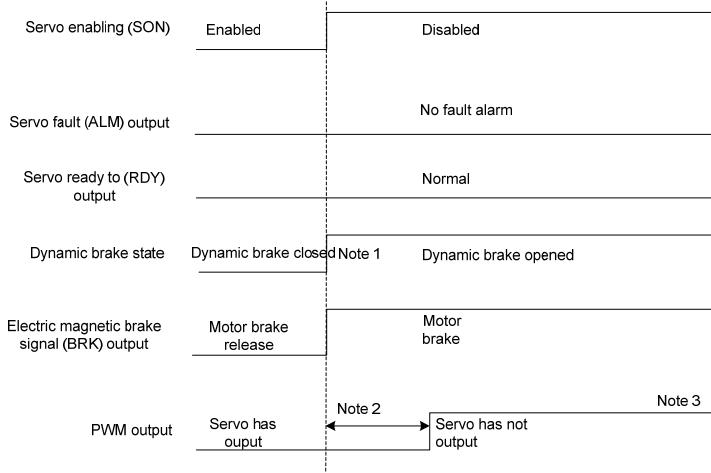


Figure 5-6 Servo OFF sequence diagram in a locked state

### 5.1.9.4 Servo OFF sequence in running state


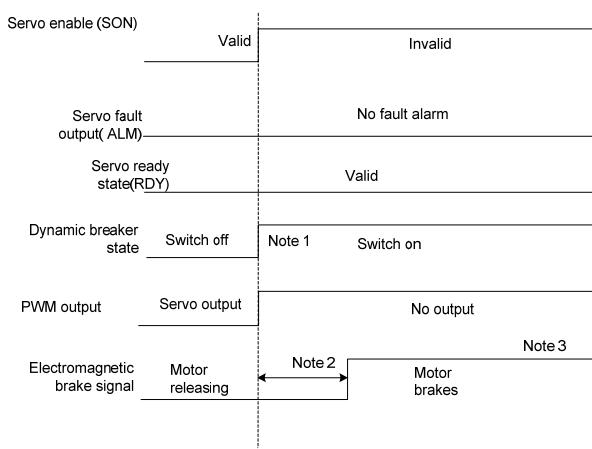


Figure 5-7 Servo OFF sequence diagram in running state

### 5.1.9.5 Sequence of fault alarm

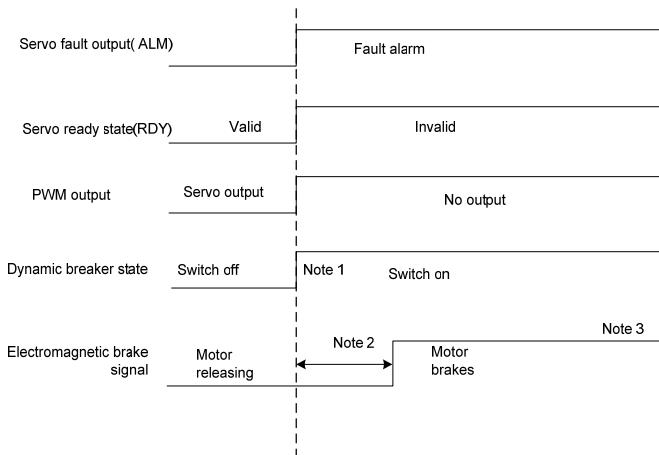

Note 1: the switch on/off of the dynamic breaker can be controlled by P4.30  
 Note 2: the electromagnetic brake signal is set by P3.57; if the speed is less than the setting value of P3.58 during the time of P3.57, the BRK signal is valid  
 Note 3: the actual level corresponding to input/output valid state can be set by P3.00~P3.15

Figure 5-8 Sequence diagram of fault alarm

## 5.2 Display and operation

### 5.2.1 Display

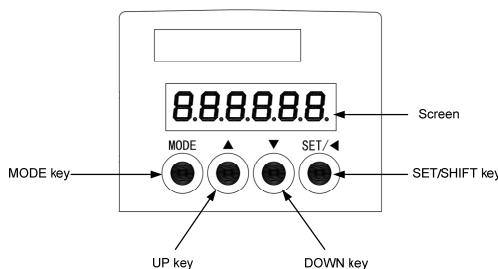


Figure 5-9 Keypad diagram

Table 5-1 Button definition

Key	Function
MODE	Used to switch between different modes or return to previous menu
UP	Used to select parameter upwards or increase value
DOWN	Used to select parameter downwards or decrease value
SET/SHIFT	Press for a long time =SET (about 0.6 seconds) Used to select parameter downwards or decrease value Press for a short time =SHIFT: When setting a parameter, it is used to select the position of the current digit

## Operation flowchart

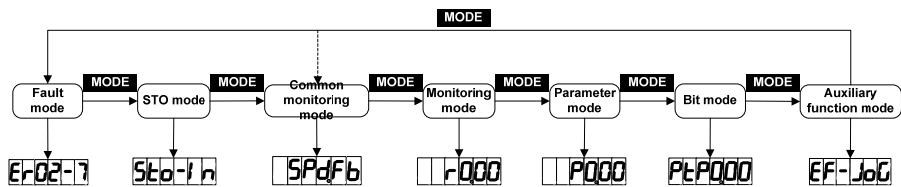


Figure 5-10 Operation flowchart

If the drive is power on, the screen will display 0000000 for about 1 second, and then display 8888888 for about 1 second, after that, enter into the “General monitoring mode”.

1. Press **MODE** key to switch “General monitoring mode”→“Parameters mode”→“Point control mode”→“Auxiliary function mode”→“Fault mode”→“STO mode” as a cycle mode. If no fault or no STO input, the fault mode and STO mode can be ignored.
2. If new fault occurs, it will switch to “Fault mode” by pressing **MODE** key. If no key is pressed in 20 seconds, it will switch to “Fault mode” automatically.
3. In “General monitoring mode”, **UP/DOWN** key can be used to switch monitoring parameters. The name of parameters will display for 2.5 seconds, and then the current value will be displayed.
4. In parameters mode, **SHIFT** key can be used to switch the group number and **UP/DOWN** key can be used to select the internal parameters number.
5. In the parameters setting mode, pressing **SHIFT** to make the flickering words move left and use the **UP/DOWN** key to modify the setting value of the high bit.
6. After parameters setting, pressing **SET** key to save the parameters or execute the commands.
7. After parameters setting, the screen will display “SAVED” or “SUCCESS” and then return to the parameters mode automatically.

8. Setting of long parameters (corresponds to parameters with over 6 digits) in parameter area:

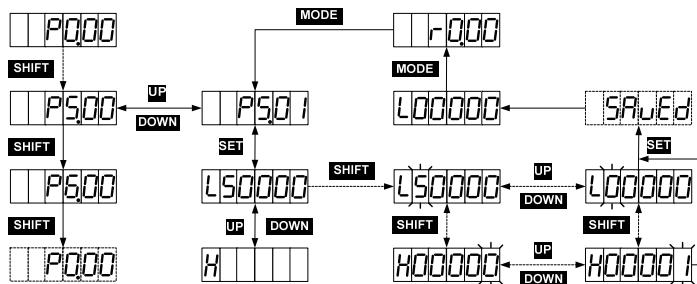


Fig 5-11 Process for setting long parameters

### 5.2.2 State monitoring mode

After power on, the screen will enter into “General monitoring mode”, display the parameters name for about 2.5 seconds and then display the current value. After pressing **MODE** key, **UP/DOWN** key can

be used to switch monitoring parameters. If no operation, it will return to the monitoring interface in 20 seconds.

Operation flowchart:

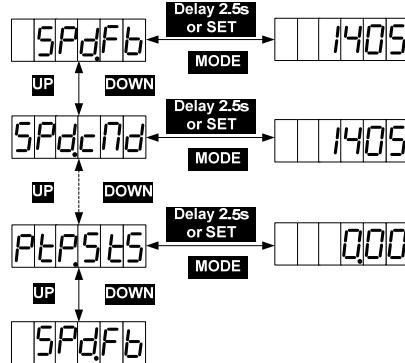


Figure 5-12 Operation flowchart

### 5.2.3 Monitoring mode

**MODE** key can be used to switch into the monitoring mode. **SHIFT** key can be used to select the group number of the monitoring parameters, **UP/DOWN** can be used to select the internal parameter number and pressing for a long time, it can be used to select the parameter number quickly. After finding the target, **SET** key can be used to view the current value and **MODE** can be used to return the displaying interface. If no operation in R3 menu interface, it will return to the monitoring interface in 20 seconds. If no operation in R0 and R1 menu interface, it will stay on the displaying interface.

Operation flowchart:

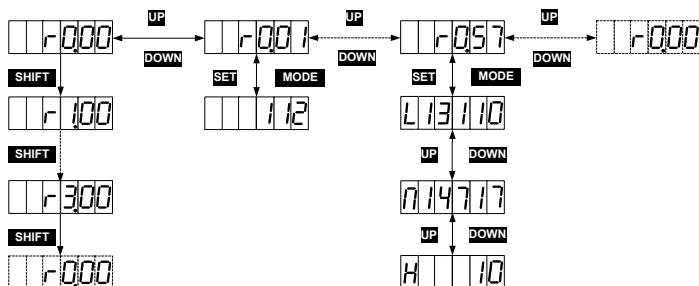


Figure 5-13 Operation flowchart

### 5.2.4 Parameter setting

**MODE** key can be used to switch into the parameters setting mode. **SHIFT** key can be used to select the group number of the monitoring parameters, **UP/DOWN** can be used to select the internal

parameter number and pressing for a long time, it can be used to select the parameter number quickly. After finding the target, **SET** key can be used to view the current value and **SHIFT** key to the parameters setting. In the setting interface, **UP/DOWN** key can be used to set the value, **SHIFT** key can be used to select the setting bit. After setting, press **SET** key to save the parameters. After finishing, the screen will display “SAVED” or “SUCCESS”, and then return to the parameters mode automatically.

## Operation flowchart:

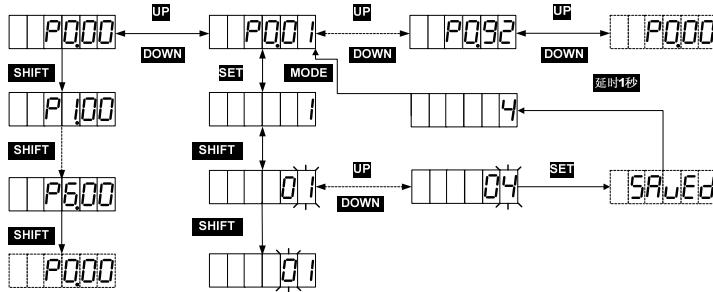


Figure 5-14 Operation flowchart

### **5.2.5 Auxiliary function instruction**

### 5.2.5.1 Auxiliary function menu

Press **MODE** to the auxiliary mode and press **UP/DOWN** to select auxiliary functions.

**Note:** All auxiliary functions are available when the servo is disabled.

Table 5-5 Auxiliary function

Sign	Name
EF-JoG	Jogging test
EF-dRF	Restore the factory parameter
EF-PJo	Program commissioning
EF-RA1	Analog input 1 zero drift clear
EF-RA2	Analog input 2 zero drift clear
EF-RA3	Analog input 3 zero drift clear
EF-JI d	Inertia identification
EF-Erc	Absolute value encoder clear

#### **5.2.5.2 Operation flowchart of trial jogging**

Press **MODE** key to switch to the auxiliary function mode. Press **UP/DOWN** key to the **EF-JoJo** menu, and press **SET** key to the jogging interface. The interface will display the current speed of the motor. Press **UP** key, the motor will rotate to the setting speed anticlockwise and stops when

releasing the key. Press **DOWN** key, the motor will rotate to the setting speed clockwise and stops when releasing the key.

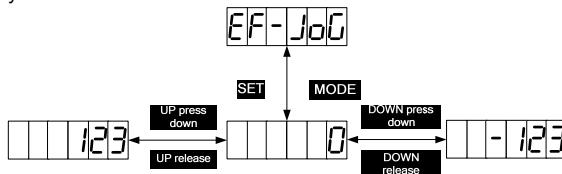


Figure 5-15 Operation flowchart

#### 5.2.5.3 Operation flowchart of restoring the factory parameter

Press **MODE** key to switch to the auxiliary function mode. Press **UP/DOWN** key to the **EF-dRaF** menu, and press **SET** key to the interface. The interface will display **rERdy**. Press **SET** key to restore to the factory values, it will display **StArt**, after finishing, it will display **FinlSh**. The Operation flowchart of analog speed reference zero drift clear, analog torque reference zero drift clear and analog torque reference zero drift clear are the same.

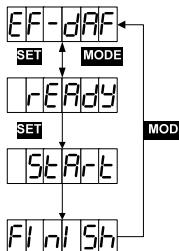


Figure 5-16 Operation flowchart

#### 5.2.5.4 Operation flowchart of program commissioning

Press **MODE** key to the auxiliary function mode. Press **UP/DOWN** key to the **EF-PJo** menu, and press **SET** key to the interface. The interface will display **rERdy**. In the interface of **rERdy**, **SHIFT** key can be used to switch between **rERdy** and **StArt**, start and stop the commissioning function. In the interface of **123456789**, **UP/DOWN** key can be used to start the program commissioning and has no relationship with P5.00. If the motor direction is counterclockwise, it can be started by **UP** key. If the motor direction is clockwise, it can be started by **DOWN** key. After starting, the interface will display the current speed.

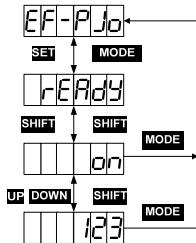


Figure 5-17 Operation flowchart

### 5.2.5.5 Operation flowchart of inertia identification

Press **MODE** key to the auxiliary function mode. Press **UP/DOWN** key to the **EF-Jd** menu, and press **SET** key to the interface. The interface will display **READY**. Press **SET** key to start the inertia identification. After finishing, the result **XXXXXX** will be displayed for about 3 seconds and saved automatically. It will return to eh parameters after displaying **Saved** for about 2 seconds.

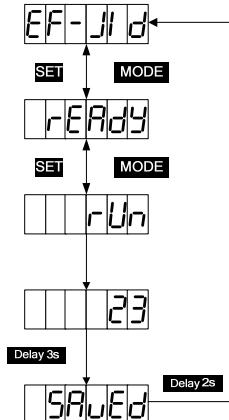


Figure 5-18 Operation flowchart

#### 5.2.5.6 Operation flowchart of absolute encoder clear

If the multi-turn encoders are used, the zeroing of mechanical system is needed after first power on. Press **MODE** key to switch to the auxiliary function mode. Press **UP/DOWN** key to the **EF-Enc** menu, and press **SET** key to the interface. The interface will display **READY**. Press **SET** key to start the clearing, the interface will display **START**, and after finishing, it will display **Finish**; if the encoder model is not matched or the operation is failed, it will display **Error**.

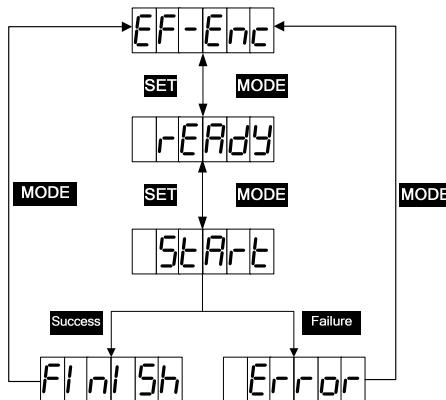


Figure 5-19 Operation flowchart

### 5.2.6 Alarm display

When the servo drive runs abnormally, it will perform fault alarm and stop automatically. At this time the panel will display the fault alarm warning sign. The format is ErXX-X, of which, XX is the master code and X is the sub code.

Please refer to appendix 10.4 for the meanings of the alarm or warning identifiers.

### 5.2.7 Alarm clearance

For those faults that can be cleared online, if the fault condition is removed, fault alarm display can be cleared by short connecting the digital input terminal configured as fault clear function (P3.00~P3.09 configured as 0x004 or 0x104) with COM-. If the servo still has enabling command input, the drive will not be able to clear the fault automatically.

For the fault alarms which cannot be cleared online, it can be cleared after repower on.

## Chapter 6 Detailed parameter description

P-position mode; S-speed mode; T-torque mode; F-fully close loop mode.

The definition of direction: From the angle of facing motor shaft, the counterclockwise direction is forward (CCW for short); clockwise (CW) is reverse; in terms of speed and torque reference value, positive value means position direction and negative value means negative direction.

The function codes with the superscript of “1” indicate that these parameters can be valid only when the system is reset and restarted or repowered after disconnection.

The function codes with the superscript of “2” indicate that these parameters are valid when the servo drive stops. The modification during operation is invalid.

The function codes with the superscript of “\*” indicate that these parameters are not saved after power off.

Modbus communication address is decimal, the address of PROFIBUS-DP is the same with Modbus; CANopen communication address is hex and the length of 16-bit is the primary code and the length of 8-bit is the sub-code.


### 6.1 Basic control (P0 group parameters)

#### 6.1.1 Basic setting

P0.00 <sup>1</sup>	Motor model	Setting range	Default	Unit	Available mode			
		0~9999999	236 <sup>*1</sup>	-	P	S	T	F

The parameter is standard motor model by default. Users must set the parameter according to the name plate of the motor.

For example, the name plate of 400W motor is:

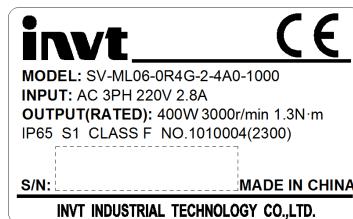

of which, No.: 1010004 is the set value of the parameter.

**Note:** Setting the parameter incorrectly will cause abnormal running of the servo system and even serious fault of the drive and motor.

<sup>\*1</sup> The default motor model varies with different drive models, 236 is the default motor model for 400W drive.

P0.00 <sup>1</sup>	Data size	32bit	Data format	DEC
	Modbus address	1000, 1001	CANopen address	0x2000, 0x00

P0.01 <sup>1</sup>	Motor type	Setting range	Default	Unit	Available mode			
		1~12	4* <sup>1</sup>	-	P	S	T	F

Generally, the system will set this parameter automatically after P0.00 is set correctly. In cases where encoder disconnection fault is reported during power up when motor is connected correctly, please check whether the drive supports motor encoder type, refer to 1.1.3 for naming of the drive. The naming of servo motor contains encoder type, refer to 1.1.3 for the naming of drive.

Relation between encoder type and P0.01 setting value:

Motor nameplate Encoder type <sup>*2</sup>	Setting value	Meaning
1	1	2500-wire standard incremental
2	2	2500-wire multiplexed data line incremental
3	3	17-bit single-turn absolute value
4	【4】	17-bit multi-turn absolute value * <sup>3</sup>
7	8	rotary transformer
9	10	23-bit multi-turn absolute value * <sup>3</sup>
-	Other value	Reserved

\*<sup>1</sup> Different motors correspond to different types of encoders.

\*<sup>2</sup> Refer to chapter 1.1.3 ⑧ for rules of the encoder type on motor nameplate.

\*<sup>3</sup> When the multi-turn encoders are used, it is necessary to change the battery when the drive is power on to prevent losing absolute position. The standard battery is 2000mAh and the replacement cycle is 1.5~2 years.

P0.01 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1002,1003	CANopen address	0x2001, 0x00

P0.02 <sup>1</sup>	Forward rotation of motor * <sup>1</sup>	Setting range	Default value	Unit	Available mode			
		0~1	0	-	P	S	T	F

Set the forward rotation of motor:


Setting value	Definition
0	Anticlockwise is forward rotation
1	Clockwise is forward rotation

\*<sup>1</sup> Definition of forward rotation of motor. The view angle faces shaft output direction of motor.

P0.02 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1004, 1005	CANopen address	0x2002, 0x00

P0.03 <sup>1</sup>	Control mode	Setting range	Default	Unit	Available mode			
					P	S	T	F

	select	0~9	0	-	P	S	T	F
This parameter can be used to set the operating mode of the system:								
Setting value	1 <sup>st</sup> working mode	2 <sup>nd</sup> working mode	Instruction					
0	P	/	Position mode: Control the angular displacement of servo motor via internal/external position command, thus achieving controlling over mechanical motion displacement.					
1	S	/	Speed mode: Control the rotation speed of the servo motor with the internal or external speed command					
2	T	/	Torque mode: Control the torque of the servo motor with the internal or external torque command.					
3	P	S	Position/speed mode switching: The position mode and speed mode can be switched with the control mode switching terminal.					<p><b>Note:</b> For switching from position mode to speed mode, there are two kinds of switching methods which can be selected via P0.92; When switching from speed mode to position mode, the motor will stop at the reference position of P0.91 before switching to position mode.</p>
4	/	T	Position/torque mode: The position mode and torque mode can be switched with the control mode switching terminal					<p><b>Note:</b> For switching from position mode to torque mode, there are two kinds of switching methods which can be selected via P0.92; When switching from torque mode to position mode, the motor will stop at the reference position of P0.91 before switching to position mode.</p>

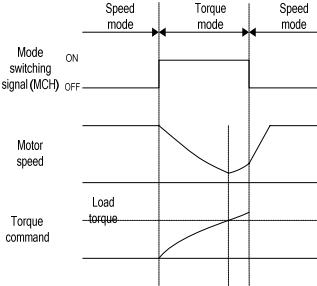			position mode, the motor will stop at the reference position of P0.91 before switching to position mode.
5	S	T	<p>Speed/torque mode: The speed mode and torque mode can be switched with control mode switching terminal</p>  <p><b>Note:</b> The switching mode is not limited by actual operation.</p>
6	F	/	Fully closed loop mode: Use the grating ruler to detect the devices of control object and conduct information feedback position control.
7	CANopen	/	CANopenmode (CANopen type servo support)
8	EtherCAT	/	EtherCAT mode (Ether CAT type servo support)
9	MotionNet	/	MotionNet mode (MotionNet type servo support)

Remark: Set P0.03 and P3.00~P3.09 will switch automatically according to the selected control mode.

**Note:** 0:OFF (the terminal is disconnected with COM-);

1:ON (the terminal is connected with COM-).

P0.03 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1006,1007	CANopen address	0x2003, 0x00

P0.04*	Internal enabling command	Setting range	Default	Unit	Available mode			
		0~1	0	-	P	S	T	F

This parameter is used to control the operation state of the servo drive:

Setting value	External terminal command state	Working state of servo drive
0	0 (the terminal is disconnected with COM-)	Stand-by (OFF)
0	1(the terminal is connected with COM-)	Enabling running (ON)
1	0 (the terminal is disconnected with COM-)	Enabling running (ON)
1	1 (the terminal is connected with COM-)	Enabling running (ON)

**Note:**

- When P0.04 is 1 and the external terminal command changes from 1 to 0, the servo drive is disabled.

2. When this parameter is operated by the LED panel, it can only be switched by 0 and 1 of **SET** key and **UP/DOWN** key is invalid.

**Warning:** If the servo drive is controlled by the external terminal, please ensure there is no system fault and disconnect the terminal with COM-.

P0.04*	Data size	16bit	Data format	DEC			
	Modbus address	1008,1009	CANopen address	0x2004, 0x00			

P0.05	Jog speed(JOG)	Setting range	Default	Unit	Available mode			
		0~1000	200	r/min	P	S	T	F

This parameter can be used to set the jog speed. For jogging, please refer to chapter 5.1.4. During jogging, the ACC/DEC time parameters (P0.54, P0.56, P0.55, and P0.57) are active. The motor will accelerate, decelerate, start and stop according to the settings.

P0.05	Data size	16bit	Data format	DEC			
	Modbus address	1010,1011	CANopen address	0x2005, 0x00			

P0.06 <sup>1</sup>	Numerator of the frequency division output	Setting range	Default	Unit	Available mode			
		0~(2 <sup>31</sup> -1)	10000	-	P S T F			
P0.07 <sup>1</sup>	Denominator of the frequency division output	Setting range	Default	Unit	Available mode			
		1~(2 <sup>31</sup> -1)	131072	-	P S T F			

By setting the numerator and denominator of the frequency division output, the signal of the encoder can be frequency divided by any integer or decimal fraction and then outputted through the encoder's pulse output signal terminals(OA+, OA-, OB+ and OB- pin "44"“43”“41” and “42”)





$$\text{Number of drive output pulse} = \frac{\text{P0.06}}{\text{P0.07}} \times \text{encoder resolution}$$

#### Note:

- In the position control mode, if the encoder output signal of the preceding stage servo motor is used as the position pulse command input of the succeeding stage servo drive, i.e. as start/stop type master-slave follow-up, in order to ensure high positioning accuracy of the succeeding stage servo drive, the frequency division coefficient must be 1:1. Otherwise the accuracy of master-slave position follow-up will be affected in this case.
- In factory setting, P0.07 is 131072, P0.06 is 10000, which means the output terminal of the encoder will output 10000 pulse signal when the motor rotates a circle. If P0.06 is 5000, the output terminal of the encoder will output 5000 pulse signal.

P0.06 <sup>1</sup>	Data size	32bit	Data format	DEC			
	Modbus address	1012,1013	CANopen address	0x2006, 0x00			
P0.07 <sup>1</sup>	Data size	32bit	Data format	DEC			
	Modbus address	1014,1015	CANopen address	0x2007, 0x00			

P0.08 <sup>1</sup>	Frequency division output	Setting range	Default	Unit	Available mode			
--------------------	---------------------------	---------------	---------	------	----------------	--	--	--

	reverse	0~1	0	-	P	S	T	F
The reverse of B phase can be carried out through this parameter and the phase relation between A phase and B phase can be changed:								
Setting value	Logic of B phase	CCW	CW					
【0】	Non-reverse							
1	Reverse							
P0.08 <sup>1</sup>	Data size	16bit	Data format	DEC				
	Modbus address	1016,1017	CANopen address	0x2008, 0x00				

P0.09	Torque limit mode	Setting range	Default	Unit	Available mode			
		0~6	1	-	P	S		F

This parameter is used to set the torque limit mode.

In speed mode, the analog input 3 is set to the torque limit, and:

Setting value	Forward direction	Reverse direction
0	Analog input 3(0V~10V)	Analog torque command (-10V~0V)
【1】	Max. torque limit 1(P0.10)	
2	Max. torque limit 1(P0.10)	Max. torque limit 2(P0.11)
3	TLC OFF → Max. torque limit 1(P0.10) TLC ON → Max. torque limit 2(P0.11)	
4	Analog input 3(0V~10V)	Analog torque command (0V~10V)
5	Analog input 3(0~10V)	
6	Analog torque command (0V~10V)	


If analog input 3 is the speed input (non-torque limit), the meaning of the parameter is as below:

Setting value	Forward direction	Reverse direction
0	0	Analog torque command (-10V~0V)
【1】		Max. torque limit 1(P0.10)
2	Max. torque limit 1(P0.10)	Max. torque limit 2(P0.11)
3		TLC OFF → Max. torque limit 1(P0.10) TLC ON → Max. torque limit 2(P0.11)
4	0	Analog torque command (0V~10V)

5	0
6	Analog torque command (0V~10V)

**Note:** If P0.09 is 3, the torque switching is not valid instantly and is limited by P4.51 and P4.52, the detailed information is as the figure below:

$$Ta[\text{ms}] = |P0.11[\%] - P0.10[\%]| \times P4.51[\text{ms}/100\%]/100$$

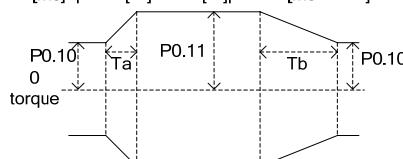

$$Tb[\text{ms}] = |P0.10[\%] - P0.11[\%]| \times P4.52[\text{ms}/100\%]/100$$

P0.09	Data size	16bit	Data format	DEC			
	Modbus address	1018,1019	CANopen address	0x2009, 0x00			

P0.10	Max torque limit 1	Setting range	Default	Unit	Available mode			
		0.0~500.0	300.0	%	P	S	T	F
P0.11	Max torque limit 2	Setting range	Default	Unit	Available mode			
		0.0~500.0	300.0	%	P	S		F

These parameters can be used to set the maximum torque of the servo motor output. Taking the rated torque of the servo motor as 100%, the setting is the percentage of the rated torque of the servo motor. If the absolute value of the torque command is larger than the value of this parameter, then the actual output torque will be limited by the parameter.

**Note:**

1. These parameters are used with P0.09;
2. In torque mode, the limit value is determined by P0.10.

P0.10	Data size	16bit	Data format	DEC			
	Modbus address	1020,1021	CANopen address	0x200A, 0x00			
P0.11	Data size	16bit	Data format	DEC			
	Modbus address	1022,1023	CANopen address	0x200B, 0x00			

P0.13 <sup>1</sup>	Power of the external braking resistor	Setting range	Default	Unit	Available mode			
		0~5000	200	W	P	S	T	F
P0.14 <sup>1</sup>	Resistance of the external braking resistor	Setting range	Default	Unit	Available mode			
		1~1000	60	Ω	P	S	T	F

When an external braking resistor is connected, this group of parameters should be set with the values equal to the resistance and power of the external braking resistor.

**Note:** Braking overload detection should be used in combination with P4.34, when P4.34 is set

to 2, braking overload uses external braking resistor parameter to perform fault detection; please set this group of parameters correctly. If the value of this group of parameters does not match with external braking resistor, braking overload fault (Er07-0) may be reported by mistake or braking resistor may be burnt down. The regenerative braking overload protection time of external braking resistor is in proportion to these two parameters and is in reverse proportion to the braking rate during actual operation.

When P4.34 is set to other values, these two parameters are invalid.

P0.13 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1026,1027	CANopen address	0x200D, 0x00
P0.14 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1028,1029	CANopen address	0x200E, 0x00

P0.15	Default monitoring parameters	Setting range	Default	Unit	Available mode			
		0~22	0	-	P	S	T	F

This parameter is used to set the parameters which can be monitored while powering-on of the system:

Setting value	Parameter meaning	Sign	Unit
【0】	Motor rotation speed	SPdFb	r/min
1	Speed command	SPdcnd	r/min
2	Pulse feedback accumulation	PLSFB	pulse
3	Pulse command accumulation	PLScnd	pulse
4	Retention pulse	PLSER1	pulse
5	Hybrid control deviation	PLSER2	pulse
6	Current torque	trqFb	%
7	Main circuit DC voltage	UbUS1	V
8	Voltage of control power	UbUS2	V
9	Output voltage	UoUT	Vrms
10	Output current	IoUT	Arms
11	Drive temperature	TdLEnT	°C
12	Torque limit	trqLmt	%
13	Encoder feedback value	EncFb	pulse
14	Rotor position to Z pulse	EncRbS	pulse
15	Load inertia ratio	J-r	%
16	Output power	PoUTer	%
17	Motor load rate	Load-r	%

	18	Molecule of actual electronic gear			<i>nUN</i>	-			
	19	Denominator of actual electronic gear			<i>dEn</i>	-			
	20	Pulse speed command			<i>PLSSPd</i>	r/min			
	21	Instant speed			<i>SPdfbI</i>	r/min			
	22	Bit state			<i>PtPStS</i>	-			
P0.15	Data size		16bit	Data format			DEC		
	Modbus address		1030,1031	CANopen address			0x200F, 0x00		

P0.16	Parameter modification operation locking	Setting range	Default	Unit	Available mode			
		0~1	0	-	P	S	T	F

This parameter is used to mask the parameter setting function and thus to avoid incorrect modification of the parameters by the user::

Setting value	Operation	Communication operation
【0】	Parameter modification valid	Parameter modification valid
1	Parameter modification invalid	Parameter modification valid

P0.16	Data size	16bit	Data format	DEC			
	Modbus address	1032,1033	CANopen address	0x2010, 0x00			

P0.17	EEPROM write mode	Setting range	Default	Unit	Available mode			
		0~1	0	-	P	S	T	F

This parameter is used to set the EEPROM write mode

Setting value	Command pulse input
【0】	Saved one by one (automatic saved after modification)
1	Bulk saving (be saved in bulk by P4.91 after modification)

P0.17	Data size	16bit	Data format	DEC			
	Modbus address	1034,1035	CANopen address	0x2011, 0x00			

P0.18*	Factory password	Setting range	Default	Unit	Available mode			
		0~65536	0	-	P	S	T	F

This parameter is used to view and modify the menu.

P0.18*	Data size	16bit	Data format	DEC			
	Modbus address	1036,1037	CANopen address	0x2012, 0x00			

### 6.1.2 Position control

P0.20 <sup>1</sup>	Position command selection	Setting range	Default	Unit	Available mode			
		0~4	0	-	P			F

This parameter is used to select the position command source.

Setting value	Position command source		
【0】	Pulse input		
1	Communication bus input		
2	Point to point control (PTP)		
3	Factory use		
4	The second encoder input		
P0.20 <sup>1</sup>	Data size	16bit	Data format DEC
	Modbus address	1040,1041	CANopen address 0x2014, 0x00

P0.22 <sup>1</sup>	Pulse number for one-circle motor rotation	Setting range	Default	Unit	Available mode
		0~1048576	10000	pulse	P F

This parameter is used to set the pulse number needed when the motor rotates a circle.







**Note:** P0.22 is set to a non-zero value, the setting of P0.25~P0.29 is invalid. If 17-bit and 20-bit encoder is used, the more pulse number can be set for the higher precision.

P0.22 <sup>1</sup>	Data size	32bit	Data format	DEC
	Modbus address	1044,1045	CANopen address	0x2016, 0x00

P0.23 <sup>1</sup>	Pulse input form	Setting range	Default	Unit	Available mode
		0~2	0	-	P F

This parameter is used to set the manner of pulse input.

There are 3 types of pulse input manners:

Setting value	Pulse input form	Signal form	Shown in the picture	
			CCW	CW
【0】	Pulse + sign	Pulse+ Sign		
1	FWD/REV pulse train	CW+CC W		
2	Orthogonal encoder pulse	QEP		

**Remark:** The pulse direction of the parameter can be reversed by P0.24<sup>1</sup>. Please refer to P0.24<sup>1</sup> for detailed information.

P0.23 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1046,1047	CANopen address	0x2017, 0x00

P0.24 <sup>1</sup>	Pulse input direction reversing	Setting range	Default	Unit	Available mode		
		0~1	0	-	P		F

By setting this parameter, the direction of the input pulse can be reversed. At this time the actual output speed direction of the servo drive is opposite to the direction indicated by the pulse input form in P0.23.

Setting value	Pulse input		
【0】	Pulse input direction does not change		
1	Pulse input direction is opposite to the original input direction		

P0.24 <sup>1</sup>	Data size	16bit	Data format	DEC		
	Modbus address	1048,1049	CANopen address	0x2018, 0x00		

P0.25	Numerator of the 1 <sup>st</sup> electronic gear	Setting range	Default	Unit	Available mode		
		0~(2 <sup>31</sup> -1)	0	-	P		F
P0.26 <sup>2</sup>	Denominator of the electronic gear	Setting range	Default	Unit	Available mode		
		1~(2 <sup>31</sup> -1)	10000	-	P		F
P0.27	Numerator of the 2 <sup>nd</sup> electronic gear	Setting range	Default	Unit	Available mode		
		0~(2 <sup>31</sup> -1)	0	-	P		F
P0.28	Numerator of the 3 <sup>rd</sup> electronic gear	Setting range	Default	Unit	Available mode		
		0~(2 <sup>31</sup> -1)	0	-	P		F
P0.29	Numerator of the 4 <sup>th</sup> electronic gear	Setting range	Default	Unit	Available mode		
		0~(2 <sup>31</sup> -1)	0	-	P		F

Concept of the electronic gears: for any pulse input, the number and frequency of the pulse actually received by the drive can be changed by multiplying a certain coefficient. It can be shown separately with two parts: numerator and denominator:


$$\text{Electronic gear} = g1 / g2 :$$

Of which

$g1$  :The numerator of the electronic gear;

$g2$  : The denominator of the electronic gear;

Below is the schematic diagram of the electronic gear in the system:

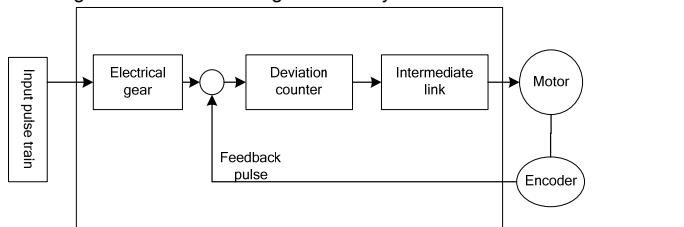

**Example:** Below is a case where 1 pulse is equivalent to a feed rate of  $10 \mu\text{m}$

Mechanical specifications:


Feed of the ball screw  $P_b = 10\text{mm}$ ;

Reduction ratio  $n = 3/5$ ;

Resolution of the servo motor encoder = 10000;

At this time calculate the electronic gear:

$$\frac{g_1}{g_2} = \Delta\ell_0 \cdot \frac{P_t}{\Delta S} = \Delta\ell_0 \cdot \frac{P_t}{n \cdot P_b} = 10 \times 10^{-3} \cdot \frac{10000}{(3/5) \cdot 10} = \frac{50}{3}$$

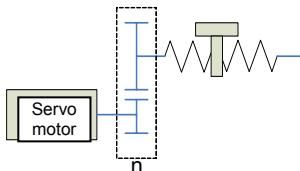

In the formula :

$\Delta\ell_0$  : Feed rate corresponding to each pulse (mm/pulse);

$\Delta S$  : Feed rate corresponding to each rotation of the motor (mm/rot).

i.e. in this example,  $g_1 = 50$ ,  $g_2 = 3$ .

Set P0.25 to 50 and P0.26 to 3.

The servo drive has 4 groups of electric gear: P0.25, P0.26, P0.27, P0.28, P0.29 can be selected to be output through the combination of SC1,SC2:

SC1	SC2	Position mode/Full close loop mode
0	0	Numerator of the 1 <sup>st</sup> electronic gear ratio
1	0	Numerator of the 2 <sup>nd</sup> electronic gear ratio
0	1	Numerator of the 3 <sup>rd</sup> electronic gear ratio
1	1	Numerator of the 4 <sup>th</sup> electronic gear ratio


**Note:** The parameters are valid when P0.22<sup>1</sup> is 0.

P0.25	Data size	32bit	Data format	DEC
	Modbus address	1050,1051	CANopen address	0x2019, 0x00
P0.26 <sup>2</sup>	Data size	32bit	Data format	DEC
	Modbus address	1052,1053	CANopen address	0x201A, 0x00
P0.27	Data size	32bit	Data format	DEC
	Modbus address	1054,1055	CANopen address	0x201B, 0x00
P0.28	Data size	32bit	Data format	DEC
	Modbus address	1056,1057	CANopen address	0x201C, 0x00
P0.29	Data size	32bit	Data format	DEC
	Modbus address	1058,1059	CANopen address	0x201D, 0x00

P0.33 <sup>2</sup>	Smooth filtering of position command	Setting range	Default	Unit	Available mode			
		0.0~1000.0	0.0	ms	P			F

This parameter is used to set the time constant of the low pass filter of the corresponding position and reduce the mechanical shock when the input pulse commands frequency changes.


It is shown as the figure below:

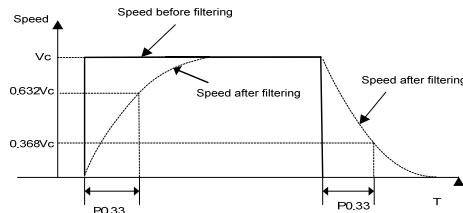

P0.33 <sup>2</sup>	Data size	16bit	Data format	DEC
	Modbus address	1066,1067	CANopen address	0x2021, 0x00

P0.34 <sup>2</sup>	FIR filter of position command	Setting range	Default	Unit	Available mode
		0.0~1000.0	0.0	ms	P F

This parameter is used to set the time constant of the FIR filter of the corresponding position and reduce the mechanical shock when the input pulse commands frequency changes. It is shown as the figure below:

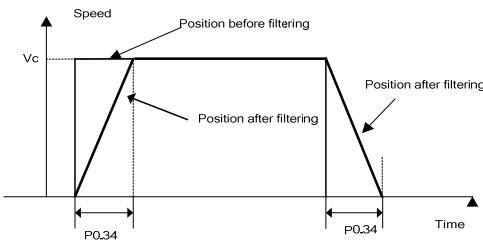

**Note:** If the parameter is modified during the operation, it will be valid after stopping.

P0.34 <sup>2</sup>	Data size	16bit	Data format	DEC
	Modbus address	1068,1069	CANopen address	0x2022, 0x00

P0.35	Software limit of the forward position control	Setting range	Default	Unit	Available mode
		-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	pulse	P F

This parameter is used to set the software limit of the forward position control.

**Note:** The function is valid when it is above P0.36.

P0.35	Data size	32bit	Data format	DEC
	Modbus address	1070,1071	CANopen address	0x2023, 0x00

P0.36	Software limit of the reverse position control	Setting range	Default	Unit	Available mode
		-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	pulse	P F

This parameter is used to set the software limit of the reverse position control.

**Note:** The function is valid when it is less than P0.35.

P0.36	Data size	32bit	Data format	DEC
	Modbus address	1072,1073	CANopen address	0x2024, 0x00

P0.37	Position command mode	Setting range	Default	Unit	Available mode		
		0~1	0	-	P		F

This parameter is used to set the position command mode when P0.20 is set to 1 and it is invalid for other modes.

Setting value	Position command mode		
【0】	Incremental (the position command input is the variation relative to current position)		
1	Absolute(the position command input is the target position)		

P0.37	Data size	16bit	Data format	DEC
	Modbus address	1074,1075	CANopen address	0x2025, 0x00

### 6.1.3 Speed and torque control

P0.40	Speed command	Setting range	Default	Unit	Available mode		
		0~5	1	-	S		

This parameter is used to select the command source of the speed control:


Setting value	Input mode	Instruction																																													
0	Internal step speed	<p>P3.00~P3.09 can be selected to control the internal multi-step speed (SPD1 is 0x00A, SPD2 is 0x00B, SPD3 is 0x00C):</p> <table border="1"> <thead> <tr> <th>SPD3</th> <th>SPD2</th> <th>SPD1</th> <th>Parameter</th> <th>Speed mode</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> <td>P0.46</td> <td>Internal speed 1</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> <td>P0.47</td> <td>Internal speed 2</td> </tr> <tr> <td>0</td> <td>1</td> <td>0</td> <td>P0.48</td> <td>Internal speed 3</td> </tr> <tr> <td>0</td> <td>1</td> <td>1</td> <td>P0.49</td> <td>Internal speed 4</td> </tr> <tr> <td>1</td> <td>0</td> <td>0</td> <td>P0.50</td> <td>Internal speed 5</td> </tr> <tr> <td>1</td> <td>0</td> <td>1</td> <td>P0.51</td> <td>Internal speed 6</td> </tr> <tr> <td>1</td> <td>1</td> <td>0</td> <td>P0.52</td> <td>Internal speed 7</td> </tr> <tr> <td>1</td> <td>1</td> <td>1</td> <td>P0.53</td> <td>Internal speed 8</td> </tr> </tbody> </table> <p>Please refer to the detailed instruction of P0.46~P0.53.</p>	SPD3	SPD2	SPD1	Parameter	Speed mode	0	0	0	P0.46	Internal speed 1	0	0	1	P0.47	Internal speed 2	0	1	0	P0.48	Internal speed 3	0	1	1	P0.49	Internal speed 4	1	0	0	P0.50	Internal speed 5	1	0	1	P0.51	Internal speed 6	1	1	0	P0.52	Internal speed 7	1	1	1	P0.53	Internal speed 8
SPD3	SPD2	SPD1	Parameter	Speed mode																																											
0	0	0	P0.46	Internal speed 1																																											
0	0	1	P0.47	Internal speed 2																																											
0	1	0	P0.48	Internal speed 3																																											
0	1	1	P0.49	Internal speed 4																																											
1	0	0	P0.50	Internal speed 5																																											
1	0	1	P0.51	Internal speed 6																																											
1	1	0	P0.52	Internal speed 7																																											
1	1	1	P0.53	Internal speed 8																																											
【1】	Analog input	<p>The motor speed can be controlled by applying -10V~10V voltage between analog speed input terminals (AD1, GND, pin "1" and "5") of CN1. In the factory default, the positive value means the forward direction and the negative value means the reverse direction.</p> <p>The direction of analog speed command can be changed by P0.41.</p> <p>Please refer to the detailed instruction of P0.41.</p>																																													
2	Bus input	The speed command from upper PC can be received by the interface of communication bus. When P4.10 is 1, the motor speed can be																																													

		changed by P4.13. Please refer to the detailed instruction of P4.10 and P4.13.			
3	Factory use	-			
4	The 2 <sup>nd</sup> encoder input	The speed is the speed calculated via P0.22 of the 2 <sup>nd</sup> encoder pulse.			
5	High resolution internal speed	High resolution internal speed, precision 0.1r/min			
P0.40	Data size		16bit	Data format	DEC
	Modbus address		1080,1081	CANopen address	0x2028, 0x00
P0.41	Setting of speed command direction		Setting range	Default	Unit
			0~1	0	-
				S	

This parameter is used to set the forward/reverse direction when P0.40 is 0 and 1 and the speed command sign is selected as S-SIGN.

Setting value	Internal speed step/analog input		Speed command sign	Speed command direction	
【0】	Positive speed		No use	Forward direction	
	Negative speed		No use	Reverse direction	
1	No use		Valid	Forward direction	
	No use		Invalid	Reverse direction	
P0.41	Data size		16bit	Data format	DEC
	Modbus address		1082,1083	CANopen address	0x2029, 0x00

P0.42	Analog input 1 gain	Setting range	Default	Unit	Available mode
		10~2000	100	(r/min)/V	S
1. The analog input 1 function selection is speed command by default.					
2. The voltage of the analog speed command input corresponds to the changing gain of the motor command speed.					
3. The relation between analog speed command input voltage and the speed, the default value is that each 1V corresponds to 100r/min.					
Analog speed command = Input voltage x P0.42					

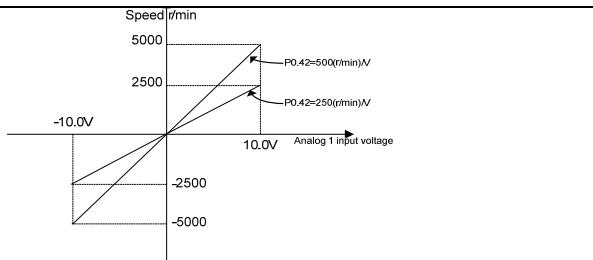**Note:**

1. The default is the input signal from analog input terminal 1 of CN1 (AD1, GND and pin "1", "5").
2. This parameter is valid when the setting value of P0.40 is "1".
3. Set the parameter correctly after confirming the motor operation, if the setting is too large, the motor speed will fluctuate a lot.
4. The voltage above -10~10V cannot be applied between AD1 and GND, otherwise, the drive may be damaged.

P0.42	Data size	32bit	Data format	DEC		
	Modbus address	1084,1085	CANopen address	0x202A, 0x00		

P0.43	Analog input 1 reverse	Setting range	Default	Unit	Available mode		
		0~1	0	-	S		

The analog input 1 function selection is speed command by default.

This parameter is used to set the voltage polarity of the analog speed command.

Setting value	Motor direction		
【0】	Positive polarity	[+voltage]→[Positive], [- voltage]→[Negative]	
1	Negative polarity	[+voltage]→[Negative], [- voltage]→[Positive]	

P0.43	Data size	16bit	Data format	DEC		
	Modbus address	1086,1087	CANopen address	0x202B, 0x00		

P0.45	Dead zone of analog input 1	Setting range	Default	Unit	Available mode		
		0.000~3.000	0.000	V	S		

If the absolute value of analog input 1 voltage is in this range, the corresponding command value is 0.

P0.45	Data	16bit	Data format	DEC		
	Modbus address	1090,1091	CANopen address	0x202D, 0x00		

P0.46	Internal speed 1/Speed limit 1	Setting range	Default	Unit	Available mode		
		-20000~20000	100	r/min	S	T	
P0.47	Internal speed 2/Speed limit 2	Setting range	Default	Unit	Available mode		
		-20000~20000	0	r/min	S	T	

		Setting range	Default	Unit	Available mode		
P0.48	Internal speed 3/Speed limit 3	-20000~20000	0	r/min		S	T
P0.49		-20000~20000	0	r/min		S	T
P0.50	Internal speed 5	Setting range	Default	Unit	Available mode		
P0.51		-20000~20000	0	r/min		S	
P0.52	Internal speed 7	Setting range	Default	Unit	Available mode		
P0.53		-20000~20000	0	r/min		S	
	Internal speed 8	Setting range	Default	Unit	Available mode		
		-20000~20000	0	r/min		S	

There are 8 internal speed commands and 4 internal speed limits.

Control mode	P0.40 Setting value	SPD3	SPD2	SPD1	Parameters and setting value
Speed mode	0	0	0	0	P0.46 internal speed 1
		0	0	1	P0.47 internal speed 2
		0	1	0	P0.48 internal speed 3
		0	1	1	P0.49 internal speed 4
		1	0	0	P0.50 internal speed 5
		1	0	1	P0.51 internal speed 6
		1	1	0	P0.52 internal speed 7
		1	1	1	P0.53 internal speed 8
Torque mode	0	0	0	0	P0.46 speed limit 1
		0	0	1	P0.47 speed limit 2
		0	1	0	P0.48 speed limit 3
		0	1	1	P0.49 speed limit 4

#### Note:

- SPD1, SPD2, SPD3 are the digital input of internal command 1~3(0x00A,0x00B,0x00C).  
0: OFF (disconnected with COM-)  
1: ON (connected with COM-)
- The speed limit depends on the absolute value of the parameters and the direction is the same with that of the torque command.


P0.46	Data size	16bit	Data format	DEC
	Modbus address	1092,1093	CANopen address	0x202E, 0x00
P0.47	Data size	16bit	Data format	DEC
	Modbus address	1094,1095	CANopen address	0x202F, 0x00
P0.48	Data size	16bit	Data format	DEC
	Modbus address	1096,1097	CANopen address	0x2030, 0x00
P0.49	Data size	16bit	Data format	DEC
	Modbus address	1098,1099	CANopen address	0x2031, 0x00

P0.50	Data size	16bit	Data format	DEC
	Modbus address	1100,1101	CANopen address	0x2032, 0x00
P0.51	Data size	16bit	Data format	DEC
	Modbus address	1102,1103	CANopen address	0x2033, 0x00
P0.52	Data size	16bit	Data format	DEC
	Modbus address	1104,1105	CANopen address	0x2034, 0x00
P0.53	Data size	16bit	Data format	DEC
	Modbus address	1106,1107	CANopen address	0x2035, 0x00

P0.54	ACC time	Setting range	Default	Unit	Available mode		
		0~30000	0	ms	S		
P0.55	DEC time	Setting range	Default	Unit	Available mode		
		0~30000	0	ms	S		

ACC/DEC time is the time needed from 0r/min to the rated (3000r/min by default) speed under the reference command. When the reference speed is higher than or less than the rated speed, the actual ACC/DEC time will be accounted according to the percentage. If the speed is negative, the absolute value will be used to count the time.

**Example:** If the reference speed is 2000r/min, the rated speed is 3000r/min and the ACC/DEC (P0.54, P0.55) time is set to 1500, then the actual ACC time is  $1500 \times (2000/3000) = 1000$ ms and the DEC time is  $1500 \times (2000/3000) = 1000$ ms. Please refer to the figure below:

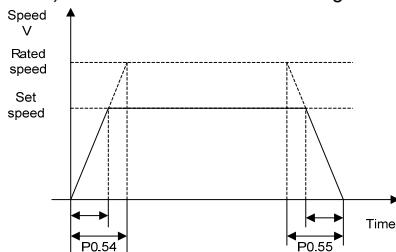

**Note:**


1. ACC/DEC time can only be used in the speed mode.
2. If the speed command is analog input, this function is invalid.

P0.54	Data size	16bit	Data format	DEC
	Modbus address	1108,1109	CANopen address	0x2036, 0x00
P0.55	Data size	16bit	Data format	DEC
	Modbus address	1110,1111	CANopen address	0x2037, 0x00

P0.56	ACC time of S curve	Setting range	Default	Unit	Available mode
-------	---------------------	---------------	---------	------	----------------

		0~1000	0	ms	S		
P0.57	DEC time of S curve	Setting range	Default	Unit	Available mode		
		0~1000	0	ms	S		

In a case of reference speed command, this parameter is used to set the duration of the circular arc segment during S curve decelerating and thus to achieve the goal of smooth starting. The ACC/DEC time of S curve is shown in the figure below:

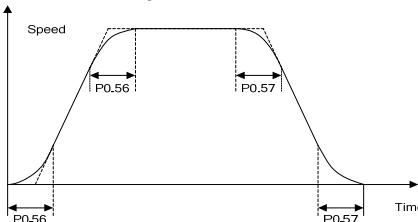

**Note:**

1. ACC/DEC time of S curve can only be used in the speed mode;
2. If the speed command is analog input, this function is invalid;
3. If the setting value of  $P0.54 < 2 \times P0.56$  and  $P0.56$  is not 0, actual operation time  $P0.54 = 2 \times P0.56$ ;
4. If the setting value of  $P0.55 < 2 \times P0.57$  and  $P0.57$  is not 0, actual operation time  $P0.55 = 2 \times P0.57$ .

P0.56	Data size	16bit	Data format	DEC
	Modbus address	1112,1113	CANopen address	0x2038, 0x00
P0.57	Data size	16bit	Data format	DEC
	Modbus address	1114,1115	CANopen address	0x2039, 0x00

P0.58	Zero speed clamp mode	Setting range	Default	Unit	Available mode		
		0~3	0	-	S	T	

This parameter is used to set the zero speed clamp mode.

Setting value	Position command mode
【0】	Invalid
1	If the control signal is valid, the speed command is forced to be 0
2	If the control signal is valid, the speed command is forced to be 0 and when the actual speed of the motor is below P0.59, it will switch to position control and be locked in the position. Other actions are the same with setting value 1.
3	If the control signal is valid, when the speed command changes to be -10r/min below P0.59, it will switch to position control and be locked in the position.

**Note:**

1. If any one of P3.00~P3.09 is zero speed clamp function (0x00D), it can be controlled by the corresponding digital input of CN1; in the bus communication, it can be controlled by P4.19:0: Disabled;1: Enabled

2. In the torque mode, mode 0 and 1 are valid, mode 2 and 3 are the same with mode 1.

P0.58	Data size	16bit	Data format	DEC			
	Modbus address	1116,1117	CANopen address	0x203A, 0x00			

P0.59	Speed threshold of zero speed clamp	Setting range	Default	Unit	Available mode		
		10~20000	30	r/min	S		

This parameter is used to set the position when P0.58 is 2 or 3. When P0.58 is 3, there is 10r/min delay when detection.

P0.59	Data size	16bit	Data format	DEC			
	Modbus address	1118,1119	CANopen address	0x203B, 0x00			

P0.60	Torque command selection	Setting range	Default	Unit	Available mode		
		0~3	1	-			T

This parameter is used to set the command source of the torque control.

Setting value	Input method	Instruction					
0	Internal setting	Set the torque command by P0.66.					
【1】	Analog input	The input torque can be controlled by applying a voltage between -10V and 10V on the analog torque input terminals (AD2, GND and pin 20 and 19). By factory default, the positive value means forward and negative value means reverse. The direction of analog torque command can be changed via P0.61. Please refer to the detailed instruction of P0.61.					
2	Bus input	The torque command can be received by the communication bus interface. When P4.10 is 1, the motor torque can be changed by P4.14. Please refer to the detailed instruction of P4.10 and P4.14.					
3	For factory	-					

P0.60	Data size	16bit	Data format	DEC			
	Modbus address	1120,1121	CANopen address	0x203C, 0x00			

P0.61	Torque command direction setting	Setting range	Default	Unit	Available mode		
		0~1	0	-			T

This parameter is used to select the torque command direction.

Setting value	Designated method
---------------	-------------------

【0】	The direction is designated by the torque command sign. For example: torque command input [+] → Positive direction, [-] → Negative direction			
1	Determined by [0x00F] 1: Positive direction; 0:Negative direction			

**Note:** 0x00F is valid when input low electric level and it is 0x10F when high electric level is valid.

P0.61	Data size	16bit	Data format	DEC
	Modbus address	1122,1123	CANopen address	0x203D, 0x00


P0.62	Analog input 2 gain	Setting range	Default	Unit	Available mode		
		0~2000	100	(0.1%)/V		T	

The analog input 2 function selection is torque command by default:

Parameter instruction:

1. The voltage of the analog torque command input corresponds to the changing gain of the motor command torque.
2. This parameter is valid when P0.60 is set to "1".
3. The relation between the analog torque command input voltage and the torque, the default value is that each 1V corresponds to 10% of the rated torque.

Analog torque command = Input voltage x P0.62

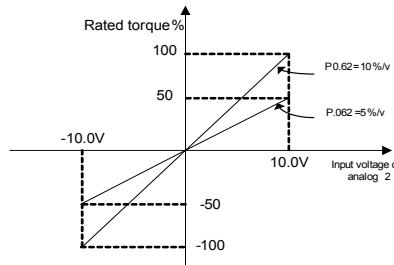

**Note:**

1. The default is the input signal from analog input terminal 1 of CN1 (AD1, GND and pin "20", "19").
2. Set the parameter correctly after confirming the motor operation, if the setting is too large, the motor torque will fluctuate a lot.

P0.62	Data size	32bit	Data format	DEC
	Modbus address	1124,1125	CANopen address	0x203E, 0x00

P0.63	Analog input 2 reverse	Setting range	Default	Unit	Available mode		
		0~1	0	-		T	

The analog input 2 function selection is torque command by default:

This parameter is used to set the polarity of the analog torque command.

Setting value		Motor direction			
【0】	Positive polarity	[+voltage]→[Positive], [- voltage]→[Negative]			
1	Negative polarity	[+voltage]→[Negative], [- voltage]→[Positive]			
P0.63	Data size	16bit	Data format	DEC	
	Modbus address	1126,1127	CANopen address	0x203F, 0x00	

P0.65	Dead zone of analog input 2	Setting range	Default	Unit	Available mode		
		0.000~3.000	0.000	V	T		

The analog input 2 function selection is torque command by default:

If the absolute value of analog torque command voltage is in this range, the corresponding torque value is 0.

P0.65	Data size	16bit	Data format	DEC		
	Modbus address	1130,1131	CANopen address	0x2041, 0x00		

P0.66	Internal torque command	Setting range	Default	Unit	Available mode		
		-500.0~500.0	0.0	%	T		

Set internal torque reference value via this parameter and take the rated torque of servo motor as 100%. This set value is the percentage value of rated torque of servo motor.

**Note:**

1. If the absolute value of this parameter is larger than the max. torque limit 1 (P0.10), then the output torque is the setting value of P0.10, the direction is the same with this parameter.
2. In the torque mode, this parameter is valid when the setting value of P0.60 is "0".

P0.66	Data size	16bit	Data format	DEC		
	Modbus address	1132,1133	CANopen address	0x2042, 0x00		

P0.67	Speed limit setting	Setting range	Default	Unit	Available mode		
		0~1	1	-	T		

In the torque control mode, this parameter is used to set the speed limit mode.

Setting value	Designated method
0	Select the analog input as the speed limit. It is necessary to configure analog input 3 as the speed limit function [set P3.70 to 1] and refer to P0.42~P0.45 for the marking mode.
【1】	Select the internal speed limit and anyone of P0.46~P0.49 may be selected

**Note:** The speed limit value is processed with absolute value internally. The actual sign of speed limit is the same with that of the torque command.

P0.67	Data size	16bit	Data format	DEC		
	Modbus address	1134,1135	CANopen address	0x2043, 0x00		

P0.68	RAMP time of torque command	Setting range	Default	Unit	Available mode			
		0~10000	0	ms			T	

This parameter is used to modify the planning curve when the torque command input changes, and it is the rising time from 0 to 100% of rated torque.

P0.68	Data size	16bit	Data format	DEC				
	Modbus address	1136,1137	CANopen address	0x2044, 0x00				

P0.69	DEC time of fast stop	Setting range	Default	Unit	Available mode			
		0~10000	500	ms	P	S	T	F

This parameter is used to modify the DEC time in fast stop mode, and it is the DEC time from 100% rated speed to 0.

P0.69	Data size	16bit	Data format	DEC				
	Modbus address	1138,1139	CANopen address	0x2045, 0x00				

P0.70 <sup>1</sup>	Absolute encoder mode setting	Setting range	Default	Unit	Available mode			
		0~1	0	-	P	S	T	F

This parameter is used to modify the operation mode of the multi-turn absolute encoder. When the matching encoder for the motor is multi-turn absolute encoder, it will be taken as single-turn encoder by default; when multi-turn function is needed, it is necessary to prepare the spare battery and set it as the multi-turn modes.

Setting value	Method
【0】	Single circle
1	Multiple circles

P0.70 <sup>1</sup>	Data size	16bit	Data format	DEC				
	Modbus address	1140,1141	CANopen address	0x2046, 0x00				

P0.71*	Absolute encoder clearing	Setting range	Default	Unit	Available mode			
		0~1	0	-	P	S	T	F

Clear the multi-turn absolute encoder via this parameter. The multi-turn data of the encoder will be cleared after this parameter is enabled while the single-turn data will remain unchanged, however, the absolute position feedback of the system will be cleared.

**Note:** When using multi-turn absolute encoder, after machinery installation is done, please clear the absolute encoder after detecting absolute zero position of the mechanic system at initial power up.

P0.71*	Data size	16bit	Data format	DEC				
	Modbus address	1142,1143	CANopen address	0x2047, 0x00				

## 6.1.4 Control mode switching

P0.90	Max. speed limit of the control mode switching	Setting range	Default	Unit	Available mode		
		1~1000	100	r/min	P	S	T

Set the max. running speed during positioning when switching from speed mode or torque mode to position mode under position/speed, position/torque compound mode.

P0.90	Data size	16bit	Data format		DEC		
	Modbus address	1180,1181	CANopen address		0x205A, 0x00		

P0.91	Positioning reference of the control mode switching	Setting range	Default	Unit	Available mode		
		-1~2 <sup>23</sup>	-1	pulse	P	S	T

Set the motor positioning position after control mode switching is done when switching from speed mode or torque mode to position mode under position/speed, position/torque compound mode.

**Note:**

- After the switching, the reference point of the received position command is the setting value of the parameter and the unit is the unit of the encoder pulse.
- When it is set to -1 and switches from speed mode to position mode, there is no positioning action and it will switch at the current position.
- If the mechanical angle of P3.50 is less than 0.5°, then the positioning precision is ±P3.50; if the angle is higher than 0.5°, then the positioning precision is the pulse number of ±0.5°.

P0.91	Data size	32bit	Data format		DEC		
	Modbus address	1182,1183	CANopen address		0x205B, 0x00		

P0.92	Exiting mode of the position mode switching	Setting range	Default	Unit	Available mode		
		0~1	0	-	P	S	T

When P0.03 is 3 or 4, this parameter is used to set the exiting mode when the position mode can be switched to other control modes.

Setting value	Exiting mode			
【0】	Switch from position mode to other mode after positioning			
1	Switch to other mode when the control mode switching command is invalid			

P0.92	Data size	32bit	Data format		DEC		
	Modbus address	1184,1185	CANopen address		0x205C, 0x00		

## 6.2 Autotuning control parameters (P1)

### 6.2.1 Inertia identification (Automatic gain)

P1.00	On-line automatic	Setting range	Default	Unit	Available mode		
-------	-------------------	---------------	---------	------	----------------	--	--

	setting	0~1	0	%	P	S	T	F
This parameter is used to set whether to adjust the inertia ratio and adjust the gain automatically.								
Setting value		Meaning						
【0】		Invalid						
P1.00	Data size	16bit	Data format		DEC			
	Modbus address	1200,1201	CANopen address		0x2100,0x00			

P1.01	1 <sup>st</sup> inertia ratio	Setting range	Default	Unit	Available mode			
		0~10000	250	%	P	S	T	F

Rotation inertia ratio = Load inertia /motor rotation inertia x 100%,

If P1.01 is set correctly, the setting unit of P2.00 and P2.05 is Hz.

If P1.01 is larger than the actual value, the speed loop gain unit will increase, and if it is smaller than the actual value, the speed loop gain unit will decrease.

If the online adjustment is valid, the real time inertia ratio will be updated to P1.01 and saved into EEPROM every 30 minutes.

P1.01	Data size	16bit	Data format	DEC			
	Modbus address	1202,1203	CANopen address	0x2101,0x00			

P1.02	2 <sup>nd</sup> inertia ratio	Setting range	Default	Unit	Available mode			
		0~10000	250	%	P	S	T	F

The definition is the same as P1.01.

**Note:** The automatic online gain adjustment is invalid for this parameter.

P1.02	Data size	16bit	Data format	DEC			
	Modbus address	1204,1205	CANopen address	0x2102,0x00			

P1.03	Machine rigidity setting	Setting range	Default	Unit	Available mode			
		0~31	13	-	P	S	T	F

The bigger the value is the faster response and higher rigidity and easier vibration. In stable system, higher rigidity setting makes fast response.

Mechanical structure	Rigid set
Big handling, transmission equipment	0~13
Belt drive mechanism	5~16
Ball screw + Belt drive	5~16
Manipulator	15~22
Direct ball screw or rigid bodies	18~25
P1.03	Data size

	Modbus address	1206,1207	CANopen address	0x2103,0x00
--	----------------	-----------	-----------------	-------------

P1.04	Inertia offline setting	Setting range	Default	Unit	Available mode			
		0~1	0	-	P	S	T	F

The load inertial ratio of motor rotation inertia can be gained by setting this parameter. After setting the inertia identification, the motor will run 6 cycles to carry out the inertia identification.

In each cycle, the motor will run at the mode of P1.05, the maximum rotation cycles are determined by P1.06 and the ACC command time is determined by P1.07.

Setting value	Function
【0】	Inertia identification switch off
1	Inertia identification switch on

**Note:**

1. The motor speed during identification will be faster if the value of P1.06 and P1.07 are bigger.
2. Refer to chapter 10.1 if the drive reports Er25-7.
3. This parameter is invalid in the servo enabling state.

P1.04*	Data size	16bit	Data format	DEC
	Modbus address	1208,1209	CANopen address	0x2104,0x00

P1.05	Operation mode of inertia identification	Setting range	Default	Unit	Available mode			
		0~3	0	-	P	S	T	F

This parameter is used to set the operation mode of inertia identification.

Setting value	Function
【0】	Forward rotation and then reverse rotation
1	Forward rotation
2	Reverse rotation
3	Reverse rotation and then forward rotation

P1.05	Data size	16bit	Data format	DEC
	Modbus address	1210,1211	CANopen address	0x2105,0x00

P1.06	Range of inertia identification	Setting range	Default	Unit	Available mode			
		0.2~20	2.0	r	P	S	T	F

In the position mode, this parameter is used to limit the maximum circle number in each cycle.

P1.06	Data size	16bit	Data format	DEC
	Modbus address	1212,1213	CANopen address	0x2106,0x00

P1.07	Time constant of inertia identification ACC time	Setting range	Default	Unit	Available mode			
		2~1000	200	ms	P	S	T	F

This parameter is used to set the motor ACC time during the inertia identification. If the load

inertia is large, the ACC time can be set to a large value to avoid the overload alarm.																				
P1.07	Data size	16bit	Data format		DEC															
	Modbus address	1214,1215	CANopen address		0x2107,0x00															
P1.08	Speed level of inertia identification	Setting range	Default	Unit	Available mode															
		0~3	1	-	P S T F															
This parameter is used to set the speed level of inertia identification. The larger the setting value, the faster the response and larger fluctuation of the presumption value. The presumption result can be saved every 30 minutes.																				
<table border="1"> <thead> <tr> <th>Setting value</th><th>Function</th><th>Meaning</th></tr> </thead> <tbody> <tr> <td>0</td><td>No change</td><td>Stop the presumption of load characteristic</td></tr> <tr> <td>【1】</td><td>No change basically</td><td>No change to the load characteristic</td></tr> <tr> <td>2</td><td>Change slowly</td><td>Slow change to the load characteristic</td></tr> <tr> <td>3</td><td>Change fast</td><td>Rapid change to the load characteristic</td></tr> </tbody> </table>						Setting value	Function	Meaning	0	No change	Stop the presumption of load characteristic	【1】	No change basically	No change to the load characteristic	2	Change slowly	Slow change to the load characteristic	3	Change fast	Rapid change to the load characteristic
Setting value	Function	Meaning																		
0	No change	Stop the presumption of load characteristic																		
【1】	No change basically	No change to the load characteristic																		
2	Change slowly	Slow change to the load characteristic																		
3	Change fast	Rapid change to the load characteristic																		
P1.08	Data size	16bit	Data format		DEC															
	Modbus address	1216,1217	CANopen address		0x2108,0x00															

## 6.2.2 Self-adaptive vibration control

P1.19	Valid resonance detection bit	Setting range	Default	Unit	Available mode
		0.2~100.0	5.0	%	P S T F
This parameter is used to set the sensitivity of the automatic detection on mechanical resonance frequency. The smaller the value, the higher sensitivity to the resonance.					
P1.19	Data size		Data format		DEC
	Modbus address		CANopen address		0x2113,0x00
P1.20	Resonance detection mode	Setting range	Default	Unit	Available mode
		0~7	0	-	P S T F

This parameter is used to set the working mode of resonance detection and the resonance frequency number presumed by self-adaptive notch filter as well as the action after presumption.

If the function is valid (1, 2, 3), the system will automatically collect data to conduct mechanical resonance frequency analysis and the result is saved in P1.21 and P1.22. Users can set the frequency of notch filter according to P1.21 and P1.22 to eliminate the mechanical resonance.

**Note:** The setting value is invalid after gain adjustment.

Setting value	Function	Meaning			
【0】	Invalid	All parameters related to notch filter remain unchanged			
1	1 notch filter valid	The parameters related to the 3 <sup>rd</sup> notch filter will be updated according to the self-adaptive result.			
2	2 notch filters valid	The parameters related to the 3 <sup>rd</sup> and 4 <sup>th</sup> notch filters will be updated according to the self-adaptive result.			
3	Resonance frequency test mode	Detect mechanical resonance frequency automatically but does not set the parameters related to notch filter.			
4	Notch filter parameters clear	Restore to the default values			
5	The 3 <sup>rd</sup> notch filter→ the 1 <sup>st</sup> notch filter	Copy the parameters of the 3 <sup>rd</sup> notch filter to the 1 <sup>st</sup> notch filter and then restore the parameter of the 3 <sup>rd</sup> notch filter to the default values			
6	The 4 <sup>th</sup> notch filter→ the 2 <sup>nd</sup> notch filter	Copy the parameters of the 4 <sup>th</sup> notch filter to the 1 <sup>st</sup> notch filter and then restore the parameter of the 4 <sup>th</sup> notch filter to the default values			
7	The 3 <sup>rd</sup> and 4 <sup>th</sup> notch filter→ the 1 <sup>st</sup> and 2 <sup>nd</sup> notch filter	Copy the parameters of the 3 <sup>rd</sup> and 4 <sup>th</sup> notch filter to the 1 <sup>st</sup> and 2 <sup>nd</sup> notch filter and then restore the parameter of the 3 <sup>rd</sup> and 4 <sup>th</sup> notch filter to the default values			
P1.20	Data size	16bit	Data format	DEC	
	Modbus address	1240,1241	CANopen address	0x2114,0x00	

P1.21*	1 <sup>st</sup> mechanical resonance frequency	Setting range	Default	Unit	Available mode			
		0~5000	5000	Hz	P	S	T	F
P1.22*	2 <sup>nd</sup> mechanical resonance frequency	Setting range	Default	Unit	Available mode			
		0~5000	5000	Hz	P	S	T	F

This parameter is used to display the resonance frequency. When P1.20 is set to "1", the system will detect the frequency of the max. resonance point and display it by function codes.

**Note:**

- Only when the speed reaches above 30r/min will the measuring value be correct.

2. This function is only for read and cannot be set. The user can set the frequency of notch filter according to the function code to remove the mechanical resonance.

3. 5000 indicates the resonance point is not found.

P1.21	Data size	16bit	Data format	DEC
	Modbus address	1242,1243	CANopen address	0x2115, 0x00
P1.22	Data size	16bit	Data format	DEC
	Modbus address	1244,1245	CANopen address	0x2116, 0x00

P1.23	1 <sup>st</sup> notch filter frequency	Setting range	Default	Unit	Available mode			
		50~5000	5000	Hz	P	S	T	F

This parameter is used to set the frequency of the 1<sup>st</sup> notch filter for suppressing resonance.

The notch filter can simulate the mechanical resonant frequency and thus suppressing the resonant frequency.

When this parameter is set to 5000, the function of notch filter will be invalid.

P1.23	Data size	16bit	Data format	DEC
	Modbus address	1246,1247	CANopen address	0x2117,0x00

P1.24	Q value of 1 <sup>st</sup> notch filter	Setting range	Default	Unit	Available mode			
		0.50~16.00	1.00	-	P	S	T	F

This parameter is used to set the Q value (quality factor) of the 1<sup>st</sup> notch filter

Q=Center frequency of the 1<sup>st</sup> notch filter/bandwidth of the notch. Generally, this parameter should remain in default value.

P1.24	Data size	16bit	Data format	DEC
	Modbus address	1248,1249	CANopen address	0x2118,0x00

P1.25	Depth selection of 1 <sup>st</sup> notch filter	Setting range	Default	Unit	Available mode			
		0~100	0	%	P	S	T	F

This parameter is used to set the amplitude attenuation rate of the 1<sup>st</sup> notch filter.

When the setting value increases, the notch filter depth becomes shallow and phase lag will be smaller.

P1.25	Data size	16bit	Data format	DEC
	Modbus address	1250,1251	CANopen address	0x2119,0x00

P1.26	Frequency of the 2 <sup>nd</sup> notch filter	Setting range	Default	Unit	Available mode			
		50~5000	5000	Hz	P	S	T	F

P1.27	Q value of the 2 <sup>nd</sup> notch filter	Setting range	Default	Unit	Available mode			
		0.50~16.00	1.00	-	P	S	T	F

P1.28	Depth selection of the	Setting range	Default	Unit	Available mode			
-------	------------------------	---------------	---------	------	----------------	--	--	--

	2 <sup>nd</sup> notch filter	0~100	0	%	P	S	T	F
Refer to P1.23, P1.24 and P1.25 for detailed parameters setting.								
P1.26	Data size	16bit	Data format			DEC		
	Modbus address	1252,1253	CANopen address			0x211A,0x00		
P1.27	Data size	16bit	Data format			DEC		
	Modbus address	1254,1255	CANopen address			0x211B,0x00		
P1.28	Data size	16bit	Data format			DEC		
	Modbus address	1256,1257	CANopen address			0x211C,0x00		
P1.29	Frequency of the 3 <sup>rd</sup> notch filter	Setting range		Default	Unit	Available mode		
		50~5000		5000	Hz	P	S	T F
P1.30	Q value of 3 <sup>rd</sup> notch filter	Setting range		Default	Unit	Available mode		
		0.50~16.00		1.00	-	P	S	T F
P1.31	Depth selection of the 3 <sup>rd</sup> notch filter	Setting range		Default	Unit	Available mode		
		0~100		0	%	P	S	T F
Refer to P1.23, P1.24 and P1.25 for detailed parameters setting.								
P1.29	Data size	16bit	Data format			DEC		
	Modbus address	1258,1259	CANopen address			0x211D,0x00		
P1.30	Data size	16bit	Data format			DEC		
	Modbus address	1260,1261	CANopen address			0x211E,0x00		
P1.31	Data size	16bit	Data format			DEC		
	Modbus address	1262,1263	CANopen address			0x211F,0x00		
P1.32	Frequency of the 4 <sup>th</sup> notch filter	Setting range		Default	Unit	Available mode		
		50~5000		5000	Hz	P	S	T F
P1.33	Q value of 4 <sup>th</sup> notch filter	Setting range		Default	Unit	Available mode		
		0.50~16.00		1.00	-	P	S	T F
P1.34	Depth selection of the 4 <sup>th</sup> notch filter	Setting range		Default	Unit	Available mode		
		0~100		0	%	P	S	T F
Refer to P1.23, P1.24 and P1.25 for detailed parameters setting.								
P1.32	Data size	16bit	Data format			DEC		
	Modbus address	1264,1265	CANopen address			0x2120,0x00		
P1.33	Data size	16bit	Data format			DEC		
	Modbus address	1266,1267	CANopen address			0x2121,0x00		
P1.34	Data size	16bit	Data format			DEC		
	Modbus address	1268,1269	CANopen address			0x2122,0x00		
P1.35	Vibration control mode	Setting range	Default	Unit	Available mode			

	of position command	0~2	0	-	P		F						
This parameter is used to set the switching mode of the filter used for vibration control.													
	Setting value	Function											
	【0】	The 1 <sup>st</sup> vibration control is valid											
	1	Switch between 1 and 2 according to VS-SEL											
	2	Automatic											
<b>Note:</b> When selecting by digital input terminals, it is necessary to configure one of P3.00~P3.09 with 0x11C or 0x01C (VS-SEL).													
Relation with COM:-													
0:OFF (the terminal is disconnected with COM-);													
1:ON (the terminal is connected with COM-).													
P1.35	Data size	16bit	Data format	DEC									
	Modbus address	1270,1271	CANopen address	0x2123,0x00									
P1.36	The 1 <sup>st</sup> vibration control frequency	Setting range	Default	Unit	Available mode								
		0.0~200.0	0.0	Hz	P		F						
It is used to set the frequency point used to suppress the vibration at the peak of the load.													
<b>Note:</b> Invalid if the setting value is below 1.0Hz.													
P1.36	Data size	16bit	Data format	DEC									
	Modbus address	1272,1273	CANopen address	0x2124,0x00									
P1.37	The 1 <sup>st</sup> vibration control filter factor	Setting range	Default	Unit	Available mode								
		0.00~1.00	1.00	-	P		F						
This parameter is used to set the filter factor of the 1 <sup>st</sup> vibration control filter.													
P1.37	Data size	16bit	Data format	DEC									
	Modbus address	1274,1275	CANopen address	0x2125,0x00									
P1.38	The 2 <sup>nd</sup> vibration control frequency	Setting range	Default	Unit	Available mode								
		0.0~200.0	0.0	Hz	P		F						
P1.39	The 2 <sup>nd</sup> vibration control filter factor	Setting range	Default	Unit	Available mode								
		0.00~1.00	1.00	-	P		F						
Please refer to P1.36 and P1.37 for the detailed information.													
P1.38	Data size	16bit	Data format	DEC									
	Modbus address	1276,1277	CANopen address	0x2126,0x00									
P1.39	Data size	16bit	Data format	DEC									
	Modbus address	1278,1279	CANopen address	0x2127,0x00									

## 6.3 Motor control parameters (P2)

### 6.3.1 Gain setting

P2.00	1 <sup>st</sup> speed gain	Setting range	Default	Unit	Available mode			
		0.1~3276.7	27.0	Hz	P	S	T	F

The responsiveness of the servo system speed loop is determined by the speed gain. When increase the value of P2.00, the speed response will be improved, but it may easily cause vibration and noise.

**Note:** If the inertia ratio is set correctly, the unit of P2.00 is Hz.

P2.00	Data size	16bit	Data format	DEC			
	Modbus address	1400,1401	CANopen address	0x2200,0x00			

P2.01	1 <sup>st</sup> speed integral time constant	Setting range	Default	Unit	Available mode			
		0.1~1000.0	21.0	ms	P	S	T	F

This parameter is used to set the integral time constant of the speed loop. Decreasing the setting value may improve the response, but it may easily cause vibration and noise. It should be noted particularly that when this parameter is set to 1000, it means the integral action is invalid.

P2.01	Data size	16bit	Data format	DEC			
	Modbus address	1402,1403	CANopen address	0x2201,0x00			

P2.02	1 <sup>st</sup> position gain	Setting range	Default	Unit	Available mode			
		0.0~3276.7	48.0	1/s	P			F

The responsiveness of servo system position loop is determined by the position gain. Increasing the setting value may improve the position responsiveness and shorten the positioning time, but it may easily cause vibration and noise.

P2.02	Data size	16bit	Data format	DEC			
	Modbus address	1404,1405	CANopen address	0x2202,0x00			

P2.03	1 <sup>st</sup> speed detection filter	Setting range	Default	Unit	Available mode			
		100~5000	5000	Hz	P	S	T	F

This parameter is used to set the 1<sup>st</sup> speed detection filter.

**Note:** 5000 means there is no filter. Setting this parameter to a small value may reduce motor noise and speed fluctuation, but it also lower down the responsiveness.

P2.03	Data size	16bit	Data format	DEC			
	Modbus address	1406,1407	CANopen address	0x2203,0x00			

P2.04	1 <sup>st</sup> torque filter	Setting range	Default	Unit	Available mode			
		0.00~25.00	0.84	ms	P	S	T	F

This parameter is used to set the time constant of torque filter.

P2.04	Data size	16bit	Data format		DEC			
	Modbus address	1408,1409	CANopen address		0x2204,0x00			

P2.05	2 <sup>nd</sup> speed gain	Setting range	Default	Unit	Available mode			
		0.0~3276.7	27.0	Hz	P	S	T	F
P2.06	2 <sup>nd</sup> speed integral time constant	Setting range	Default	Unit	Available mode			
		0.1~1000.0	1000.0	ms	P	S	T	F
P2.07	2 <sup>nd</sup> position gain	Setting range	Default	Unit	Available mode			
		0.0~3276.7	57.0	1/s	P			F
P2.08	2 <sup>nd</sup> speed detection filter	Setting range	Default	Unit	Available mode			
		100~5000	5000	Hz	P	S	T	F
P2.09	2 <sup>nd</sup> torque filter	Setting range	Default	Unit	Available mode			
		0.00~25.00	0.84	ms	P	S	T	F

There are two groups of parameters respectively for position gain, speed gain and speed integral time constant, speed detection filter and torque filter.

The definition of the function and content are the same with those of 1<sup>st</sup> group.

The user can select or switch between 1<sup>st</sup> gain and 2<sup>nd</sup> gain as needed. Please refer to the detailed information of P2.20 and P2.34.

P2.05	Data size	16bit	Data format		DEC			
	Modbus address	1410,1411	CANopen address		0x2205,0x00			
P2.06	Data size	16bit	Data format		DEC			
	Modbus address	1412,1413	CANopen address		0x2206,0x00			
P2.07	Data size	16bit	Data format		DEC			
	Modbus address	1414,1415	CANopen address		0x2207,0x00			
P2.08	Data size	16bit	Data format		DEC			
	Modbus address	1416,1417	CANopen address		0x2208,0x00			
P2.09	Data size	16bit	Data format		DEC			
	Modbus address	1418,1419	CANopen address		0x2209,0x00			

P2.10	Speed feed-forward gain	Setting range	Default	Unit	Available mode			
		0.0~100.0	0.0	%	P			F

This parameter is used to set the speed feed-forward gain. When the parameter is 100%, the retention pulse running at a certain speed will be almost zero; sudden ACC/DEC will enlarge overshooting.

P2.10	Data size	16bit	Data format		DEC			
	Modbus address	1420,1421	CANopen address		0x220A, 0x00			

P2.11	Speed feed-forward	Setting range	Default	Unit	Available mode			
-------	--------------------	---------------	---------	------	----------------	--	--	--

	filter time constant	0.00~64.00	0.50	ms	P			F
This parameter is used to set the speed feed-forward filter time constant.								
P2.11	Data size	16bit	Data format			DEC		
	Modbus address	1422,1423	CANopen address			0x220B,0x00		
P2.12	Torque feed-forward gain	Setting range 0.0~100.0	Default 0.0	Unit %	P	S		F
	This parameter is used to set the torque feed-forward gain. After the torque command calculated according to speed control command multiplies the rate of the parameter, add to the torque command from speed control step.							
Increasing torque feed-forward gain can improve response performance in ACC/DEC and reduce position deviation.								
P2.12	Data size	16bit	Data format			DEC		
	Modbus address	1424,1425	CANopen address			0x220C, 0x00		
P2.13	Torque feed-forward filter time constant	Setting range 0.00~64.00	Default 0.00	Unit ms	P	S		F
	This parameter is used to set the torque feed-forward filter time constant.							
P2.13	Data size	16bit	Data format			DEC		
	Modbus address	1426,1427	CANopen address			0x220D,0x00		
P2.14	The 1 <sup>st</sup> IPPI coefficient	Setting range 0~1000	Default 100	Unit %	P	S	T	F
	This parameter is used to set the 1 <sup>st</sup> IPPI coefficient.							
<b>Note:</b> IP control will be applied when it is set to 0 and PI control will be applied when it is set to 100.								
P2.14	Data size	16bit	Data format			DEC		
	Modbus address	1428, 1429	CANopen address			0x220E, 0x00		
P2.15	The 2 <sup>nd</sup> IPPI coefficient	Setting range 0~1000	Default 100	Unit %	P	S	T	F
	This parameter is used to set the 2 <sup>nd</sup> IPPI coefficient.							
<b>Note:</b> IP control will be applied when it is set to 0 and PI control will be applied when it is set to 100.								
P2.15	Data size	16bit	Data format			DEC		
	Modbus address	1430, 1431	CANopen address			0x220F, 0x00		

### 6.3.2 Gain switching

P2.20	2 <sup>nd</sup> gain setting	Setting range	Default	Unit	Available mode
-------	------------------------------	---------------	---------	------	----------------

		0~1	1	-	P	S	T	F
--	--	-----	---	---	---	---	---	---

This parameter is used to set the right adjustment.

Setting value	Mode
0	The 1 <sup>st</sup> gain is fixed. Gain switching invalid→PI action Gain switching valid→P action <b>Note:</b> 0x006 is the digital input low level valid and the high level valid is 0x106.
【1】	Valid between 1 <sup>st</sup> gain [P2.00~P2.04] and 2 <sup>nd</sup> gain [P2.05~P2.09].

P2.20	Data size	16bit	Data format	DEC
	Modbus address	1440,1441	CANopen address	0x2214,0x00

P2.22	Position control switching mode	Setting range	Default	Unit	Available mode		
		0~9	0	-	P		F

This parameter is used to set the triggering condition of gain switching during position control or full closed-loop control.

Setting value	Switching condition	Gain condition
【0】	1 <sup>st</sup> gain fixed	Be fixed in the 1 <sup>st</sup> gain [P2.00~P2.04]
1	2 <sup>nd</sup> gain fixed	Be fixed in the 2 <sup>nd</sup> gain [P2.05~P2.09]
2	Switching input with gain	Invalid: the 1 <sup>st</sup> gain Valid: the 2 <sup>nd</sup> gain
3	Large torque command	In the previous 1 <sup>st</sup> gain, if the absolute value of torque command exceed (degree+delay) [0.1%], it will switch to the 2 <sup>nd</sup> gain In the previous 2 <sup>nd</sup> gain, if the absolute value of torque command keeps below (level-lag) [0.1%] in the delay time, it will return to the 1 <sup>st</sup> gain
4	Large speed command	In the previous 1 <sup>st</sup> gain, if the absolute value of the speed command exceed (degree+delay) [r/min], it will switch to the 2 <sup>nd</sup> gain In the previous 2 <sup>nd</sup> gain, if the absolute value of the speed command keeps below (level-lag) [pulse] and such state in the delay time, it will return to the 1 <sup>st</sup> gain
5	Large position deviation	In the previous 1 <sup>st</sup> gain, if the absolute value of the position deviation exceed (degree+delay) [pulse], it will switch to the 2 <sup>nd</sup> gain In the previous 2 <sup>nd</sup> gain, if the absolute value of the position deviation keeps below (level-lag) [pulse] and such state in the delay time, it will return to the 1 <sup>st</sup> gain

		<b>Note:</b> The unit of level and lag [pulse] acts as encoder resolution unit during position control and as grating ruler resolution unit during full closed-loop control.
6	With position command	In the previous 1 <sup>st</sup> gain, if the position command is not 0, it will switch to the 2 <sup>nd</sup> gain In the previous 2 <sup>nd</sup> gain, if the 0 position command lasts in the delay time, it will return to the 1 <sup>st</sup> gain
7	Positioning not finished	In the previous 1 <sup>st</sup> gain, if the positioning is not finished, it will switch to the 2 <sup>nd</sup> gain In the previous 2 <sup>nd</sup> gain, if the state of positioning finished lasts in the delay time, it will return to the 1 <sup>st</sup> gain
8	Large actual speed	In the previous 1 <sup>st</sup> gain, if the absolute value of the actual speed exceed (degree+delay) [r/min], it will switch to the 2 <sup>nd</sup> gain In the previous 2 <sup>nd</sup> gain, if the absolute value of the actual speed keeps below (level-lag) [r/min] and such state in the delay time, it will return to the 1 <sup>st</sup> gain
9	With position command+actual speed	In the previous 1 <sup>st</sup> gain, if the position command is not 0, it will switch to the 2 <sup>nd</sup> gain In the previous 2 <sup>nd</sup> gain, if the 0 position command lasts in the delay time and the absolute value of actual speed is below (level-lag) [r/min], it will return to the 1 <sup>st</sup> gain

P2.22	Data size	16bit	Data format	DEC
	Modbus address	1444,1445	CANopen address	0x2216,0x00

P2.23	Delay time of position control switching	Setting range	Default	Unit	Available mode		
		0~10000	0	ms	P		F

In the position control, if set P2.22 to 3~9, when switching from the 2<sup>nd</sup> gain to the 1<sup>st</sup> gain, it is the time from meeting the trigger conditions to the actual switching.

P2.23	Data size	16bit	Data format	DEC
	Modbus address	1446,1447	CANopen address	0x2217,0x00

P2.24	Switching level of position control	Setting range	Default	Unit	Available mode		
		0~20000	0	Based on mode	P		F

In the position control, if set P2.22 to 3~5, 8, 9, it is necessary to set triggering condition of gain switching. The unit will vary with the switching mode and setting.

**Note:** Please set the degree  $\geq$  the lag

P2.24	Data size	16bit	Data format	DEC		
	Modbus address	1448,1449	CANopen address	0x2218,0x00		

P2.25	Switching delay of the position control	Setting range	Default	Unit	Available mode		
		0~20000	0	Based on mode	P		F

In the position control, if set P2.22 to 3~5, 8, 9, it is necessary to set switching conditions. The unit will vary with the switching mode and setting.

**Note:** Please set the degree<the delay, in the actual internal application, the delay=the degree

P2.25	Data size	16bit	Data format	DEC		
	Modbus address	1450,1451	CANopen address	0x2219,0x00		

P2.26	Switching time of position gain	Setting range	Default	Unit	Available mode		
		0~10000	0	ms	P		F

In position control, if the offset between P2.00 and P2.04 is large, setting this parameter can control the torque changing and vibration caused by increasing gain during switching from small gain to large gain. The parameter is invalid when the position gain is switched from a large value to a smaller one.

P2.26	Data size	16bit	Data format	DEC		
	Modbus address	1452,1453	CANopen address	0x221A,0x00		

P2.27	Switching mode of speed control	Setting range	Default	Unit	Available mode		
		0~5	0	-		S	

The trigger conditions of gain switching during speed control are as below:

Setting value	Switching condition	Gain condition
【0】	1 <sup>st</sup> gain fixed	Be fixed in the 1 <sup>st</sup> gain [P2.00~P2.04]
1	2 <sup>nd</sup> gain fixed	Be fixed in the 2 <sup>nd</sup> gain [ P2.05, P2.06, P2.08, P2.09]
2	Switching input with gain	Invalid: the 1 <sup>st</sup> gain Valid: the 2 <sup>nd</sup> gain
3	Torque command	In the previous 1 <sup>st</sup> gain, if the absolute value of the torque command exceed (degree+delay) [0.1%], it will switch to the 2 <sup>nd</sup> gain In the previous 2 <sup>nd</sup> gain, if the absolute value of the torque command keeps below (degree+delay)[0.1%] in the delay time, it will return to the 1 <sup>st</sup> gain
4	Speed command variable	In previous 1 <sup>st</sup> gain, if the absolute value of speed command variable exceed (degree+delay) [10r/min/s], it will switch to the 2 <sup>nd</sup> gain In the previous 2 <sup>nd</sup> gain, if the absolute value of the speed

		command variable keeps below (degree+delay) [10r/min/s] in the delay time, it will return to the 1 <sup>st</sup> gain
5	Speed command	In the previous 1 <sup>st</sup> gain, if the absolute value of the speed command exceed (degree+delay) [r/min/s], it will switch to the 2 <sup>nd</sup> gain In the previous 2 <sup>nd</sup> gain, if the absolute value of the speed command keeps below (degree+delay) [r/min/s] and in the delay time, it will return to the 1 <sup>st</sup> gain

**Note:** The parameter is invalid for the position gain. The actual position gain is always the 1st gain.

P2.27	Data size	16bit	Data format	DEC
	Modbus address	1454,1455	CANopen address	0x221B,0x00

P2.28	Delay time of speed control switching	Setting range	Default	Unit	Available mode		
		0~10000	0	ms	S		

In the speed control, if set P2.27 to 3~5, when switching from the 2<sup>nd</sup> gain to the 1<sup>st</sup> gain, it is the time from meeting the trigger conditions to the actual switching.

P2.28	Data size	16bit	Data format	DEC
	Modbus address	1456,1457	CANopen address	0x221C,0x00

P2.29	Switching level of speed control	Setting range	Default	Unit	Available mode		
		0~20000	0	To the mode	S		

In the speed control, if set P2.27 to 3~5, it is necessary to set triggering condition of gain switching. The unit will vary with the switching mode and setting.

**Note:** Please set the degree  $\geq$  the delay

P2.29	Data size	16bit	Data format	DEC
	Modbus address	1458,1459	CANopen address	0x221D,0x00

P2.30	Switching delay of the speed control	Setting range	Default	Unit	Available mode		
		0~20000	0	Based on mode	S		

In the speed control, if set P2.27 to 3~5, it is necessary to set switching conditions. The unit will be vary with the mode and setting.

**Note:** Please set the degree < the delay, in the actual application, the delay=the degree

P2.30	Data size	16bit	Data format	DEC
	Modbus address	1460,1461	CANopen address	0x221E,0x00

P2.31	Switching mode of torque control	Setting range	Default	Unit	Available mode		
		0~3	0	-	T		

The trigger conditions of gain switching during torque control are as below:

Setting	Switching	Gain condition
---------	-----------	----------------

value	condition	
【0】	1 <sup>st</sup> gain fixed	Be fixed in the 1 <sup>st</sup> gain [P2.00~P2.04]
1	2 <sup>nd</sup> gain fixed	Be fixed in the 2 <sup>nd</sup> gain [P2.05~P2.09]
2	Switching input with gain	Invalid: the 1 <sup>st</sup> gain Valid: the 2 <sup>nd</sup> gain
3	Torque command	In the previous 1 <sup>st</sup> gain, if the absolute value of the torque command exceed (degree+delay)[0.1%], it will switch to the 2 <sup>nd</sup> gain In the previous 2 <sup>nd</sup> gain, if the absolute value of the torque command keeps below (degree-delay) and such state in the delay time, it will return to the 1 <sup>st</sup> gain

**Note:** The parameter is invalid for the position gain. The actual position gain is the 1st gain.

P2.31	Data size	16bit	Data format	DEC
	Modbus address	1462,1463	CANopen address	0x221F,0x00

P2.32	Delay time of torque control switching	Setting range	Default	Unit	Available mode
		0~10000	0	ms	T

In torque control, if set P2.31 to 3, when switching from the 2<sup>nd</sup> gain to the 1<sup>st</sup> gain, it is the time from meeting the trigger conditions to the actual switching.

P2.32	Data size	16bit	Data format	DEC
	Modbus address	1464,1465	CANopen address	0x2220,0x00

P2.33	Switching level of torque control	Setting range	Default	Unit	Available mode
		0~20000	0	Based on mode	T

In the torque control, if set P2.31 to 3, it is necessary to set trigger condition of gain switching. The unit will vary with the mode and setting.

**Note:** Please set the degree  $\geq$  the delay

P2.33	Data size	16bit	Data format	DEC
	Modbus address	1466,1467	CANopen address	0x2221,0x00

P2.34	Switching delay of the torque control	Setting range	Default	Unit	Available mode
		0~20000	0	Based on mode	T

In the torque control, if set P2.31 to 3, it is necessary to set switching conditions. The unit will vary with the switching mode and setting.

**Note:** Please set the degree<the delay, in the actual application, the delay=the degree

P2.34	Data size	16bit	Data format	DEC
	Modbus address	1468,1469	CANopen address	0x2222,0x00

### 6.3.3 Special motor control

P2.41 <sup>2</sup>	Whether disturbances	Setting range	Default	Unit	Available mode
--------------------	----------------------	---------------	---------	------	----------------

	observer is valid	0~2	0	-	P	S	T	F
Set whether the disturbance observer is valid or not via this parameter.								
P2.41 <sup>2</sup>	Setting value	Role						
	【0】	Invalid						
	1	Disturbance observation						
	2	Disturbance compensation						
P2.41 <sup>2</sup>	Data size	16bit	Data format			DEC		
	Modbus address	1482, 1483	CANopen address			0x2229, 0x00		
P2.42	Compensation gain of disturbance observer	Setting range		Default	Unit	Available mode		
		0~100		0.0	%	P	S	F
This parameter is used to set the compensation gain of disturbance torque. Increasing the gain may improve the effect of suppressing disturbance impact but the noise may enhanced; it is necessary to use with P2.43 to find the best setting point. After setting P2.43, please increase the set value of P2.42.								
P2.42	Data size	16bit	Data format			DEC		
	Modbus address	1484,1485	CANopen address			0x222A,0x00		
P2.43	Cut-off frequency of the disturbance observer	Setting range		Default	Unit	Available mode		
		0~3000		200	Hz	P	S	F
This parameter is used to set the cut-off frequency of disturbance observer. Decreasing the set value can downgrade the noise; while increase the set value can reduce the delay of disturbance torque compensation, it is necessary to be used in combination with P2.42.								
P2.43	Data size	16bit	Data format			DEC		
	Modbus address	1486,148 87	CANopen address			0x222B,0x00		
P2.44	Torque command offset	Setting range		Default	Unit	Available mode		
		-500.0~500.0		0.0	%	P	S	T
This parameter is used to set the changing load compensation which is added to the torque command. It is usually be used in the vertical shaft application and other control modes except for the torque control mode.								
P2.44	Data size	16bit	Data format			DEC		
	Modbus address	1488,1489	CANopen address			0x222C,0x00		
P2.50 <sup>2</sup>	Full closed-loop vibration suppressor validness	Setting range		Default	Unit	Available mode		
		0~2		0	-			F

Set whether the speed detector is valid by this parameter

Setting value	Role
【0】	Invalid
1	Disturbance observation
2	Disturbance compensation

P2.50 <sup>2</sup>	Data size	16bit	Data format	DEC
	Modbus address	1500, 1501	CANopen address	0x2232, 0x00

P2.51	Cut-off frequency of full closed-loop vibration suppressor	Setting range	Default	Unit	Available mode
		1~500	100	Hz	P S T F

This parameter is used to set the cut-off frequency of full closed-loop vibration suppressor.

P2.51	Data size	16bit	Data format	DEC
	Modbus address	1502, 1503	CANopen address	0x2233, 0x00

P2.52	Compensation gain of full closed-loop vibration suppressor	Setting range	Default	Unit	Available mode
		0~1000	0	%	P S T F

This parameter is used to set the compensation gain of full closed-loop vibration suppressor.

P2.52	Data size	16bit	Data format	DEC
	Modbus address	1504, 1505	CANopen address	0x2234, 0x00

P2.60 <sup>2</sup>	Whether speed observer is valid	Setting range	Default	Unit	Available mode
		0~2	0	-	P S T F

Set whether speed observer is valid via this parameter.

Setting value	Role
【0】	Invalid
1	Speed observation
2	Speed compensation

P2.60 <sup>2</sup>	Data size	16bit	Data format	DEC
	Modbus address	1520, 1521	CANopen address	0x223C, 0x00

P2.61	Gain of the speed observer	Setting range	Default	Unit	Available mode
		1~1000	100	Hz	P S T F

This parameter is used to set the gain of the speed observer. Increasing the setting value may increase the response speed of the actual speed, but the vibration and noise may be raised too.

P2.61	Data size	16bit	Data format	DEC
	Modbus address	1522,1523	CANopen address	0x223D,0x00

P2.70	The cut-off speed of friction compensation	Setting range	Default	Unit	Available mode			
		0~1000	20	r/min	P	S	T	F

This parameter is used to set the cut-off speed of friction compensation.

P2.70	Data size	16bit	Data format			DEC		
	Modbus address	1540,1541	CANopen address			0x2246,0x00		

P2.71	Forward torque coefficient of friction compensation	Setting range	Default	Unit	Available mode			
		0~100	0	%(10 r/min)	P	S	T	F

Set the friction compensation value added to torque command when receiving the forward position command or speed command.

P2.71	Data size	16bit	Data format			DEC		
	Modbus address	1542,1543	CANopen address			0x2247,0x00		

P2.72	Negative torque coefficient of friction compensation	Setting range	Default	Unit	Available mode			
		-100~0	0	%(10 r/min)	P	S	T	F

Set friction compensation value added to the torque command when receiving negative position command or speed command.

P2.72	Data size	16bit	Data format			DEC		
	Modbus address	1544, 1545	CANopen address			0x2248, 0x00		

P2.73	Valid selection of friction compensation	Setting range	Default	Unit	Available mode			
		0~1	0	-	P	S	T	F

Set whether friction compensation is valid by this parameter

Setting value	Role
【0】	Invalid
1	Friction compensation

P2.73	Data size	16bit	Data format			DEC		
	Modbus address	1546, 1547	CANopen address			0x2249, 0x00		

## 6.4 I/O management parameters (P3)

### 6.4.1 Digital input/output

P3.00 <sup>1</sup>	Input configuration of digital input 1	Setting range	Default	Unit	Available mode			
		0x000~0x133	0x003	-	P	S	T	F

This parameter is used to select the configuration of the digital value 1 input function. It is a hex number.

0x \* —— : \* means the valid bit of the input electric level: 1: High valid; 0: Low valid

0x— \* \* : \* \* means the selected function, the detailed information is as below:

Signal name	Sign	Setting value		Available mode			
		High valid	Low valid				
Invalid	—	0x100	0x000	P	S	T	F
Forward direction drive disabled	POT	0x101	0x001	P	S	T	F
Reverse direction drive disabled	NOT	0x102	0x002	P	S	T	F
Servo enabling	SON	0x103	0x003	P	S	T	F
Alarm clearing	CLA	0x104	0x004	P	S	T	F
Control mode switching	MCH	0x105	0x005	P	S	T	
Gain switching	PLC	0x106	0x006	P	S	T	F
Retention pulse clear	RPC	0x107	0x007	P			F
Command pulse disabled	PLL	0x108	0x008	P			F
Torque limit switching	TLC	0x109	0x009	P	S		F
Internal speed command 1	SPD1	0x10A	0x00A		S	T	
Internal speed command 2	SPD2	0x10B	0x00B		S	T	
Internal speed command 3	SPD3	0x10C	0x00C		S		
Zero speed clamp	ZRS	0x10D	0x00D		S	T	
Speed command sign	S-SIGN	0x10E	0x00E		S		
Torque command sign	T-SIGN	0x10F	0x00F			T	
Internal position command 1	POS1	0x110	0x010	P			
Internal position command 2	POS2	0x111	0x011	P			
Internal position command 3	POS3	0x112	0x012	P			
Internal position command 4	POS4	0x113	0x013	P			
External fault	EXT	0x114	0x014	P	S	T	F
Inertia ratio switching	JC	0x115	0x015	P	S	T	F
E-stop	EMG	0x116	0x016	P	S	T	F
HOME switch input	HOME	0x117	0x017	P			
HOME trigger	HTRG	0x118	0x018	P			
Molecule 1 of electronic gear ratio	SC1	0x119	0x019	P			F
Molecule 2 of electronic gear ratio	SC2	0x11A	0x01A	P			F
Point control trigger	TRIG	0x11B	0x01B	P			
The vibration control switching input	VS-SEL	0x11C	0x01C	P			F
Fast stop	Q-STOP	0x11D	0x01D	P	S	T	F

Point control stop	PTP-ST	0x11E	0x01E	P			
Absolute position clear	PCLR	0x11F	0x01F	P			
Internal position command 5	POS5	0x120	0x020	P			
Internal position command 6	POS6	0x121	0x021	P			
Internal position command 7	POS7	0x122	0x022	P			
Forward jogging	FJOG	0x123	0x023	P			
Reverse jogging	RJOG	0x124	0x024	P			
High/low speed switching of jogging	JOGC	0x125	0x025	P			
Position lock or positioning 1	PCB1	0x126	0x026	P			
Position lock or positioning 2	PCB2	0x127	0x027	P			
Position lock or positioning 3	PCB3	0x128	0x028	P			
Position lock or positioning 4	PCB4	0x129	0x029	P			
Position lock or positioning 5	PCB5	0x12A	0x02A	P			
Position lock or positioning switching	PCBC	0x12B	0x02B	P			
Terminal JOG enabling	DJOG	0x12C	0x02C	P			
Gantry synchronization input clear	GIN	0x12D	0x02D	P			
Master gantry synchronization alignment sensor	GSM	0x12E	0x02E	P			
Slave gantry synchronization alignment sensor	GSS	0x12F	0x02F	P			
Dynamic braking relay feedback	DBS	0x130	0x030	P	S	T	F
Manual and automatic switching of turret	DAT	0x131	0x031	P			
Forward jogging of turret	DFJ	0x132	0x032	P			
Reverse jogging of turret	DRJ	0x133	0x033	P			

**Note:** The default value is the function selection corresponds to position mode.

P3.00 <sup>1</sup>	Data size	16bit	Data format	HEX			
	Modbus address	1600,1601	CANopen address	0x2300, 0x00			

P3.01 <sup>1</sup>	Input configuration of digital value 2	Setting range	Default	Unit	Available mode			
		0x000~0x133	0x00D	-	P	S	T	F
P3.02 <sup>1</sup>	Input configuration of digital value 3	Setting range	Default	Unit	Available mode			
		0x000~0x133	0x004	-	P	S	T	F
P3.03 <sup>1</sup>	Input configuration of digital value 4	Setting range	Default	Unit	Available mode			
		0x000~0x133	0x016	-	P	S	T	F
P3.04 <sup>1</sup>	Input configuration	Setting range	Default	Unit	Available mode			

	of digital value 5	0x000~0x133	0x019	-	P	S	T	F
P3.05 <sup>1</sup>	Input configuration of digital value 6	Setting range	Default	Unit	Available mode			
		0x000~0x133	0x01A	-	P	S	T	F
P3.06 <sup>1</sup>	Input configuration of digital value 7	Setting range	Default	Unit	Available mode			
		0x000~0x133	0x001	-	P	S	T	F
P3.07 <sup>1</sup>	Input configuration of digital value 8	Setting range	Default	Unit	Available mode			
		0x000~0x133	0x002	-	P	S	T	F
P3.08 <sup>1</sup>	Input configuration of digital value 9	Setting range	Default	Unit	Available mode			
		0x000~0x133	0x007	-	P	S	T	F
P3.09 <sup>1</sup>	Input configuration of digital value 10	Setting range	Default	Unit	Available mode			
		0x000~0x133	0x008	-	P	S	T	F

These parameters are used to set the input function of digital value 2~10, and they are hex numbers.

The setting method is the same as P3.00.

**Note:** The default value is the function selection corresponds to position mode.

P3.01 <sup>1</sup>	Data size	16bit	Data format	HEX
	Modbus address	1602, 1603	CANopen address	0x2301, 0x00
P3.02 <sup>1</sup>	Data size	16bit	Data format	HEX
	Modbus address	1604, 1605	CANopen address	0x2302, 0x00
P3.03 <sup>1</sup>	Data size	16bit	Data format	HEX
	Modbus address	1606, 1607	CANopen address	0x2303, 0x00
P3.04 <sup>1</sup>	Data size	16bit	Data format	HEX
	Modbus address	1608, 1609	CANopen address	0x2304, 0x00
P3.05 <sup>1</sup>	Data size	16bit	Data format	HEX
	Modbus address	1610, 1611	CANopen address	0x2305, 0x00
P3.06 <sup>1</sup>	Data size	16bit	Data format	HEX
	Modbus address	1612, 1613	CANopen address	0x2306, 0x00
P3.07 <sup>1</sup>	Data size	16bit	Data format	HEX
	Modbus address	1614, 1615	CANopen address	0x2307, 0x00
P3.08 <sup>1</sup>	Data size	16bit	Data format	HEX
	Modbus address	1616, 1617	CANopen address	0x2308, 0x00
P3.09 <sup>1</sup>	Data size	16bit	Data format	HEX
	Modbus address	1618, 1619	CANopen address	0x2309, 0x00

P3.10 <sup>1</sup>	Output configuration of digital value 1	Setting range	Default	Unit	Available mode			
		0x000~0x11F	0x001	-	P	S	T	F

This parameter is used to select the configuration of the digital value 1 output function. It is a

hex number.

0x \* ——: \* means valid bit of the input electric level: 1: High valid output; 0: Low valid output

0x— \* \* : \* \* means the selected function, the detailed information is as below:

Signal name	Sign	Setting value		Available mode			
		High valid	Low valid				
Invalid	—	0x100	0x000	P	S	T	F
Servo output ready	RDY	0x101	0x001	P	S	T	F
Servo operation output	RUN	0x102	0x002	P	S	T	F
Fault output	ALM	0x103	0x003	P	S	T	F
Reserved	RSV	0x104	0x004	P	S	T	F
External brake signal clear	BRK	0x105	0x005	P	S	T	F
Position command or not	PCMD	0x106	0x006	P			F
Positioning finished	PLR	0x107	0x007	P			F
Switching state of control mode	MCHS	0x108	0x008	P	S	T	
Speed matching	COIN	0x109	0x009		S	T	
Speed reaching	SR	0x10A	0x00A		S	T	
Speed limiting	SL	0x10B	0x00B	P	S	T	
Speed command or not	SCMD	0x10C	0x00C		S		
Speed zero output	ZSO	0x10D	0x00D	P	S	T	F
Torque limiting	LM	0x10E	0x00E	P	S	T	F
Zeroing finished	HEND	0x10F	0x00F	P			
Torque arrival	TRCH	0x110	0x010			T	
Position lock or positioning finished 1	PCO1	0x111	0x011	P			
Position lock or positioning finished 2	PCO2	0x112	0x012	P			
Position lock or positioning finished 3	PCO3	0x113	0x013	P			
Position lock or positioning finished 4	PCO4	0x114	0x014	P			
Position lock or positioning finished 5	PCO5	0x115	0x015	P			
Point arrival	PTPF	0x116	0x016	P			
Bit output 1	PTPO1	0x117	0x017	P			
Bit output 2	PTPO2	0x118	0x018	P			
Bit output 3	PTPO3	0x119	0x019	P			
Bit output 4	PTPO4	0x11A	0x01A	P			
Bit output 5	PTPO5	0x11B	0x01B	P			
Bit output 6	PTPO6	0x11C	0x01C	P			

	Bit output 7	PTPO7	0x11D	0x01D	P			
	Gantry synchronization output clear	GSC	0x11E	0x01E	P			
	Dynamic braking relay control	DBRC	0x11F	0x01F	P	S	T	F

**Note:** The default value is the function selection corresponds to position mode.

P3.10 <sup>1</sup>	Data size	16bit	Data format		HEX			
	Modbus address	1620, 1621	CANopen address		0x230A, 0x00			

P3.11 <sup>1</sup>	Output configuration of digital value 2	Setting range	Default	Unit	Available mode			
		0x000~0x11F	0x003	-	P	S	T	F
P3.12 <sup>1</sup>	Output configuration of digital value 3	Setting range	Default	Unit	Available mode			
		0x000~0x11F	0x007	-	P	S	T	F
P3.13 <sup>1</sup>	Output configuration of digital value 4	Setting range	Default	Unit	Available mode			
		0x000~0x11F	0x00D	-	P	S	T	F
P3.14 <sup>1</sup>	Output configuration of digital value 5	Setting range	Default	Unit	Available mode			
		0x000~0x11F	0x005	-	P	S	T	F
P3.15 <sup>1</sup>	Output configuration of digital value 6	Setting range	Default	Unit	Available mode			
		0x000~0x11F	0x00E	-	P	S	T	F

These parameters are used to set the output function of digital value 2~6, and they are hex numbers.

The setting method is the same as P3.10.

**Note:** The default value is the function selection corresponds to position mode.

P3.11 <sup>1</sup>	Data size	16bit	Data format		HEX			
	Modbus address	1622, 1623	CANopen address		0x230B, 0x00			
P3.12 <sup>1</sup>	Data size	16bit	Data format		HEX			
	Modbus address	1624, 1625	CANopen address		0x230C, 0x00			
P3.13 <sup>1</sup>	Data size	16bit	Data format		HEX			
	Modbus address	1626, 1627	CANopen address		0x230D, 0x00			
P3.14 <sup>1</sup>	Data size	16bit	Data format		HEX			
	Modbus address	1628, 1629	CANopen address		0x230E, 0x00			
P3.15 <sup>1</sup>	Data size	16bit	Data format		HEX			
	Modbus address	1630, 1631	CANopen address		0x230F, 0x00			

P3.16	DI capture encoder function configuration	Setting range	Default	Unit	Available mode			
		0~0x30A	0x000	-	P	S	T	F

DI capture setting, 1~10 corresponds to capture port DI1~DI10, add 256 to the corresponding value of falling edge capture, add 512 to the rising edge capture, Add 768 to the corresponding

value of both rising edge capture and falling edging capture.				
---	--	--	--	--

value of both rising edge capture and falling edging capture.				
P3.16	Data size Modbus address	16bit 1632, 1633	Data format CANopen address	DEC 0x2310, 0x00


#### 6.4.2 Analog input / output adjustment

P3.20	Offset of analog input 1	Setting range	Default	Unit	Available mode		
		-10.000~10.000	0.000	V	S		

This parameter can be used to adjust the analog input 1 to improve the effective accuracy of the analog input.

Due to zero drift of the AI devices or induced voltage of ambient environment and other reasons, the actual corresponding quantity of AI may deviate from the expected value, and such deviation can be eliminated by setting the offset of AI.

The meaning of the analog offset voltage is shown in below figure:

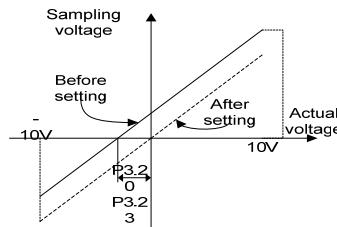


For example, after analog input 1 command terminal of the drive is connected with analog reference signal, then even if the analog reference signal is 0, the voltage value of analog input 1 (R1.05) displayed by the panel will be 0.02V, P3.20 should be set to 0.02 at this time. The drive will automatically subtract 0.02V from the analog input value received. If the analog input 2 voltage displayed by the panel is -0.02V, then parameter P3.20 should be set to -0.02. The drive will automatically add 0.02V to the analog input value received and the value displayed by the panel will change at the same time.

P3.20	Data size Modbus address	32bit 1640,1641	Data format CANopen address	DEC 0x2314,0x00
	Filter of analog input 1	Setting range 0.0~1000.0	Default 1.0	Unit ms

P3.21	Filter of analog input 1	Setting range	Default	Unit	Available mode		
		0.0~1000.0	1.0	ms	S		

This parameter is used to set the time constant of the first order low-pass filter corresponds to analog input 1. Setting this parameter can smooth the command changing when the analog input changes violently. Please refer to the figure below:

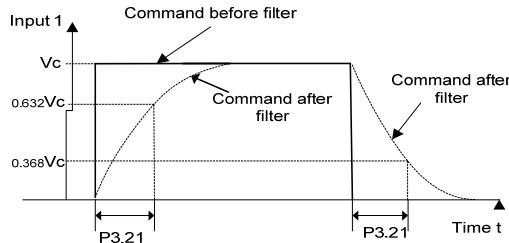

P3.21	Data size	16bit	Data format	DEC
	Modbus address	1642,1643	CANopen address	0x2315,0x00

P3.22	Voltage protection of analog input 1	Setting range	Default	Unit	Available mode			
		0.000~10.000	0.000	V	P	S	T	F

This parameter is used to set the overvoltage protection of analog input 1.

If the absolute value of R1.05 exceeds the setting value, the system will report fault.

**Note:**

1. The default value 0 means no overvoltage protection;
2. The input voltage should be no more than 10V, otherwise damage may occur to the drive.

P3.22	Data size	32bit	Data format	DEC
	Modbus address	1644,1645	CANopen address	0x2316,0x00

P3.23	Offset of analog input 2	Setting range	Default	Unit	Available mode			
		-10.000~10.000	0.000	V	P	S	T	F

This parameter can be used to adjust the analog input 2 to improve the effective accuracy of analog input.

The setting method is the same with P3.20.

P3.23	Data size	32bit	Data format	DEC
	Modbus address	1646,1647	CANopen address	0x2317,0x00

P3.24	Filter of analog input 2	Setting range	Default	Unit	Available mode			
		0.0~1000.0	1.0	ms	P	S	T	F

This parameter is used to set the time constant of the first order low-pass filter corresponds to the command . Setting this parameter can smooth the changing of actual output command when the command changes violently. Please refer to the figure below:

P3.24	Data size	16bit	Data format	DEC	
	Modbus address	1648,1649	CANopen address	0x2318,0x00	

P3.25	Voltage protection of analog input 2	Setting range	Default	Unit	Available mode				
		0.000~10.000	0.000	V	P	S	T	F	

This parameter is used to set the overvoltage protection value of analog input 2.

**Note:**

1. The default value 0 means no overvoltage protection;
2. The input voltage should be no more than 10V, otherwise damage may occur to the drive.

P3.25	Data size	32bit	Data format	DEC				
	Modbus address	1650,1651	CANopen address	0x2319,0x00				

P3.26 <sup>1</sup>	Function selection of analog input 1	Setting range	Default	Unit	Available mode				
		0~7	0	-	P	S	T	F	
P3.27 <sup>1</sup>	Function selection of analog input 2	Setting range	Default	Unit	Available mode				
		0~7	3	-	P	S	T	F	

Select the analog input channel function via this parameter

Setting value	Definition	Unit		
0	Invalid	-		
1	Speed limit	r/min		
2	Forward torque limit	0.1%		
3	Speed command	r/min		
4	Torque command	0.1%		
5	Speed compensation	r/min		
6	Torque compensation	0.1%		
7	Negative torque limit	0.1%		
P3.26 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1652, 1653	CANopen address	0x231A, 0x00
P3.27 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1654, 1655	CANopen address	0x231B, 0x00

P3.28	Analog speed	Setting range	Default	Unit	Available mode
-------	--------------	---------------	---------	------	----------------

	compensation gain	0.0~100.0	0.0	%	P	S	T	F
--	-------------------	-----------	-----	---	---	---	---	---

Set the analog speed compensation gain via this parameter.

P3.28	Data size	16bit	Data format	DEC				
	Modbus address	1656, 1657	CANopen address	0x231C, 0x00				

P3.29	Analog torque compensation gain	Setting range	Default	Unit	Available mode			
	0.0~100.0	0.0	%	P S T F				

Set the analog torque compensation gain via this parameter.

P3.29	Data size	16bit	Data format	DEC				
	Modbus address	1658, 1659	CANopen address	0x231D, 0x00				

P3.30 <sup>1</sup>	AO 1 selection	Setting range	Default	Unit	Available mode			
		0~19	0	-	P	S	T	F

P3.32 <sup>1</sup>	AO 2 selection	Setting range	Default	Unit	Available mode			
		0~19	0	-	P	S	T	F

This group of parameters is used to select the monitoring parameters to be outputted in analog form.

Setting value	Definition	Unit	
【0】	Invalid	-	
1	Motor speed	r/min	
2	Speed of position command	r/min	
3	Internal position command	pulse(Encoder unit)	
	Speed command	r/min	
5	Torque command	0.1%	
6	Torque feedback	0.1%	
	Command position deviation	pulse(User unit)	
8	Encoder position deviation	pulse(Encoder unit)	
9	Full closed-loop position deviation	pulse(Grating ruler unit)	
10	Hybrid control deviation	pulse(User unit)	
11	DC voltage of main circuit	V	
12	Positive torque limit	0.1%	
13	Negative torque limit	0.1%	
14	Speed limit value	r/min	
15	Inertia ratio	%	
16	Analog speed command*	V	

	17	Analog torque command*	V	
	18	Analog input 3*	V	
	19	Drive temperature	°C	


**Note:** When P3.31, P3.33 is set to 1000, the analog speed command, analog torque command and analog input 3 outputs the voltage value inputted from the analog input terminal at any time.

P3.30 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1660, 1661	CANopen address	0x231E, 0x00
P3.32 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1664, 1665	CANopen address	0x2320, 0x00

P3.31	Voltage gain of AO 1	Setting range 0~214748364	Default 0	Unit [P3.30 Unit]/V	P S T F
P3.33	Voltage gain of AO 2	Setting range 0~214748364	Default 0	Unit [P3.32 Unit]/V	P S T F

These parameters are used to set the gain of analog output. The detailed unit is relative to P3.30 and P3.32.

**Example:** Suppose the actual speed is outputted from the AO1 terminal, 10V corresponds to a speed of 3000r/min and 0V corresponds to 0. Then set P3.30=1, P3.31=300, the relation between the actual speed reference and output voltage is shown as below:

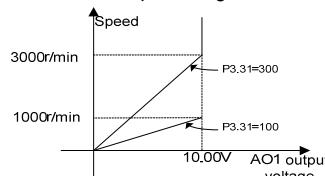

**Note:**

- If the actual output speed is more than 3000r/min, AO1 output is 10V. Please select the gain according to the actual range of the parameter.
- When P3.30 and P3.32 select other functions, the gain setting is the same.

P3.31	Data size	32bit	Data format	DEC
	Modbus address	1662, 1663	CANopen address	0x231F, 0x00
P3.33	Data size	32bit	Data format	DEC
	Modbus address	1666, 1667	CANopen address	0x2321, 0x00

P3.34	Offset voltage of AO1	Setting range	Default	Unit	Available mode			
		-10.000~10.000	0.000	V	P	S	T	F
P3.35	Offset voltage of AO2	Setting range	Default	Unit	Available mode			
		-10.000~10.000	0.000	V	P	S	T	F

This parameter can be used to adjust the AO1 and AO2 to regulate the actual value of analog output voltage.

Actual value of analog output voltage = Original value of analog output voltage + Offset value of analog output voltage

P3.34	Data size	32bit	Data format		DEC			
	Modbus address	1668,1669	CANopen address		0x2322,0x00			
P3.35	Data size	32bit	Data format		DEC			
	Modbus address	1670,1671	CANopen address		0x2323,0x00			
P3.36 <sup>1</sup>	Analog output monitor setting		Setting range	Default	Unit	Available mode		
			0~2	0	-	P	S	T

This parameter is used to set the output mode and voltage range of the analog output.

Setting value	Output mode
【0】	Voltage output with sign(-10V~10V)
1	Absolute voltage output (0V~10V)
2	Voltage output with zero offset (0V~10V, 5V center)

P3.36 <sup>1</sup>	Data size	16bit	Data format		DEC			
	Modbus address	1672,1673	CANopen address		0x2324,0x00			

#### 6.4.3 Digital input / output settings

P3.40 <sup>1</sup>	Travel limit switch blocked	Setting range	Default	Unit	Available mode			
		0~2	1	-	P	S	T	F

This parameter is used to set whether the digital input configured as forward drive disabling (0x001 or 0x101) and reverse drive disabling (0x002 or 0x102) is valid or not. If the function of the travel limit switch needs to be blocked, this parameter can do the trick.

Setting value	Function
0	Travel limit switch is normal
【1】	Travel limit switch is disabled
2	Ultralimit fault

**Note:** When the travel limit switch is normal and the digital input configured as forward drive disabling is active, the motor will stop immediately and cannot continue to run forward, but it is able to receive the reverse running command.

P3.40 <sup>1</sup>	Data size	16bit	Data format		DEC			
	Modbus address	1680,1681	CANopen address		0x2328,0x00			

P3.41 <sup>1</sup>	E-stop switch blocked	Setting range	Default	Unit	Available mode			
		0~1	1	-	P	S	T	F

This parameter is used to set whether digital input configured as E-stop (0x016 or 0x116) is valid or not. If the function of the E-stop needs to be blocked, this parameter can do the trick.

Setting value	Function
0	E-stop is normal
【1】	E-stop is disabled

If the digital input set as E-stop is active, then Er10-4 will occur.

**Note:**

1. If Er10-4 occurs, the servo drive will stop at the stopping mode set by P4.30.
2. Clearance of Er10-4: Please ensure there is no danger, and then clear the alarm signal (disable the digital input configured as E-stop). After clearing the alarm displayed, it is necessary to enable the servo drive again to operate the servo system.

P3.41 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1682,1683	CANopen address	0x2329,0x00

P3.43 <sup>1</sup>	Digital input filter	Setting range	Default	Unit	Available mode			
		1~800	1	0.125ms	P	S	T	F

This parameter is used to set the filter time of the digital input.

**Note:** The parameter works alone for 10 digital inputs.

P3.43 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1686,1687	CANopen address	0x232B,0x00

P3.44	Command pulse input invalid setting disabled	Setting range	Default	Unit	Available mode			
		0~1	0	-	P			F

This parameter can set whether the digital input configured as command pulse disabling (0x008 or x0108) among P3.00~P3.09 is valid or not. If command pulse disabling function needs to be blocked, this parameter will do the trick.

0:Valid; 1:Invalid

P3.44	Data size	16bit	Data format	DEC
	Modbus address	1688,1689	CANopen address	0x232C,0x00

P3.45 <sup>1</sup>	Clear mode of retention pulse	Setting range	Default	Unit	Available mode			
		0~1	1	-	P			F

This parameter is used to set valid mode of the digital input configured as retention pulse clear (0x007 or 0x107) among P3.00~P3.09.

Setting value	Function
0	ON Level clear
【1】	Rising edge clear

P3.45 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1690,1691	CANopen address	0x232D,0x00

	Modbus address	1690,1691	CANopen address	0x232D,0x00		
--	----------------	-----------	-----------------	-------------	--	--

P3.50	Range of position arrival	Setting range	Default	Unit	Available mode		
		0~262144	100	pulse	P		F

This parameter is used to set the range of position arrival. When the deviation between the position feedback pulse and position command pulse is in this range, it indicates position arrival.

P3.50	Data size	32bit	Data format		DEC		
	Modbus address	1700,1701	CANopen address		0x2332,0x00		

P3.51	Output mode of position arrival	Setting range	Default	Unit	Available mode		
		0~4	0	-	P		F

This parameter can be used to set the condition for the position arrival output signal and the action mode after output..

Setting value	Output mode				
【0】	Output is valid if the position deviation is within the range of P3.50				
1	Output is valid when there is no position command and the position deviation is within the range of P3.50.				
2	Output is valid when when there is no position command, the zero speed detection signal is valid and position deviation is within the range of P3.50.				
3	Output is valid when transiting from the position command to no position command and the position deviation is within the range of P3.50. And then, valid state of output continues until passing the time set by P3.52, after that, updates the position arrival output state according to the position command and the position deviation.				
4	Output is valid when transiting from position command to no position command while position deviation is within P3.50. Thereafter, the valid state of output continues until passing the set time by P3.52.				

P3.51	Data size	16bit	Data format		DEC		
	Modbus address	1702,1703	CANopen address		0x2333,0x00		

P3.52	Hold time of position arrival output terminal	Setting range	Default	Unit	Available mode		
		0~30000	0	ms	P		F

This parameter is used to set the retention time of position arrival output terminal.

Setting value	Action				
【0】	Hold time is infinite, continuous valid state to the next position command position				
1~30000	Valid only within the setting value [ms]. If position command is received during hold time, it will change to invalid state immediately.				

P3.52	Data size	16bit	Data format		DEC			
	Modbus address	1704,1705	CANopen address		0x2334,0x00			

P3.53	Speed matching range	Setting range	Default	Unit	Available mode			
		10~20000	50	r/min	P	S	T	F

This parameter is used to set the detection condition of speed matching output.

If the difference between the speed command and the motor speed is below the setting value, then the output state of the speed matching is valid.

The threshold of the speed matching when there is 10r/min lag:

Speed matching output: Invalid → Valid threshold: (P3.53 – 10)r/min

Valid → The critical value of invalid: (P3.53 + 10) r/min

P3.53	Data size	16bit	Data format		DEC			
	Modbus address	1706,1707	CANopen address		0x2335,0x00			

P3.54	Speed reaching range	Setting range	Default	Unit	Available mode			
		10~20000	1000	r/min	P	S	T	F

This parameter is used to set the detection condition for speed reaching output. If the transient motor speed exceeds the setting value, the output is valid. There is 10r/min lag in detection.

P3.54	Data size	16bit	Data format		DEC			
	Modbus address	1708,1709	CANopen address		0x2336,0x00			

P3.55	Zero speed range	Setting range	Default	Unit	Available mode			
		10~20000	50	r/min	P	S	T	F

This parameter is used to set the detection condition for speed zero output. When the absolute value of motor speed is within this range, it is deemed as zero speed and the zero speed output signal will become valid. There is 10r/min lag in detection.

P3.55	Data size	16bit	Data format		DEC			
	Modbus address	1710,1711	CANopen address		0x2337,0x00			

P3.56	Locked time of servo after braking	Setting range	Default	Unit	Available mode			
		0~1000	50	ms	P	S	T	F

This parameter is used to set the locked time of the servo after braking in the locked state. The servo is OFF in the locked state, the digital output state configured as external brake signal clear is invalid. At this time, the servo will continue to be locked for a period of time so that the motor will not rotate during the action of the relay.

P3.56	Data size	16bit	Data format		DEC			
	Modbus address	1712,1713	CANopen address		0x2338,0x00			

P3.57	Braking delay of the	Setting range	Default	Unit	Available mode			
-------	----------------------	---------------	---------	------	----------------	--	--	--

	electromagnetic brake	0~30000	500	ms	P	S	T	F
--	-----------------------	---------	-----	----	---	---	---	---

This parameter is used to set the braking delay time of the electromagnetic brake. When the servo is OFF or alarm is reported in running state, it indicates the speed may be too fast, so it will delay for a period time before rendering the digital output signal configured as external brake signal clear (0x005 or 0x105) invalid. If the motor speed drops below the set value of P3.58 during the delay period, the output of external brake signal clear will be invalid in advance.

P3.57	Data size	16bit	Data format		DEC			
	Modbus address	1714,1715	CANopen address		0x2339,0x00			

P3.58 <sup>1</sup>	Motor speed setting during brake clear	Setting range	Default	Unit	Available mode			
		0~1000	30	r/min	P	S	T	F

This parameter is used to set the motor speed threshold value when brake clears.

P3.58 <sup>1</sup>	Data size	16bit	Data format		DEC			
	Modbus address	1716,1717	CANopen address		0x233A,0x00			

P3.59	Torque arrival range	Setting range	Default	Unit	Available mode			
		5.0~300.0	50.0	%				T

This parameter is used to set the detection condition for torque arrival output. If the motor torque feedback exceeds this setting value, the torque arrival function output is valid. There is 5% lag in detection.

P3.59	Data size	16bit	Data format		DEC			
	Modbus address	1718,1719	CANopen address		0x233B,0x00			

#### 6.4.4 Analog input 3 adjustment

P3.70 <sup>1</sup>	Analog input 3 function	Setting range	Default	Unit	Available mode			
		0~7	4	-	P	S	T	F

This parameter is used to set the function of analog input 3.

Setting value	Definition	Unit
0	Invalid	-
1	Speed limit	r/min
2	Torque limit * <sup>1</sup>	%
3	Speed command * <sup>2</sup>	r/min
【4】	Torque command	%
5	Speed compensation	r/min
6	Torque compensation	%
7	Negative-direction torque limit	%

**Note:**

\*<sup>1</sup> If P3.70 is 2 and P0.09 is 0 or 4, the analog input 3 corresponds to the positive torque limit internally and P0.62~P0.65, P3.23~P3.25 correspond to the negative torque limit internally.

\*<sup>2</sup> If P3.70 is 3, P0.42~P0.45, P3.20~P3.22 are invalid.

P3.70 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1740,1741	CANopen address	0x2346,0x00

P3.71	Zero drift of analog input 3	Setting range	Default	Unit	Available mode			
		-10.000~10.000	0.000	V	P	S	T	F

The zero drift voltage of analog input 3.

P3.71	Data size	32bit	Data format	DEC
	Modbus address	1742,1743	CANopen address	0x2347,0x00

P3.72	Dead zone of analog input 3	Setting range	Default	Unit	Available mode			
		0.000~3.000	0.000	V	P	S	T	F

Dead zone range of analog input 3.

P3.72	Data size	16bit	Data format	DEC
	Modbus address	1744,1745	CANopen address	0x2348,0x00

P3.73	Gain of analog input 3	Setting range	Default	Unit	Available mode			
		0~2000	300	-	P	S	T	F

This parameter is used to set the gain of analog input 3. The units correspond to different function of P3.70 are listed below:

P3.70 Setting value	Definition	P3.73 unit
【0】	Invalid	-
1	Speed limit	(r/min)/V
2	Torque limit	0.1%/V
3	Speed command	(r/min)/V
4	Torque command	0.1%/V
5	Speed compensation	(r/min)/V
6	Torque compensation	0.1%/V
7	Negative torque limit	0.1%/V

P3.73	Data size	32bit	Data format	DEC
	Modbus address	1746,1747	CANopen address	0x2349,0x00

P3.74	Analog input 3 reverse	Setting range	Default	Unit	Available mode			
		0~1	0	-	P	S	T	F

This parameter is used to set the voltage polarity of analog input 3.

	Setting value	Detection result					
	【0】	Positive polarity	[+voltage] → [positive], [- voltage] → [negative]				
	1	Negative polarity	[+voltage] → [negative], [- voltage] → [positive]				
P3.74	Data size		16bit	Data format		DEC	
	Modbus address		1748,1749	CANopen address		0x234A,0x00	

P3.75	Voltage protection of analog input 3	Setting range	Default	Unit	Available mode			
		0.000~10.000	0.000	V	P	S	T	F

This parameter is used to set the overvoltage protection value of analog input 3.

If the absolute value of analog input 3 voltage exceeds the set value, the system will report alarm.

P3.75	Data size	32bit	Data format		DEC				
	Modbus address	1750,1751	CANopen address		0x234B,0x00				

P3.76	Analog input 3 filter	Setting range	Default	Unit	Available mode			
		0.0~1000.0	0.0	ms	P	S	T	F

This parameter is used to set the time constant of first order low-pass filter of analog input 3.

P3.76	Data size	16bit	Data format		DEC				
	Modbus address	1752,1753	CANopen address		0x234C,0x00				

P3.77	Deadzone mode of analog input	Setting range	Default	Unit	Available mode			
		0~1	0	-	P	S	T	F

Set the deadzone voltage mode of analog input by this parameter

Setting value	Definition			
	【0】	Normal mode		
1	CNC mode. When AI is smaller than the deadzone, the valid value is 0: When AI is larger than the deadzone, the valid value is AI-deadzone.			

P3.77	Data size	16bit	Data format		LIST				
	Modbus address	1754, 1755	CANopen address		0x234D, 0x00				

P3.90	Pulse input filter	Setting range	Default	Unit	Available mode			
		0~7	2	-	P	S	T	F

This parameter is used to set filter time of the pulse input.

Setting value	Width of pulse input					
	0	400kHz				
	1	500kHz				

	【2】	1MHz				
	3	2MHz				
	4	4MHz				
	5	>4MHz				
	6	200kHz				
	7	100kHz				
	P3.90	Data size	16bit	Data format	DEC	
		Modbus address	1780,1781	CANopen address	0x235A,0x00	

## 6.5 Extension and application (P4)

### 6.5.1 Communication setting

P4.01 <sup>1</sup>	485 local communication address	Setting range	Default	Unit	Available mode			
		1~255	1	-	P	S	T	F

This parameter is used to set local (slave) communication address of 485 serial communication.

P4.01 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1802,1803	CANopen address	0x2401, 0x00

P4.02 <sup>1</sup>	CAN communication baud rate	Setting range	Default	Unit	Available mode			
		0~5	1	-	P	S	T	F

This parameter is used to select CAN communication baud rate. Available baud rate are as follow:

Setting value	Baud rate
0	1000kbps
【1】	500kbps
2	250kbps
3	125kbps
4	50kbps
5	20kbps

P4.02 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1804,1805	CANopen address	0x2402, 0x00

P4.03 <sup>1</sup>	485 communication baud rate	Setting range	Default	Unit	Available mode			
		0~3	1	-	P	S	T	F

This parameter is used to select 485 communication baud rate. Available baud rate are as follow:

Setting value	Baud rate		
0	9600bps		
【1】	19200bps		
2	38400bps		
3	57600bps		

P4.03 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1806,1807	CANopen address	0x2403,0x00

P4.04 <sup>1</sup>	485 communication parity mode	Setting range	Default	Unit	Available mode
		0~5	0	-	P S T F

This parameter is used to set the 485 communication parity mode and it only supports RTU mode.

P4.04 <sup>1</sup>	485 communication parity mode	Setting value	Baud rate		
		【0】	None (N, 8, 1)		
		1	Even (E, 8, 1)		
		2	Odd (O, 8, 1)		
		3	None(N, 8, 2)		
		4	Even(E, 8, 2)		
		5	Odd(O, 8, 2)		

P4.04 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1808,1809	CANopen address	0x2404,0x00

P4.05 <sup>1</sup>	CAN communication node	Setting range	Default	Unit	Available mode
		1~127	1	-	P S T F

This parameter is used to set the local (salve) CAN communication node no..

P4.05 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1810,1811	CANopen address	0x2405,0x00

P4.06	485 communication fault clear mode	Setting range	Default	Unit	Available mode
		0~1	1	-	P S T F

Set the processing method of the drive during 485 communication fault.

P4.06	485 communication fault clear mode	Setting value	Meaning		
		0	Do not clear fault		
		【1】	Clear fault automatically		
P4.06	Data size	16bit	Data format		DEC

	Modbus address	1812, 1813	CANopen address	0x2406, 0x00
--	----------------	------------	-----------------	--------------

P4.07 <sup>1</sup>	EtherCAT synchronous cycle	Setting range	Default	Unit	Available mode
		0~3	2	-	P S T F

This parameter is used to the the synchronous interruption cycle of DC sync0 when DC mode is adopted for EtherCAT communication.

Setting value	Meaning
0	250us
1	500us
【2】	1ms
3	2ms

P4.07 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1814, 1815	CANopen address	0x2407, 0x00

P4.08 <sup>1</sup>	EtherCAT synchronous type	Setting range	Default	Unit	Available mode
		0~2	0	-	P S T F

Set the synchronous mode between master station and slave station of EtherCAT communication.

Setting value	Meaning
【0】	Free-run
2	DC mode(sync0)

P4.08 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1816, 1817	CANopen address	0x2408, 0x00

P4.09 <sup>1</sup>	EtherCAT fault detection time	Setting range	Default	Unit	Available mode
		0~10000	100	ms	P S T F

Set EtherCAT communication fault detection time.

**Note:** When setting the parameter to 0, do not detect EtherCAT fault.

P4.09 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1818, 1819	CANopen address	0x2409, 0x00

## 6.5.2 Servo type and communication control command

P4.10 <sup>1</sup>	Upper PC type	Setting range	Default	Unit	Available mode
		0~1	0	-	P S T F

This parameter is used to set the upper PC type which is classified by the interface of upper PC control drive.

Setting value		Upper PC	Control interface				
【0】		Pulse + analog	Position control/full closed-loop: pulse and point control Speed control /torque control: analog and internal setting				
1		Communication bus	485(protocol: Modbus) CAN(protocol: CANopen CiA301/402) PROFIBUS(protocol: PROFIBUS-DPV0)				
P4.10 <sup>1</sup>	Data size		16bit	Data format		DEC	
	Modbus address		1820,1821	CANopen address		0x240A,0x00	

P4.11*	Bus servo enabling	Setting range	Default	Unit	Available mode		
		0~1	0	-	P	S	T

When P4.10 selects 1, it is viable to carry out enabling control on the drive via this parameter.

Setting value		Function		
【0】		Disabled		
1		Enabled		

**Note:** If the drive is enabled by P0.04, the drive can be disabled if P4.11 is from state 1 to state 0.

P4.11*	Data size		16bit	Data format		DEC	
	Modbus address		1822,1823	CANopen address		0x240B,0x00	

P4.12*	Bus position command	Setting range	Default	Unit	Available mode		
		-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	pulse	P		F

If P4.10 is 1, the drive position command can be set via this parameter.

P4.12*	Data size	32bit	Data format		DEC		
	Modbus address	1824,1825	CANopen address		0x240C,0x00		

P4.13*	Bus speed command	Setting range	Default	Unit	Available mode		
		-20000~20000	0	r/min		S	

If P4.10 is 1, the drive speed command can be set via this parameter..

P4.13*	Data size	16bit	Data format		DEC		
	Modbus address	1826,1826	CANopen address		0x240D,0x00		

P4.14*	Bus torque command	Setting range	Default	Unit	Available mode		
		-500.0~500.0	0.0	%		T	

If P4.10 is 1, the drive torque command can be set via this parameter.

P4.14*	Data size	16bit	Data format		DEC		
	Modbus address	1828,1829	CANopen address		0x240E,0x00		

P4.15*	Switching command of control mode	Setting range	Default	Unit	Available mode			
		0~1	0	-	P	S	T	F

When P4.10 is 1, this parameter can be used to switch the control mode in hybrid control mode.

Setting value	Function	Actual control mode			
【0】	Disabled	Position/speed		Position	
		Position/torque		Position	
		Speed/torque		Speed	
1	Enabled	Position/speed		Speed	
		Position/torque		Torque	
		Speed/torque		Torque	

**Note:** After the updating of the control mode switching command, the actual switching process of the drive and motor will act based on the setting of P0.90~P.92 and actual feedback state.

P4.15*	Data size	16bit	Data format	DEC			
	Modbus address	1830,1831	CANopen address	0x240F,0x00			

P4.16*	Gain switching command	Setting range	Default	Unit	Available mode			
		0~1	0	-	P	S	T	F

If P4.10 is 1, this parameter can be used to set the gain switching command. When P2.22, P2.27, P2.31 is 2, the actual controlled gain setting can be switched.

Setting value	Function	Actual gain			
【0】	Disabled	1 <sup>st</sup> gain setting			
1	Enabled	2 <sup>nd</sup> gain setting			

P4.16*	Data size	16bit	Data format	DEC			
	Modbus address	1832,1833	CANopen address	0x2410,0x00			

P4.17*	Switching command of electronic gear ratio	Setting range	Default	Unit	Available mode			
		0~3	0	-	P			F

If P4.10 is 1, this parameter can be used to set the switching command of electronic gear ratio.

Setting value	Molecule of actual electronic gear ratio	Denominator of actual electronic gear ratio			
【0】	Molecule of 1 <sup>st</sup> electronic gear ratio(P0.25)	Denominator of electronic gear ratio(P0.26)			
1	Molecule of 2 <sup>nd</sup> electronic gear ratio(P0.27)				
2	Molecule of 3 <sup>rd</sup> electronic gear ratio(P0.28)				
3	Molecule of 4 <sup>th</sup> electronic gear ratio(P0.29)				

P4.17*	Data size	16bit	Data format	DEC			
	Modbus address	1834,1835	CANopen address	0x2411,0x00			

P4.18*	Inertia ratio switching command	Setting range	Default	Unit	Available mode			
		0~1	0	-	P	S	T	F

If P4.10 is 1, this parameter can be used to set the inertia ratio switching command.

Setting value	Function	Actual inertia ratio
【0】	Disabled	The first inertia ratio (P1.01)
1	Enabled	The second inertia ratio (P1.02)

P4.18*	Data size	16bit	Data format	DEC			
	Modbus address	1836,1837	CANopen address	0x2412,0x00			

P4.19*	Zero speed clamp command	Setting range	Default	Unit	Available mode			
		0~1	0	-	S	T		

If P4.10 is 1, this parameter can be used to set the zero speed clamp command.

Setting value	Function
【0】	Disabled
1	Enabled

P4.19*	Data size	16bit	Data format	DEC			
	Modbus address	1838,1839	CANopen address	0x2413,0x00			

P4.20*	Retention pulse clear	Setting range	Default	Unit	Available mode			
		0~1	0	-	P			F

If P4.10 is 1, this parameter can be used to set the retention pulse clear. The detailed mode is determined by P3.45 and after clearing, R0.04 is 0.

Setting value	Function
【0】	Disabled
1	Enabled

P4.20*	Data size	16bit	Data format	DEC			
	Modbus address	1840,1841	CANopen address	0x2414,0x00			

P4.21*	Torque switching command	Setting range	Default	Unit	Available mode			
		0~1	0	-	P	S	T	F

If P4.10 is 1, this parameter can be used to set the torque control switching.

Setting value	Function
【0】	Disabled
1	Enabled

P4.21*	Data size	16bit	Data format	DEC			
	Modbus address	1842,1843	CANopen address	0x2415,0x00			

P4.22*	External fault command	Setting range	Default	Unit	Available mode			
					P	S	T	F

		0~1	0	-	P	S	T	F
If P4.10 is 1, this parameter can be used to set the external fault command.								
	Setting value		Function					
	【0】		Disabled					
	1		Enabled					
P4.22*	Data size	16bit	Data format		DEC			
	Modbus address	1844,1845	CANopen address		0x2416,0x00			
P4.23*	E-stop command	Setting range	Default	Unit	Available mode			
		0~1	0	-	P	S	T	F
If P4.10 is 1, this parameter can be used to set E-stop command.								
	Setting value		Function					
	【0】		Disabled					
	1		Enabled					
P4.23*	Data size	16bit	Data format		DEC			
	Modbus address	1846,1847	CANopen address		0x2417,0x00			
P4.24*	Input command of vibration control switching	Setting range	Default	Unit	Available mode			
		0~1	0	-	P			F
If P4.10 is 1, this parameter can be used to set vibration control switching of the drive.								
	Setting value		Function					
	【0】		Disabled					
	1		Enabled					
P4.24*	Data size	16bit	Data format		DEC			
	Modbus address	1848,1849	CANopen address		0x2418,0x00			

### 6.5.3 Extension and application

P4.30	Stop mode	Setting range	Default	Unit	Available mode
		0~3	0	-	P S T F

When the servo is turned OFF and when fault alarm occurs, this parameter is used to set whether the dynamic brake works or not and the state of the servo motor after stop:

P4.30 Setting value	Action	
	During deceleration	After stopping
【0】	Coast to stop	Keep the inertia operation state
1	Dynamic brake to stop	Keep the inertia operation state
2	Dynamic brake stop	Dynamic braking state

3	External dynamic brake acts	Dynamic braking state							
<b>Note:</b>									
1. When P4.30 is set to 1, the dynamic brake works when motor speed is higher than the value of P3.58 and does not work otherwise. After motor stops, dynamic brake will stop working.									
P4.30	Data size	16bit	Data format		DEC				
	Modbus address	1860,1861	CANopen address	0x241E,0x00					
P4.31	Max. speed limit	Setting range	Default	Unit	Available mode				
		0~20000	5000	r/min	P S T F				
This parameter can be used to set the highest running speed of servo motor. If the absolute value of the speed command is larger than the value of this parameter, the magnitude of the actual speed setting will be limited by this parameter; the direction is the same with that of the original speed command. This parameter is active in all modes.									
<b>Note:</b> The default value of this parameter is related to the power level of the drive.									
P4.31	Data size	16bit	Data format		DEC				
	Modbus address	1862,1863	CANopen address	0x241F,0x00					
P4.32	Overspeed level	Setting range	Default	Unit	Available mode				
		0~20000	6000	r/min	P S T F				
This parameter is used to set the overspeed level of the servo motor. When the rotation speed of the motor exceeds this setting speed, overspeed fault alarm will be reported.									
<b>Note:</b> The default value of this parameter is related to the power level of the drive.									
P4.32	Data size	16bit	Data format		DEC				
	Modbus address	1864,1865	CANopen address	0x2420,0x00					
P4.33	Pulse range of position error	Setting range	Default	Unit	Available mode				
		0~134217748	100000	pulse	P      F				
This parameter is used to set the alarm threshold for the position error fault (Er22-0). In position or full closed loop mode, when the number of retention pulses exceeds this setting value, position error fault will be alarmed.									
P4.33	Data size	32bit	Data format		DEC				
	Modbus address	1866,1867	CANopen address	0x2421,0x00					
P4.34 <sup>1</sup>	Brake overload detection	Setting range	Default	Unit	Available mode				
		0~2	0	-	P S T F				

This parameter is used to set the regenerative brake mode and overload protection mode.

	Setting value	Regenerative brake and overload protection			
	【0】	Disabled (no regenerative brake)			
	1	Embedded			
	2	External			
P4.34 <sup>1</sup>	Data size	16bit	Data format	DEC	
	Modbus address	1868,1869	CANopen address	0x2422,0x00	

P4.36 <sup>1</sup>	Undervoltage protection of the main power supply	Setting range	Default	Unit	Available mode			
		0~1	1	-	P	S	T	F

This parameter is used to set whether the drive will report main circuit undervoltage alarm when undervoltage occurs to the main power supply.

	Setting value	Protection					
	0	Do not display the undervoltage fault of the main circuit (Er13-1)					
	【1】	Display the undervoltage fault of the main circuit (Er13-1) and stop					
P4.36 <sup>1</sup>	Data size	16bit	Data format	DEC			
	Modbus address	1872,1873	CANopen address	0x2424,0x00			

P4.37	Undervoltage detection time of the main power	Setting range	Default	Unit	Available mode			
		70~2000	70	ms	P	S	T	F

This parameter is used to set the undervoltage detection time of the main power supply.

**Note:** The function is invalid if it is set to 2000.

P4.37	Data size	16bit	Data format	DEC			
	Modbus address	1874,1875	CANopen address	0x2425,0x00			

P4.39	Speed error setting	Setting range	Default	Unit	Available mode			
		0~20000	0	r/min	P	S	T	F

This parameter is used to set the detection condition of the speed error. If the absolute value of the minus of actual speed command and motor speed is larger than this value and lasts for more than 100ms, it will report speed error alarm.

**Note:** If it is set to 0, the speed error will not be detected.

P4.39	Data size	16bit	Data format	DEC			
	Modbus address	1878,1879	CANopen address	0x2427,0x00			

P4.40	Forward speed limit	Setting range	Default	Unit	Available mode			
		0~20000	20000	r/min	P	S	T	F

This parameter is used to set the max. speed limit for forward speed command.

**Note:** The default value and setting range of the parameter is relative to the drive power level.

P4.40	Data size	16bit	Data format	DEC
	Modbus address	1880,1881	CANopen address	0x2428,0x00

P4.41	Reverse speed limit	Setting range	Default	Unit	Available mode
		-20000~0	-20000	r/min	P S T F

This parameter is used to set the max. speed limit of reverse speed command.

**Note:** The default value and setting range of the parameter is relative to the drive power level.

P4.41	Data size	16bit	Data format	DEC
	Modbus address	1882,1883	CANopen address	0x2429,0x00

P4.42	Internal speed of high resolution	Setting range	Default	Unit	Available mode
		-20000.0~20000.0	0.0	r/min	P S T F

This parameter is used to set the internal speed of high resolution

P4.42	Data size	32bit	Data format	DEC
	Modbus address	1884, 1885	CANopen address	0x242A, 0x00

P4.50 <sup>1</sup>	Offset of encoder Z phase	Setting range	Default	Unit	Available mode
		0~1048575	0	pulse	P S T F

This parameter is used to set the output position of Z phase, and the setting value of the offset of Z phase is the pulse of CCW direction.

P4.50 <sup>1</sup>	Data size	32bit	Data format	DEC
	Modbus address	1900,1901	CANopen address	0x2432,0x00

P4.51	Switching time 1 of torque limit	Setting range	Default	Unit	Available mode
		0~4000	0	ms/(100%)	P S T F

This parameter is used to set the transition time between switching from the first torque limit to the second torque limit.

P4.51	Data size	16bit	Data format	DEC
	Modbus address	1902,1903	CANopen address	0x2433,0x00

P4.52	Switching time 2 of the torque limit	Setting range	Default	Unit	Available mode
		0~4000	0	ms/(100%)	P S T F

This parameter is used to set the transition time between switching from the second torque limit to the first torque limit.

P4.52	Data size	16bit	Data format	DEC
	Modbus address	1904,1905	CANopen address	0x2434,0x00

P4.53	Current loop response adjustment	Setting range	Default	Unit	Available mode
		10.0~200.0	100.0	%	P S T F

This parameter is used to set the adjustment coefficient of current loop response width.					
P4.53	Data size	16bit	Data format	DEC	
	Modbus address	1906,1907	CANopen address	0x2435,0x00	

P4.54 <sup>1</sup>	Initialization time after power on	Setting range	Default	Unit	Available mode		
		0~200000	0	ms	P	S	T

This parameter is used to set the delay time before allowing servo enabling after power on initialization is completed.

P4.54 <sup>1</sup>	Data size	32bit	Data format	DEC			
	Modbus address	1908,1909	CANopen address	0x2436,0x00			

#### 6.5.4 Full-closed loop control

P4.60 <sup>1</sup>	Frequency division molecular of external grating ruler	Setting range	Default	Unit	Available mode		
		0~1048576	0	-			F

This parameter is used to set the frequency division molecular of external grating ruler. When the setting value is 0, the encoder resolution is the frequency division molecular by default.

P4.60 <sup>1</sup>	Data size	32bit	Data format	DEC			
	Modbus address	1920,1921	CANopen address	0x243C,0x00			

P4.61 <sup>1</sup>	Frequency division denominator of external grating ruler	Setting range	Default	Unit	Available mode		
		1~1048576	10000	-			F

This parameter is used to set the frequency division denominator of external grating ruler, which corresponds to the grating ruler pulse number needed by one-circle rotation of motor.

P4.61 <sup>1</sup>	Data size	32bit	Data format	DEC			
	Modbus address	1922,1923	CANopen address	0x243D,0x00			

P4.62 <sup>1</sup>	Direction reversal of external grating ruler	Setting range	Default	Unit	Available mode		
		0~1	0	-			F

This parameter is used to set the direction reversal of external grating ruler feedback counting.

Setting value	Function
【0】	Use the counting value of the grating ruler directly
1	Use after the reversing of the counting value of the grating ruler

P4.62 <sup>1</sup>	Data size	16bit	Data format	DEC			
	Modbus address	1924,1925	CANopen address	0x243E,0x00			

P4.64 <sup>1</sup>	Large mixed deviation setting	Setting range	Default	Unit	Available mode		
		1~134217728	160000	Command unit			F

In the full-closed loop control, set the tolerance (mixed deviation) between the encoder feedback position and the grating ruler feedback position. If R0.05 exceeds the setting value,

the drive will report Er22-1.

P4.64 <sup>1</sup>	Data size	32bit	Data format		DEC		
	Modbus address	1928,1929	CANopen address		0x2440,0x00		

P4.65 <sup>1</sup>	Mixed deviation clear	Setting range	Default	Unit	Available mode		
		0~100	0	Circle			F

This parameter is used to set the condition of mixed control deviation clearing. After rotating for the set circles, the mixed control deviation will be cleared. If it is set to 0, the deviation will not be cleared.

P4.65 <sup>1</sup>	Data size	16bit	Data format		DEC		
	Modbus address	1930,1931	CANopen address		0x2441,0x00		

P4.67 <sup>1</sup>	External grating pulse output mode of AB phase	Setting range	Default	Unit	Available mode		
		0~1	0	-			F

In full closed loop mode, this parameter is used to set the signal source of pulse feedback output.

Setting value	Pulse feedback signal source
【0】	Encoder feedback
1	Grating ruler feedback

P4.67 <sup>1</sup>	Data size	16bit	Data format		DEC		
	Modbus address	1934,1935	CANopen address		0x2443,0x00		

P4.68 <sup>1</sup>	External grating ruler (2 <sup>nd</sup> encoder) resolution	Setting range	Default	Unit	Available mode		
		1~1048576	10000	pulse	P		F

Set the resolution of external grating ruler (2<sup>nd</sup> encoder). When connecting the 2<sup>nd</sup> encoder, output the number of pulses per circle.

P4.68 <sup>1</sup>	Data size	32bit	Data format		DEC		
	Modbus address	1936, 1937	CANopen address		0x2444, 0x00		

P4.69 <sup>1</sup>	Frequency division output source	Setting range	Default	Unit	Available mode		
		0~3	0	-	P	S	T F

Set the signal source of frequency division output.

Setting value	Pulse feedback signal source
【0】	Normal frequency division output
1	2 <sup>nd</sup> encoder Bypass
2	AB quadrature pulse input Bypass
3	Internal virtual spindle

P4.69 <sup>1</sup>	Data size	32bit	Data format		DEC		
	Modbus address	1938, 1939	CANopen address		0x2445, 0x00		

P4.70 <sup>1</sup>	External grating ruler (2 <sup>nd</sup>	Setting range	Default	Unit	Available mode		
--------------------	---	---------------	---------	------	----------------	--	--

	encoder) Z signal type	0~3	0	-	P	S	T	F
--	------------------------	-----	---	---	---	---	---	---

As Z signal width is divided into 1/4, 1/2 and 1/1, the starting phase of the signal for each width corresponds to 4 kinds of AB level, so there are in total 12 kinds of combinations, however, in order to adapt to these combinations and ensure the capture value is normal in both forward and reverse direction, it is necessary to set the AB state value corresponds to the middle of Z signal high level. For 1/4 and 1/2, they require any one of AB states during high level period after Z type signal setting; for 1/1 width encoder, the set Z type must be the AB value corresponds to the middle of high level.

P4.70 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1940, 1941	CANopen address	0x2446k 0x00

P4.78 <sup>1</sup>	MotionNet node number	Setting range	Default	Unit	Available mode			
		0~63	0	-	P	S	T	F

Set communication node number of local machine (slave station) in MotionNet communication.

P4.78 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1956, 1957	CANopen address	0x244E, 0x00

P4.79 <sup>1</sup>	MotionNet baud rate	Setting range	Default	Unit	Available mode			
		0~3	2	-	P	S	T	F

Set MotionNet baud rate as follows:

Setting value	Baud rate
0	2.5Mbps
1	5.0Mbps
【2】	10.0Mbps
3	20.0Mbps

P4.79 <sup>1</sup>	Data size	16bit	Data format	DEC
	Modbus address	1958, 1959	CANopen address	0x244F, 0x00

P4.80	Configuration of PZD setting parameter 1	Setting range	Default	Unit	Available mode			
		1000~3999	1998	-	P	S	T	F

This parameter is used to set the mapping content of setting parameter 1 in PROFIBUS-DP communication (1998 corresponds to the reserved parameters).

P4.80	Data size	16bit	Data format	DEC
	Modbus address	1960, 1961	CANopen address	0x2450, 0x00

P4.81	Configuration of PZD setting parameter 2	Setting range	Default	Unit	Available mode			
		1000~3999	1998	-	P	S	T	F

This parameter is used to set the mapping content of setting parameter 2 in PROFIBUS-DP communication (1998 corresponds to the reserved parameters).

P4.81	Data size	16bit	Data format		DEC			
	Modbus address	1962,1963	CANopen address		0x2451,0x00			

P4.82	Configuration of PZD setting parameter 3	Setting range	Default	Unit	Available mode			
		1000~3999	1998	-	P	S	T	F

This parameter is used to set the mapping content of setting parameter 3 in PROFIBUS-DP communication (1998 corresponds to the reserved parameters).

P4.82	Data size	16bit	Data format		DEC			
	Modbus address	1964,1965	CANopen address		0x2452,0x00			

P4.83	Configuration of PZD feedback parameter 1	Setting range	Default	Unit	Available mode			
		4000~5852	4012	-	P	S	T	F

This parameter is used to set the mapping content of feedback parameter 1 in PROFIBUS-DP communication (4012 corresponds to R0.04).

P4.83	Data size	16bit	Data format		DEC			
	Modbus address	1966,1967	CANopen address		0x2453,0x00			

P4.84	Configuration of PZD feedback parameter 2	Setting range	Default	Unit	Available mode			
		4000~5852	4018	-	P	S	T	F

This parameter is used to set the mapping content of feedback parameter 2 in PROFIBUS-DP communication (4018 corresponds to R0.07).

P4.84	Data size	16bit	Data format		DEC			
	Modbus address	1968,1969	CANopen address		0x2454,0x00			

P4.85	Configuration of PZD feedback parameter 3	Setting range	Default	Unit	Available mode			
		4000~5852	4032	-	P	S	T	F

This parameter is used to set the mapping content of feedback parameter 3 in PROFIBUS-DP communication (4032 corresponds to R0.14).

P4.85	Data size	16bit	Data format		DEC			
	Modbus address	1970,1971	CANopen address		0x2455,0x00			

P4.86	PPO type of DP communication	Setting range	Default	Unit	Available mode			
		5	5	-	P	S	T	F

This parameter is used to set the frame type of PROFIBUS-DP communication.

		Parameter identification		Process Data										
		Fixed area					Freely mappable area							
PKW		0	1	2	3	4	5	6	7	8	9	10	11	
Down	ID	IND	VALUE	CW	SPD_REF	POS_REF	TRQ_REF	RSV	PZD1	PZD2	PZD3			
	ID	IND	VALUE	SW	SPD_FBK	POS_FBK	TRQ_FBK	RSV	PZD1	PZD2	PZD3			
Type5														

**Note:** SV-DA200 only supports PROFIBUS-DPV0 and the PPO only supports 5.

P4.86	Data size	16bit	Data format	DEC
	Modbus address	1972,1973	CANopen address	0x2456,0x00

P4.87	CANopen communication cycle	Setting range	Default	Unit	Available mode
		0~(2 <sup>31</sup> -1)	0	us	P S T F

CANopen communication cycle of the slave station.

**Note:** The recommended unit for setting is 1000us.

P4.87	Data size	32bit	Data format	DEC
	Modbus address	1974,1975	CANopen address	0x2457,0x00

P4.88	CANopen heartbeat cycle	Setting range	Default	Unit	Available mode
		0~32767	1000	ms	P S T F

CANopen heartbeat cycle of the slave station.

P4.88	Data size	16bit	Data format	DEC
	Modbus address	1976,1977	CANopen address	0x2458,0x00

P4.89	Automatic stop at CANopen disconnection	Setting range	Default	Unit	Available mode
		0~1	0	-	P S T F

Set whether to stop at CANopen disconnection by this parameter:

Setting value	Function
0	Disabled
1	Enabled

P4.89	Data size	16bit	Data format	DEC
	Modbus address	1978, 1979	CANopen address	0x2459, 0x00

## 6.5.5 Special instruction

P4.90*	Fault restore	Setting range	Default	Unit	Available mode
		0~1	0	-	P S T F

This parameter can be set by upper PC via communication mode to clear drive fault.

Setting value	Function

	【0】	Disabled	
	1	Enabled	

**Note:**

1. If the fault restore command is enabled, and the servo drive is disabled, if the fault cannot happen, the fault can be restored automatically. But other faults cannot be cleared online but be cleared at re-power on
2. The user can clear the fault through LED panel.

P4.90*	Data size	16bit	Data format	DEC
	Modbus address	1980,1981	CANopen address	0x245A,0x00

P4.91*	Parameters saving	Setting range	Default	Unit	Available mode			
		0~1	0	-	P	S	T	F

If P0.17 is 1 (bulk saving), the saving command can be sent via this parameter to write the changed savable parameter into EEPROM.

P4.91*	Setting value	Function					
	【0】	Disabled					
	1	Enabled					

P4.91*	Data size	16bit	Data format	DEC
	Modbus address	1982,1983	CANopen address	0x245B,0x00

P4.92*	Restore to factory value	Setting range	Default	Unit	Available mode			
		0~1	0	-	P	S	T	F

After this operation, all parameters (P0~P6 group) can be restored to the default value.

P4.92*	Setting value	Function					
	【0】	Disabled					
	1	Enabled					

P4.92*	Data size	16bit	Data format	DEC
	Modbus address	1984,1985	CANopen address	0x245C,0x00

P4.93*	Enabling reading of fault record	Setting range	Default	Unit	Available mode			
		0~1	0	-	P	S	T	F

This parameter can set the enabling of reading the fault record.

P4.93*	Setting value	Function					
	【0】	Disabled					
	1	Enabled					

P4.93*	Data size	16bit	Data format	DEC
--------	-----------	-------	-------------	-----







	Modbus address	1986,1987	CANopen address	0x245D,0x00			
P4.94*	Enabling clearing of fault record	Setting range	Default	Unit			
		0~1	0	-			
This parameter can set the enabling of clearing the fault record.							
	Setting value	Function					
	【0】	Disabled					
	1	Enabled					
P4.94*	Data size	16bit	Data format	DEC			
	Modbus address	1988,1989	CANopen address	0x245E,0x00			
P4.95*	Group number of fault record	Setting range	Default	Unit	Available mode		
		0~9	0	-	P	S	T
This parameter can set the group number of fault record.							
0 corresponds to the group 1 fault recorded which is also the latest one, 9 corresponds to group 10 fault recorded which is also the earliest one.							
P4.95*	Data size	16bit	Data format	DEC			
	Modbus address	1990,1991	CANopen address	0x245F,0x00			
P4.96*	Factory parameters	Setting range	Default	Unit	Available mode		
		-	0	-	P	S	T
P4.96*	Data size	16bit	Data format	DEC			
	Modbus address	1992,1993	CANopen address	0x2460,0x00			
P4.97*	EEPROM operation of communication encoder	Setting range	Default	Unit	Available mode		
		0~1	0	-	P	S	T
All the motor parameters can be written into the EEPROM and during the starting, the drive will initialize the data of the relative parameters.							
P4.97*	Data size	16bit	Data format	DEC			
	Modbus address	1994,1995	CANopen address	0x2461,0x00			
P4.98*	Communication encoder EEPROM data fault block	Setting range	Default	Unit	Available mode		
		0~1	0	-	P	S	T
This parameter can be used to block the no data and data error fault of encoder EEPROM.							
If Er2-c or Er2-d occurs, set correct motor model and power on, the motor can be used after re-power on, and then the drive will initialize relative parameters with motor data in EEPROM.							
P4.98*	Data size	16bit	Data format	DEC			
	Modbus address	1996,1997	CANopen address	0x2462,0x00			


## 6.6 Point control and zero returning (P5 and P6)

### 6.6.1 Program JOG

P5.00	JOG mode	Setting range	Default	Unit	Available mode		
		0~6	0	-	P		

This parameter is used to set the JOG operation mode:

Mode	Start key	Function
【0】		( waiting time P5.04 → forward moving P5.01 ) x cycle time P5.05 
1		(waiting time P5.04 → reverse moving P5.01) x cycle time P5.05 
2		(waiting time P5.04 → forward moving P5.01) x cycle time P5.05 → (waiting time P5.04 → reverse moving P5.01) x cycle time P5.05 
3		(waiting time P5.04 → reverse moving P5.01) x cycle time P5.05 → (waiting time P5.04 → forward moving P5.01) x cycle time P5.05 
4		(waiting time P5.04 → forward moving P5.01 → waiting time P5.04 → reverse moving P5.01) x cycle time P5.05 
5		(waiting time P5.04 → reverse moving P5.01 → waiting time P5.04 → forward moving P5.01) x cycle time P5.05 

6		(waiting time P5.04 → forward or reverse moving P5.01) x cycle 1 time				
		P5.02	Speed 0	P5.01	Speed 0	P5.03
P5.00	Data size		16bit	Data format		DEC
	Modbus address		2000,2001	CANopen address		0x2500,0x00
P5.01	JOG movement amount		Setting range	Default	Unit	Available mode
	1~2 <sup>30</sup>	50000	pulse	P		
This parameter is used to set the increment of position movement amount of JOG.						
P5.01	Data size		32bit	Data format		DEC
	Modbus address		2002,2003	CANopen address		0x2501,0x00
P5.02	JOG speed setting		Setting range	Default	Unit	Available mode
	1~5000	500	r/min	P		
This parameter is used to set the highest running speed of JOG.						
P5.02	Data size		16bit	Data format		DEC
	Modbus address		2004,2005	CANopen address		0x2502,0x00
P5.03	JOG ACC/DEC time		Setting range	Default	Unit	Available mode
	2~10000	100	ms	P		
This parameter is used to set the JOG ACC/DEC time and the time corresponds to the time from zero speed to the rated speed. For example, if the target speed is from zero speed to 50% of the rated speed, it is 50% of the time to the target speed.						
P5.03	Data size		16bit	Data format		DEC
	Modbus address		2006,2007	CANopen address		0x2503,0x00
P5.04	JOG waiting time		Setting range	Default	Unit	Available mode
	0~10000	100	ms	P		
This parameter is used to set JOG waiting time and the time is from JOG starting to actual operation time or the time from the finishing of one displacement to the starting of next displacement.						
P5.04	Data size		16bit	Data format		DEC
	Modbus address		2008,2009	CANopen address		0x2504,0x00
P5.05	JOG cycle times		Setting range	Default	Unit	Available mode
	0~10000	1	-	P		
This parameter is used to set the JOG cycle times. Please refer to P5.00.						
P5.05	Data size	16bit	Data format	DEC		


	Modbus address	2010,2011	CANopen address	0x2505,0x00
--	----------------	-----------	-----------------	-------------

## 6.6.2 Back to the origin bit

P5.10 <sup>2</sup>	Returning mode	Setting range	Default	Unit	Available mode		
		0~128	0	-	P		F

This parameter is used to set the returning origin mode.

Display mode: DEC

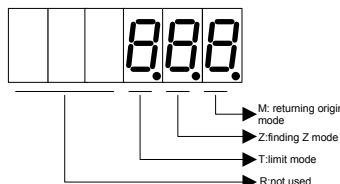

R	T	Z	M
	Limit mode	Finding Z mode	Returning mode
Reserved	0-1	0-2	0-8
	T: Invalid	Z=0: define the point of finding Z as the origin;	M=0: forward rotation, the forward limit switch is the returning point
	T: Invalid		M=1:reverse rotation, the reverse limit switch is the returning point
	To the limit T=0: report the exceeding fault T=1: direction reverse	Z=1 define the point of finding Z as the origin; Z=2: not finding Z, define the point of returning as the origin	M=2: forward rotation, the rising edge of the origin point switch is the returning point
			M=3:reverse rotation, the rising edge of the origin point switch is the returning point
		Z: Invalid	M=4: forward rotation, the first Z signal is the returning point
		Z: Invalid	M=5: reverse rotation, the first Z signal is the returning point
		define the point of finding Z as the origin; Z=1 define the point of finding Z as the origin; Z=2: not finding Z, define the point of returning as the origin	M=6: forward rotation, the declining edge of the origin point switch is the returning point
			M=7: reverse rotation, the declining edge of the origin point switch is the returning point
	T: Invalid		M=8: the current position is defined as the origin point.
P5.10 <sup>2</sup>	Data size		16bit
	Modbus address		2020,2021
Data format		DEC	
CANopen address		0x2505,0x00	

P5.11	Return origin point automatically after power on	Setting range	Default	Unit	Available mode		
		0~1	0	-	P		

This parameter is used to set whether it can return to origin point automatically after power on.

Setting value	Instruction
【0】	Invalid
1	Valid


**Note:** It is valid when no fault occurs.

P5.11 <sup>1</sup>	Data size	16bit	Data format	DEC		
	Modbus address	2022,2023	CANopen address	0x250B,0x00		

P5.12	High speed of the first step of returning origin	Setting range	Default	Unit	Available mode		
		0~2000	100	r/min	P		

This parameter is used to set the high speed of the first step of returning origin.

Diagram:

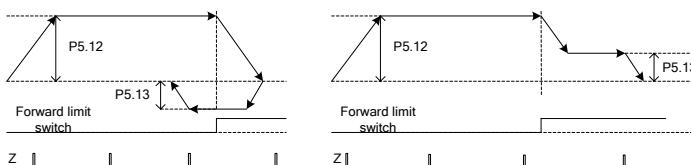

P5.12	Data size	16bit	Data format	DEC		
	Modbus address	2024,2025	CANopen address	0x250C,0x00		

P5.13	Low speed of the second step of returning origin	Setting range	Default	Unit	Available mode		
		0~60	20	r/min	P		

This parameter is used to set the low speed of the second step of returning origin. See details at P5.12.

P5.13	Data size	16bit	Data format	DEC		
	Modbus address	2026,2027	CANopen address	0x250D,0x00		

P5.14	Origin point setting	Setting range	Default	Unit	Available mode		
		-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	pulse	P		

This parameter is used to set the value of the origin point.

P5.14	Data size	32bit	Data format	DEC		
	Modbus address	2028,2029	CANopen address	0x250E,0x00		

P5.15*	Trigger command of returning origin point	Setting range	Default	Unit	Available mode		
		0~1	0	-	P		

This parameter is used to trigger the returning command.

P5.15*	Data size	16bit	Data format	DEC		
	Modbus address	2030,2031	CANopen address	0x250F,0x00		

P5.16	Correlated action of returning origin	Setting range	Default	Unit	Available mode		
		0~3	1	-	P		

Set the correlated action of returning origin via this parameter

Setting value	Function
0	No action
【1】	To the designated target position
2	To the bit position of designated 0 step.
3	To the designated target position directly without returning origin

P5.16	Data size	16bit	Data format	DEC		
	Modbus address	2032, 2033	CANopen address	0x2510, 0x00		

P5.17	To the designated target speed after returning origin	Setting range	Default	Unit	Available mode		
		1~5000	100	r/min	P		

Set to reach the target speed after returning origin by this parameter. Modifications made before returning origin will be valid.

P5.17	Data size	16bit	Data format	DEC		
	Modbus address	2034, 2035	CANopen address	0x2511, 0x00		

P5.18	ACC/DEC time of reaching the designated target after returning origin	Setting range	Default	Unit	Available mode		
		0~32767	300	ms	P		

This function is used to set the ACC/DEC time of reaching the target after returning origin. The setting value corresponds to the time needed to accelerate from zero speed to rated speed. For instance, the target speed is to accelerate from zero speed to 50% rated speed, then time of reaching the target speed of the speed command is 50% of the setting value.

P5.18	Data size	16bit	Data format	DEC		
	Modbus address	2036, 2037	CANopen address	0x2512, 0x00		

P5.19	To designated target position after returning origin	Setting range	Default	Unit	Available mode		
		-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	pulse	P		

Set to go to the designated target position after returning origin via this parameter

P5.19	Data size	32bit	Data format	DEC		
	Modbus address	2038, 2039	CANopen address	0x2513, 0x00		

### 6.6.3 PTP (Point-to-Point ) control

P5.20*	Step trigger command	Setting range	Default	Unit	Available mode		
		-1~2048	-1	-	P		

This parameter is used to trigger the target step.

Write: step trigger, the internal buffer can receive 8 trigger signals at most.

Signal	Function
【-1】	Invalid
0-127	Control 0-127 step, the same as the function of SI:CTRG+ POSn
128-2047	Invalid, write-in is disabled
2048	Forced to stop

Example: Writing step signal 3 means to trigger the step program 3.

P5.20*	Data size	16bit	Data format	DEC
	Modbus address	2040,2041	CANopen address	0x2514,0x00

P5.21	00 target speed	Setting range	Default	Unit	Available mode
		0~6000	20	r/min	P
P5.22	01 target speed	Setting range	Default	Unit	Available mode
		0~6000	50	r/min	P
P5.23	02 target speed	Setting range	Default	Unit	Available mode
		0~6000	100	r/min	P
P5.24	03 target speed	Setting range	Default	Unit	Available mode
		0~6000	200	r/min	P
P5.25	04 target speed	Setting range	Default	Unit	Available mode
		0~6000	300	r/min	P
P5.26	05 target speed	Setting range	Default	Unit	Available mode
		0~6000	500	r/min	P
P5.27	06 target speed	Setting range	Default	Unit	Available mode
		0~6000	600	r/min	P
P5.28	07 target speed	Setting range	Default	Unit	Available mode
		0~6000	800	r/min	P
P5.29	08 target speed	Setting range	Default	Unit	Available mode
		0~6000	1000	r/min	P
P5.30	09 target speed	Setting range	Default	Unit	Available mode
		0~6000	1300	r/min	P
P5.31	10 target speed	Setting range	Default	Unit	Available mode
		0~6000	1500	r/min	P
P5.32	11 target speed	Setting range	Default	Unit	Available mode
		0~6000	1800	r/min	P
P5.33	12 target speed	Setting range	Default	Unit	Available mode
		0~6000	2000	r/min	P

P5.34	13 target speed	Setting range	Default	Unit	Available mode		
		0~6000	2300	r/min	P		
P5.35	14 target speed	Setting range	Default	Unit	Available mode		
		0~6000	2500	r/min	P		
P5.36	15 target speed	Setting range	Default	Unit	Available mode		
		0~6000	3000	r/min	P		

These parameters are used to set the target speed of bit 00 ~15.

P5.21	Data size	16bit	Data format	DEC		
	Modbus address	2042,2043	CANopen address	0x2515,0x00		
P5.22	Data size	16bit	Data format	DEC		
	Modbus address	2044,2045	CANopen address	0x2516,0x00		
P5.23	Data size	16bit	Data format	DEC		
	Modbus address	2046,2047	CANopen address	0x2517,0x00		
P5.24	Data size	16bit	Data format	DEC		
	Modbus address	2048,2049	CANopen address	0x2518,0x00		
P5.25	Data size	16bit	Data format	DEC		
	Modbus address	2050,2051	CANopen address	0x2519,0x00		
P5.26	Data size	16bit	Data format	DEC		
	Modbus address	2052,2053	CANopen address	0x251A,0x00		
P5.27	Data size	16bit	Data format	DEC		
	Modbus address	2054,2055	CANopen address	0x251B,0x00		
P5.28	Data size	16bit	Data format	DEC		
	Modbus address	2056,2057	CANopen address	0x251C,0x00		
P5.29	Data size	16bit	Data format	DEC		
	Modbus address	2058,2059	CANopen address	0x251D,0x00		
P5.30	Data size	16bit	Data format	DEC		
	Modbus address	2060,2061	CANopen address	0x251E,0x00		
P5.31	Data size	16bit	Data format	DEC		
	Modbus address	2062,2063	CANopen address	0x251F,0x00		
P5.32	Data size	16bit	Data format	DEC		
	Modbus address	2064,2065	CANopen address	0x2520,0x00		
P5.33	Data size	16bit	Data format	DEC		
	Modbus address	2066,2067	CANopen address	0x2521,0x00		
P5.34	Data size	16bit	Data format	DEC		
	Modbus address	2068,2069	CANopen address	0x2522,0x00		
P5.35	Data size	16bit	Data format	DEC		
	Modbus address	2070,2071	CANopen address	0x2523,0x00		
P5.36	Data size	16bit	Data format	DEC		
	Modbus address	2072,2073	CANopen address	0x2524,0x00		

P5.37	00 ACC/DEC time	Setting range	Default	Unit	Available mode		
		0~32767	200	ms	P		
P5.38	01 ACC/DEC time	Setting range	Default	Unit	Available mode		
		0~32767	300	ms	P		
P5.39	02 ACC/DEC time	Setting range	Default	Unit	Available mode		
		0~32767	500	ms	P		
P5.40	03 ACC/DEC time	Setting range	Default	Unit	Available mode		
		0~32767	600	ms	P		
P5.41	04 ACC/DEC time	Setting range	Default	Unit	Available mode		
		0~32767	800	ms	P		
P5.42	05 ACC/DEC time	Setting range	Default	Unit	Available mode		
		0~32767	900	ms	P		
P5.43	06 ACC/DEC time	Setting range	Default	Unit	Available mode		
		0~32767	1000	ms	P		
P5.44	07 ACC/DEC time	Setting range	Default	Unit	Available mode		
		0~32767	1200	ms	P		
P5.45	08 ACC/DEC time	Setting range	Default	Unit	Available mode		
		0~32767	1500	ms	P		
P5.46	09 ACC/DEC time	Setting range	Default	Unit	Available mode		
		0~32767	2000	ms	P		
P5.47	10 ACC/DEC time	Setting range	Default	Unit	Available mode		
		0~32767	2500	ms	P		
P5.48	11 ACC/DEC time	Setting range	Default	Unit	Available mode		
		0~32767	3000	ms	P		
P5.49	12 ACC/DEC time	Setting range	Default	Unit	Available mode		
		0~32767	5000	ms	P		
P5.50	13 ACC/DEC time	Setting range	Default	Unit	Available mode		
		0~32767	8000	ms	P		
P5.51	14 ACC/DEC time	Setting range	Default	Unit	Available mode		
		0~32767	50	ms	P		
P5.52	15 ACC/DEC time	Setting range	Default	Unit	Available mode		
		0~32767	30	ms	P		

These parameters are used to set the ACC/DEC time of bit 00 ~15.

P5.37	Data size	16bit	Data format	DEC
	Modbus address	2074,2075	CANopen address	0x2525,0x00
P5.38	Data size	16bit	Data format	DEC
	Modbus address	2076,2077	CANopen address	0x2526,0x00

P5.39	Data size	16bit	Data format	DEC
	Modbus address	2078,2079	CANopen address	0x2527,0x00
P5.40	Data size	16bit	Data format	DEC
	Modbus address	2080,2081	CANopen address	0x2528,0x00
P5.41	Data size	16bit	Data format	DEC
	Modbus address	2082,2083	CANopen address	0x2529,0x00
P5.42	Data size	16bit	Data format	DEC
	Modbus address	2084,2085	CANopen address	0x252A,0x00
P5.43	Data size	16bit	Data format	DEC
	Modbus address	2086,2087	CANopen address	0x252B,0x00
P5.44	Data size	16bit	Data format	DEC
	Modbus address	2088,2089	CANopen address	0x252C,0x00
P5.45	Data size	16bit	Data format	DEC
	Modbus address	2090,2091	CANopen address	0x252D,0x00
P5.46	Data size	16bit	Data format	DEC
	Modbus address	2092,2093	CANopen address	0x252E,0x00
P5.47	Data size	16bit	Data format	DEC
	Modbus address	2094,2095	CANopen address	0x252F,0x00
P5.48	Data size	16bit	Data format	DEC
	Modbus address	2096,2097	CANopen address	0x2530,0x00
P5.49	Data size	16bit	Data format	DEC
	Modbus address	2098,2099	CANopen address	0x2531,0x00
P5.50	Data size	16bit	Data format	DEC
	Modbus address	2100,2101	CANopen address	0x2532,0x00
P5.51	Data size	16bit	Data format	DEC
	Modbus address	2102,2103	CANopen address	0x2533,0x00
P5.52	Data size	16bit	Data format	DEC
	Modbus address	2104,2105	CANopen address	0x2534,0x00

P5.53	00 delay time	Setting range	Default	Unit	Available mode		
		0~32767	0	ms	P		
P5.54	01 delay time	Setting range	Default	Unit	Available mode		
		0~32767	100	ms	P		
P5.55	02 delay time	Setting range	Default	Unit	Available mode		
		0~32767	200	ms	P		
P5.56	03 delay time	Setting range	Default	Unit	Available mode		
		0~32767	400	ms	P		
P5.57	04 delay time	Setting range	Default	Unit	Available mode		

		0~32767	500	ms	P		
P5.58	05 delay time	Setting range	Default	Unit	Available mode		
		0~32767	800	ms	P		
P5.59	06 delay time	Setting range	Default	Unit	Available mode		
		0~32767	1000	ms	P		
P5.60	07 delay time	Setting range	Default	Unit	Available mode		
		0~32767	1500	ms	P		
P5.61	08 delay time	Setting range	Default	Unit	Available mode		
		0~32767	2000	ms	P		
P5.62	09 delay time	Setting range	Default	Unit	Available mode		
		0~32767	2500	ms	P		
P5.63	10 delay time	Setting range	Default	Unit	Available mode		
		0~32767	3000	ms	P		
P5.64	11 delay time	Setting range	Default	Unit	Available mode		
		0~32767	3500	ms	P		
P5.65	12 delay time	Setting range	Default	Unit	Available mode		
		0~32767	4000	ms	P		
P5.66	13 delay time	Setting range	Default	Unit	Available mode		
		0~32767	4500	ms	P		
P5.67	14 delay time	Setting range	Default	Unit	Available mode		
		0~32767	5000	ms	P		
P5.68	15 delay time	Setting range	Default	Unit	Available mode		
		0~32767	5500	ms	P		

These parameters are used to set the delay time of bit 00 ~15.

P5.53	Data size	16bit	Data format	DEC
	Modbus address	2106,2107	CANopen address	0x2535,0x00
P5.54	Data size	16bit	Data format	DEC
	Modbus address	2108,2109	CANopen address	0x2536,0x00
P5.55	Data size	16bit	Data format	DEC
	Modbus address	2110,2111	CANopen address	0x2537,0x00
P5.56	Data size	16bit	Data format	DEC
	Modbus address	2112,2113	CANopen address	0x2538,0x00
P5.57	Data size	16bit	Data format	DEC
	Modbus address	2114,2115	CANopen address	0x2539,0x00
P5.58	Data size	16bit	Data format	DEC
	Modbus address	2116,2117	CANopen address	0x253A,0x00
P5.59	Data size	16bit	Data format	DEC

	Modbus address	2118,2119	CANopen address	0x253B,0x00		
P5.60	Data size	16bit	Data format	DEC		
	Modbus address	2120,2121	CANopen address	0x253C,0x00		
P5.61	Data size	16bit	Data format	DEC		
	Modbus address	2122,2123	CANopen address	0x253D,0x00		
P5.62	Data size	16bit	Data format	DEC		
	Modbus address	2124,2125	CANopen address	0x253E,0x00		
P5.63	Data size	16bit	Data format	DEC		
	Modbus address	2126,2127	CANopen address	0x253F,0x00		
P5.64	Data size	16bit	Data format	DEC		
	Modbus address	2128,2129	CANopen address	0x2540,0x00		
P5.65	Data size	16bit	Data format	DEC		
	Modbus address	2130,2131	CANopen address	0x2541,0x00		
P5.66	Data size	16bit	Data format	DEC		
	Modbus address	2132,2133	CANopen address	0x2542,0x00		
P5.67	Data size	16bit	Data format	DEC		
	Modbus address	2134,2135	CANopen address	0x2543,0x00		
P5.68	Data size	16bit	Data format	DEC		
	Modbus address	2136,2137	CANopen address	0x2544,0x00		

P5.69	Point trigger buffer switch	Setting range	Default	Unit	Available mode		
		0~1	0	-	P		
After point trigger buffer is enabled, 8 buffer can be received consecutively by sequence.							
P5.69	Data size	16bit	Data format			DEC	
	Modbus address	2138, 2139	CANopen address			0x2545, 0x00	

P5.70	Single-turn resolution of the disk	Setting range	Default	Unit	Available mode		
		(-2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	10000	pulse	P		
The resolution of the disk at single-turn driven by the motor.							
P5.70	Data size	32bit	Data format			DEC	
	Modbus address	2140, 2141	CANopen address			0x2546, 0x00	

P5.71	Zero returning switch of the disk	Setting range	Default	Unit	Available mode		
		0~3	0	-	P		
This function is used to set the mode for zero returning switch of the disk							
P5.71	Data size	16bit	Data format			DEC	
	Modbus address	2142, 2143	CANopen address			0x2547, 0x00	

P5.72	Multi-turn mode	Setting range	Default	Unit	Available mode		
		0~1	0	-	P		

After enabling this function, the counting number of multi-turn encoder will change from 16-bit to 32-bit. Generally, the multi-turn encoder can only count to  $2^{16}$  turns.

P5.72	Data size	16bit	Data format	DEC				
	Modbus address	2144, 2145	CANopen address	0x2548, 0x00				
P5.73	Digital trigger mode of the point		Setting range	Default	Unit	Available mode		
			0~1	0	-	P		
P5.73	Setting value	Instruction						
	【0】	Binary input + trigger terminal mode						
	1	Single terminal trigger mode (support 7-step point only)						
P5.73	Data size	16bit	Data format	DEC				
	Modbus address	2146,2147	CANopen address	0x2549,0x00				
P5.74	Digital output mode of the point		Setting range	Default	Unit	Available mode		
			0~4	0	-	P		
P5.74	Setting value	Function						
	【0】	Output before point arrival						
	1	Output after point arrival						
	2	Single bit output+output before point arrival						
	3	Single bit output+output after point arrival						
	4	Single bit output+output after point arrival (support the control word in absolusion position only)						
P5.74	Data size	16bit	Data format	DEC				
	Modbus address	2148, 2149	CANopen address	0x254A, 0x00				

## 6.7 Application function (P6)

P6.00	The speed of slow forward jogging	Setting range	Default	Unit	Available mode
		0~6000	5	r/min	P
This parameter is used to set the speed of slow forward jogging which is triggered by forward jogging terminal and switching terminal of high-low jogging speed.					
P6.00	Data size	16bit	Data format	DEC	
	Modbus address	2200, 2201	CANopen address	0x2600, 0x00	
P6.01	The speed of slow reverse jogging		Setting range	Default	Unit
			-6000~0	-5	r/min
This parameter is used to set the speed of slow reverse jogging which is triggered by reverse jogging terminal and switching terminal of high-low jogging speed.					
P6.01	Data size	16bit	Data format	DEC	

	Modbus address	2202, 2203	CANopen address	0x2601, 0x00		
P6.02 <sup>1</sup>	Position latch function switch	Setting range		Default	Unit	Available mode
		0~1		0	-	P
Position latch function switch can be set via this parameter. After this function is enabled, the position information will be saved in EEPROM after each terminal latch, however, too frequent saving operation may damage the EEPROM.						
P6.02 <sup>1</sup>	Setting value		Function			
	【0】		Disabled			
	1		Enabled			
P6.02 <sup>1</sup>	Data size	16bit	Data format		DEC	
	Modbus address	2204, 2205	CANopen address	0x2602, 0x00		
P6.03	Position latch saving mode	Setting range		Default	Unit	Available mode
		0~1		0	-	P
Position latch saving mode can be set via this parameter:						
P6.03	Setting value		Function			
	【0】		Do not save			
	1		Save			
P6.03	Data size	16bit	Data format		DEC	
	Modbus address	2206, 2207	CANopen address	0x2603, 0x00		
P6.04	Speed of fast forward jogging	Setting range		Default	Unit	Available mode
		0~6000		60	r/min	P
This parameter is used to set the speed of fast forward jogging which is triggered by forward jogging terminal and switching terminal of high-low jogging speed.						
P6.04	Data size	16bit	Data format		DEC	
	Modbus address	2208, 2209	CANopen address	0x2604, 0x00		
P6.05	Speed of fast reverse jogging	Setting range		Default	Unit	Available mode
		-6000~0		-60	r/min	P
This parameter is used to set the speed of fast reverse jogging which is triggered by reverse jogging terminal and switching terminal of high-low jogging speed.						
P6.05	Data size	16bit	Data format		DEC	
	Modbus address	2210, 2211	CANopen address	0x2605, 0x00		
P6.06	Terminal JOG is valid	Setting range		Default	Unit	Available mode
		0~1		0	-	P

This parameter is used to set terminal JOG function:

Setting value	Function
【0】	Invalid
1	Valid

P6.06	Data size	16bit	Data format	DEC			
	Modbus address	2212, 2213	CANopen address	0x2606, 0x00			

P6.20 <sup>1</sup>	Turret function switch	Setting range	Default	Unit	Available mode		
		0~1	0	-	P		

This parameter is used to set turret function switch:

Setting value	Function
【0】	Disabled
1	Enabled

P6.20 <sup>1</sup>	Data size	16bit	Data format	DEC			
	Modbus address	2240, 2241	CANopen address	0x2614, 0x00			

P6.21	Turret number	Setting range	Default	Unit	Available mode		
		1~128	16	piece	P		

This parameter is used to set turret number.

P6.21	Data size	16bit	Data format	DEC			
	Modbus address	2242, 2243	CANopen address	0x2615, 0x00			

P6.22	Turret pulse number per cycle	Setting range	Default	Unit	Available mode		
		2~(2 <sup>31</sup> -1)	10000	pulse	P		

This parameter is used to set turret pulse number per cycle.

P6.22	Data size	32bit	Data format	DEC			
	Modbus address	2244, 2245	CANopen address	0x2616, 0x00			

P6.23 <sup>1</sup>	Starting point of turret	Setting range	Default	Unit	Available mode		
		-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	pulse	P		

This parameter is used to set starting point of turret.

P6.23 <sup>1</sup>	Data size	32bit	Data format	DEC			
	Modbus address	2246, 2247	CANopen address	0x2617, 0x00			

P6.30 <sup>1</sup>	Gantry synchronization switch	Setting range	Default	Unit	Available mode		
		0~1	0	-	P		

This parameter is used to set the gantry synchronization switch.

Setting value	Function
【0】	Disabled
1	Enabled

P6.30 <sup>1</sup>	Data size	16bit	Data format	DEC				
	Modbus address	2260, 2261	CANopen address	0x261E, 0x00				

P6.31	Synchronous speed control gain	Setting range	Default	Unit	Available mode			
		0.0~3276.7	0.0	Hz	P			

This parameter is used to set the synchronous speed control gain.

P6.31	Data size	16bit	Data format	DEC				
	Modbus address	2262, 2263	CANopen address	0x261F, 0x00				

P6.32	Synchronous speed control integral	Setting range	Default	Unit	Available mode			
		0.1~1000.0	1000.0	ms	P			

This parameter is used to set the time constant of synchronous speed control integral. Please note that when this parameter is set to 1000, it means integral action is invalid.

P6.32	Data size	16bit	Data format	DEC				
	Modbus address	2264, 2265	CANopen address	0x2620, 0x00				

P6.33	Synchronous position control gain	Setting range	Default	Unit	Available mode			
		0.0~3276.7	1000.0	Hz	P			

This parameter is used to set the synchronous position control gain

P6.33	Data size	16bit	Data format	DEC				
	Modbus address	2266, 2267	CANopen address	0x2621, 0x00				

P6.34	Synchronous compensation torque filter	Setting range	Default	Unit	Available mode			
		0.00~64.00	0.00	ms	P			

This parameter is used to set the time constant of synchronous compensation torque filter

P6.34	Data size	16bit	Data format	DEC				
	Modbus address	2268, 2269	CANopen address	0x2622, 0x00				

P6.35	Synchronous compensation speed filter	Setting range	Default	Unit	Available mode			
		0.00~64.00	0.00	ms	P			

This parameter is used to set the time constant of synchronous compensation speed filter

P6.35	Data size	16bit	Data format	DEC				
	Modbus address	2270, 2271	CANopen address	0x2623, 0x00				

P6.36	Synchronous control bandwidth ratio	Setting range	Default	Unit	Available mode			
		0.0~1000.0	0.0	%	P			

This parameter is used to set the synchronous control bandwidth ratio: bandwidth ratio=servo bandwidth/(servo bandwidth+synchronous bandwidth).

P6.36	Data size	16bit	Data format	DEC			
	Modbus address	2272, 2273	CANopen address	0x2624, 0x00			

P6.37 <sup>1</sup>	Gantry synchronization master/slave selection	Setting range	Default	Unit	Available mode		
		0~1	0	-	P		

This parameter is used to set the gantry synchronization master/slave:

Setting value	Instruction
【0】	Slave
1	Master

P6.37 <sup>1</sup>	Data size	16bit	Data format	DEC			
	Modbus address	2274, 2275	CANopen address	0x2625, 0x00			

P6.38	Gantry synchronization alignment retreat distance	Setting range	Default	Unit	Available mode		
		-(2 <sup>31</sup> -2)~(2 <sup>31</sup> -2)	10000	pulse	P		

This function is used to set the gantry synchronization alignment retreat distance: the retreat distance of the servo after contacting two alignment sensors.

P6.38	Data size	32bit	Data format	DEC			
	Modbus address	2276, 2277	CANopen address	0x2626, 0x00			

P6.39	Gantry synchronization alignment retreat speed	Setting range	Default	Unit	Available mode		
		1~200	60	r/min	P		

This function is used to set the gantry synchronization alignment retreat speed: the retreat speed of the servo after contacting two alignment sensors.

P6.39	Data size	16bit	Data format	DEC			
	Modbus address	2278, 2279	CANopen address	0x2627, 0x00			

P6.40	Gantry synchronization alignment approaching speed	Setting range	Default	Unit	Available mode		
		1~60	5	r/min	P		

This parameter is used to set the gantry synchronization alignment approaching speed: the speed of servo in approaching alignment sensor again after contacting two alignment sensors.

P6.40	Data size	16bit	Data format	DEC			
	Modbus address	2280, 2281	CANopen address	0x2628, 0x00			

P6.41	Gantry alignment direction	Setting range	Default	Unit	Available mode		
		0~1	0	-	P		

Turret function switch can be set via this parameter:

Setting value	Instruction
【0】	Forward
1	Reverse

P6.41	Data size	16bit	Data format	DEC
	Modbus address	2282, 2283	CANopen address	0x2629, 0x00

## 6.8 Point control (PtP0, PtP1, PtP2)

PtP0.00	Control word of 00 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			

Description:

Bit	Name	Function
Bit0~3	MODE	Step operation mode
Bit4~7	OPT	Step attribute
Bit8~11	ACC	ACC/DEC time index
Bit12~15	SPD	Target speed index
Bit16~19	DLY	Delay time index
Bit20~23	CYL	Cycle number of current step execution
Bit24~30	JMP	Jump to the next step



MODE:

MODE	Instruction
0	Stop after the execution of current step
1	Jump to the next step after the execution of current step
2	Stop after the cycle, the cycle is invalid if CMD=1
3	Jump to the next step after the cycle, the cycle is invalid if CMD=1



OPT:

Bit	Name	Function
Bit4	INS	Insert off, to stop the executing step or the step to be executed
Bit5	OVLP	Overlap, the step can be overlapped with the next step
Bit7~6	CMD	Position command, 0:incremental position, 1:absolute position


INS:

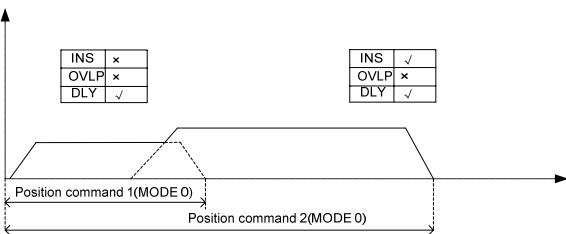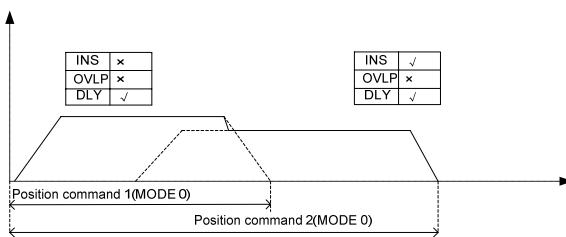

OVLP:

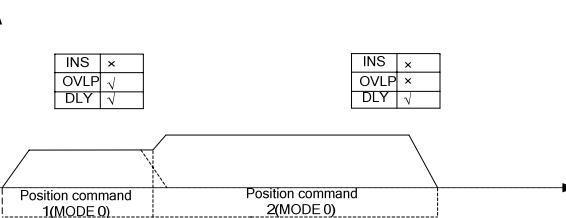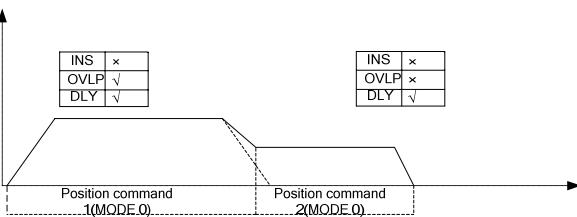

Relation between INS and OVLP:

**Note:**

1. INS: current step has the authority of prior execution against the previous step;

<p>OVLP: current step has the authority to combine the next step for execution.</p> <p>2. INS has higher priority against OVLP; if step 1 OVLP and step 2 INS are enabled at the same time, step 1 OVLP is invalid</p> <p>3. Two steps which have opposite operation direction cannot be overlapped</p>					
PtP0.00	Data size	32bit	Data format	HEX	
	Modbus address	3200,3201	CANopen address	0x2B00,0x00	
PtP0.01	Position of 00 step	Setting range	Default	Unit	Available mode
		- $(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P
<p>This parameter is used to set the target position of 01 step. CMD determines the position command mode of this step and P0.37 is invalid for this step.</p>					
PtP0.01	Data size	32bit	Data format	DEC	
	Modbus address	3202,3203	CANopen address	0x2B01,0x00	
PP0t.02	Control word of 01 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP0.04	Control word of 02 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP0.06	Control word of 03 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP0.08	Control word of 04 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP0.10	Control word of 05 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP0.12	Control word of 06 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP0.14	Control word of 07 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP0.16	Control word of 08 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP0.18	Control word of 09 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP0.20	Control word of 10 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP0.22	Control word of 11 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP0.24	Control word of 12 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP0.26	Control word of 13 step	Setting range	Default	Unit	Available mode

		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.28	Control word of 14 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.30	Control word of 15 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.32	Control word of 16 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.34	Control word of 17 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.36	Control word of 18 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.38	Control word of 19 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.40	Control word of 20 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.42	Control word of 21 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.44	Control word of 22 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.46	Control word of 23 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.48	Control word of 24 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.50	Control word of 25 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.52	Control word of 26 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.54	Control word of 27 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.56	Control word of 28 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.58	Control word of 29 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.60	Control word of 30 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.62	Control word of 31 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.64	Control word of 32 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.66	Control word of 33 step	Setting range	Default	Unit	Available mode		

		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.68	Control word of 34 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.70	Control word of 35 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.72	Control word of 36 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.74	Control word of 37 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.76	Control word of 38 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.78	Control word of 39 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.80	Control word of 40 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.82	Control word of 41 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.84	Control word of 42 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.86	Control word of 43 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.88	Control word of 44 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.90	Control word of 45 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.92	Control word of 46 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.94	Control word of 47 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.96	Control word of 48 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP0.98	Control word of 49 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		

This group of parameters are used to set the control word of 01~49 point. Please refer to "PtP0.00" for detailed information.

PtP0.02	Data size	32bit	Data format	HEX
	Modbus address	3204, 3205	CANopen address	0x2B02, 0x00
PtP0.04	Data size	32bit	Data format	HEX
	Modbus address	3208, 3209	CANopen address	0x2B04, 0x00

PtP0.06	Data size	32bit	Data format	HEX
	Modbus address	3212,3213	CANopen address	0x2B06,0x00
PtP0.08	Data size	32bit	Data format	HEX
	Modbus address	3216,3217	CANopen address	0x2B08,0x00
PtP0.10	Data size	32bit	Data format	HEX
	Modbus address	3220,3221	CANopen address	0x2B0A,0x00
PtP0.12	Data size	32bit	Data format	HEX
	Modbus address	3224,3225	CANopen address	0x2B0C,0x00
PtP0.14	Data size	32bit	Data format	HEX
	Modbus address	3228,3229	CANopen address	0x2B0E,0x00
PtP0.16	Data size	32bit	Data format	HEX
	Modbus address	3232,3233	CANopen address	0x2B10,0x00
PtP0.18	Data size	32bit	Data format	HEX
	Modbus address	3236,3237	CANopen address	0x2B12,0x00
PtP0.20	Data size	32bit	Data format	HEX
	Modbus address	3240,3241	CANopen address	0x2B14,0x00
PtP0.22	Data size	32bit	Data format	HEX
	Modbus address	3244,3245	CANopen address	0x2B16,0x00
PtP0.24	Data size	32bit	Data format	HEX
	Modbus address	3248,3249	CANopen address	0x2B18,0x00
PtP0.26	Data size	32bit	Data format	HEX
	Modbus address	3252,3253	CANopen address	0x2B1A,0x00
PtP0.28	Data size	32bit	Data format	HEX
	Modbus address	3256,3257	CANopen address	0x2B1C,0x00
PtP0.30	Data size	32bit	Data format	HEX
	Modbus address	3260,3261	CANopen address	0x2B1E,0x00
PtP0.32	Data size	32bit	Data format	HEX
	Modbus address	3264,3265	CANopen address	0x2B20,0x00
PtP0.34	Data size	32bit	Data format	HEX
	Modbus address	3268,3269	CANopen address	0x2B22,0x00
PtP0.36	Data size	32bit	Data format	HEX
	Modbus address	3272,3273	CANopen address	0x2B24,0x00
PtP0.38	Data size	32bit	Data format	HEX
	Modbus address	3276,3277	CANopen address	0x2B26,0x00
PtP0.40	Data size	32bit	Data format	HEX
	Modbus address	3280,3281	CANopen address	0x2B28,0x00
PtP0.42	Data size	32bit	Data format	HEX
	Modbus address	3284,3285	CANopen address	0x2B2A,0x00
PtP0.44	Data size	32bit	Data format	HEX
	Modbus address	3288,3289	CANopen address	0x2B2C,0x00

PtP0.46	Data size	32bit	Data format	HEX
	Modbus address	3292,3293	CANopen address	0x2B2E,0x00
PtP0.48	Data size	32bit	Data format	HEX
	Modbus address	3296,3297	CANopen address	0x2B30,0x00
PtP0.50	Data size	32bit	Data format	HEX
	Modbus address	3300,3301	CANopen address	0x2B32,0x00
PtP0.52	Data size	32bit	Data format	HEX
	Modbus address	3304,3305	CANopen address	0x2B34,0x00
PtP0.54	Data size	32bit	Data format	HEX
	Modbus address	3308,3309	CANopen address	0x2B36,0x00
PtP0.56	Data size	32bit	Data format	HEX
	Modbus address	3312,3313	CANopen address	0x2B38,0x00
PtP0.58	Data size	32bit	Data format	HEX
	Modbus address	3316,3317	CANopen address	0x2B3A,0x00
PtP0.60	Data size	32bit	Data format	HEX
	Modbus address	3320,3321	CANopen address	0x2B3C,0x00
PtP0.62	Data size	32bit	Data format	HEX
	Modbus address	3324,3325	CANopen address	0x2B3E,0x00
PtP0.64	Data size	32bit	Data format	HEX
	Modbus address	3328,3329	CANopen address	0x2B40,0x00
PtP0.66	Data size	32bit	Data format	HEX
	Modbus address	3332,3333	CANopen address	0x2B42,0x00
PtP0.68	Data size	32bit	Data format	HEX
	Modbus address	3336,3337	CANopen address	0x2B44,0x00
PtP0.70	Data size	32bit	Data format	HEX
	Modbus address	3340,3341	CANopen address	0x2B46,0x00
PtP0.72	Data size	32bit	Data format	HEX
	Modbus address	3344,3345	CANopen address	0x2B48,0x00
PtP0.74	Data size	32bit	Data format	HEX
	Modbus address	3348,3349	CANopen address	0x2B4A,0x00
PtP0.76	Data size	32bit	Data format	HEX
	Modbus address	3352,3353	CANopen address	0x2B4C,0x00
PtP0.78	Data size	32bit	Data format	HEX
	Modbus address	3356,3357	CANopen address	0x2B4E,0x00
PtP0.80	Data size	32bit	Data format	HEX
	Modbus address	3360,3361	CANopen address	0x2B50,0x00
PtP0.82	Data size	32bit	Data format	HEX
	Modbus address	3364,3365	CANopen address	0x2B52,0x00
PtP0.84	Data size	32bit	Data format	HEX
	Modbus address	3368,3369	CANopen address	0x2B54,0x00

PtP0.86	Data size	32bit	Data format	HEX
	Modbus address	3372,3373	CANopen address	0x2B56,0x00
PtP0.88	Data size	32bit	Data format	HEX
	Modbus address	3376,3377	CANopen address	0x2B58,0x00
PtP0.90	Data size	32bit	Data format	HEX
	Modbus address	3380,3381	CANopen address	0x2B5A,0x00
PtP0.92	Data size	32bit	Data format	HEX
	Modbus address	3384,3385	CANopen address	0x2B5C,0x00
PtP0.94	Data size	32bit	Data format	HEX
	Modbus address	3388,3389	CANopen address	0x2B5E,0x00
PtP0.96	Data size	32bit	Data format	HEX
	Modbus address	3392,3393	CANopen address	0x2B60,0x00
PtP0.98	Data size	32bit	Data format	HEX
	Modbus address	3396,3397	CANopen address	0x2B62,0x00

PtP0.03	Position of 01 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.05	Position of 02 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.07	Position of 03 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.09	Position of 04 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.11	Position of 05 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.13	Position of 06 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.15	Position of 07 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.17	Position of 08 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.19	Position of 09 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.21	Position of 10 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.23	Position of 11 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.25	Position of 12 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.27	Position of 13 step	Setting range	Default	Unit	Available mode			

		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.29	Position of 14 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.31	Position of 15 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.33	Position of 16 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.35	Position of 17 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.37	Position of 18 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.39	Position of 19 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.41	Position of 20 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.43	Position of 21 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.45	Position of 22 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.47	Position of 23 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.49	Position of 24 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.51	Position of 25 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.53	Position of 26 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.55	Position of 27 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.57	Position of 28 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.59	Position of 29 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.61	Position of 30 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.63	Position of 31 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.65	Position of 32 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.67	Position of 33 step	Setting range	Default	Unit	Available mode			

		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.69	Position of 34 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.71	Position of 35 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.73	Position of 36 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.75	Position of 37 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.77	Position of 38 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.79	Position of 39 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.81	Position of 40 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.83	Position of 41 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.85	Position of 42 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.87	Position of 43 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.89	Position of 44 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.91	Position of 45 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.93	Position of 46 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.95	Position of 47 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.97	Position of 48 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP0.99	Position of 49 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			

These parameters are used to set the target position of 01~49 point. CMD determines the command mode of the step position and P0.37 is invalid for this step.

PtP0.03	Data	32bit	Data format	DEC
	Modbus address	3206,3207	CANopen address	0x2B03,0x00
PtP0.05	Data	32bit	Data format	DEC
	Modbus address	3210,3211	CANopen address	0x2B05,0x00

PtP0.07	Data	32bit	Data format	DEC
	Modbus address	3214,3015	CANopen address	0x2B07,0x00
PtP0.09	Data	32bit	Data format	DEC
	Modbus address	3218,3219	CANopen address	0x2B09,0x00
PtP0.11	Data	32bit	Data format	DEC
	Modbus address	3222,3223	CANopen address	0x2B0B,0x00
PtP0.13	Data	32bit	Data format	DEC
	Modbus address	3226,3227	CANopen address	0x2B0D,0x00
PtP0.15	Data	32bit	Data format	DEC
	Modbus address	3230,3231	CANopen address	0x2B0F,0x00
PtP0.17	Data	32bit	Data format	DEC
	Modbus address	3234,3235	CANopen address	0x2B11,0x00
PtP0.19	Data	32bit	Data format	DEC
	Modbus address	3238,3239	CANopen address	0x2B13,0x00
PtP0.21	Data	32bit	Data format	DEC
	Modbus address	3242,3243	CANopen address	0x2B15,0x00
PtP0.23	Data	32bit	Data format	DEC
	Modbus address	3246,3247	CANopen address	0x2B17,0x00
PtP0.25	Data	32bit	Data format	DEC
	Modbus address	3250,3251	CANopen address	0x2B19,0x00
PtP0.27	Data	32bit	Data format	DEC
	Modbus address	3254,3255	CANopen address	0x2B1B,0x00
PtP0.29	Data	32bit	Data format	DEC
	Modbus address	3258,3259	CANopen address	0x2B1D,0x00
PtP0.31	Data	32bit	Data format	DEC
	Modbus address	3262,3263	CANopen address	0x2B1F,0x00
PtP0.33	Data	32bit	Data format	DEC
	Modbus address	3266,3267	CANopen address	0x2B21,0x00
PtP0.35	Data	32bit	Data format	DEC
	Modbus address	3270,3271	CANopen address	0x2B23,0x00
PtP0.37	Data	32bit	Data format	DEC
	Modbus address	3274,3075	CANopen address	0x2B25,0x00
PtP0.39	Data	32bit	Data format	DEC
	Modbus address	3278,3279	CANopen address	0x2B27,0x00
PtP0.41	Data	32bit	Data format	DEC
	Modbus address	3282,3283	CANopen address	0x2B29,0x00
PtP0.43	Data	32bit	Data format	DEC
	Modbus address	3286,3287	CANopen address	0x2B2B,0x00
PtP0.45	Data	32bit	Data format	DEC
	Modbus address	3290,3291	CANopen address	0x2B2D,0x00

PtP0.47	Data	32bit	Data format	DEC
	Modbus address	3294,3295	CANopen address	0x2B2F,0x00
PtP0.49	Data	32bit	Data format	DEC
	Modbus address	3298,3299	CANopen address	0x2B31,0x00
PtP0.51	Data	32bit	Data format	DEC
	Modbus address	3302,3303	CANopen address	0x2B33,0x00
PtP0.53	Data	32bit	Data format	DEC
	Modbus address	3306,3307	CANopen address	0x2B35,0x00
PtP0.55	Data	32bit	Data format	DEC
	Modbus address	3310,3311	CANopen address	0x2B37,0x00
PtP0.57	Data	32bit	Data format	DEC
	Modbus address	3314,3315	CANopen address	0x2B39,0x00
PtP0.59	Data	32bit	Data format	DEC
	Modbus address	3318,3319	CANopen address	0x2B3B,0x00
PtP0.61	Data	32bit	Data format	DEC
	Modbus address	3322,3323	CANopen address	0x2B3D,0x00
PtP0.63	Data	32bit	Data format	DEC
	Modbus address	3326,3327	CANopen address	0x2B3F,0x00
PtP0.65	Data	32bit	Data format	DEC
	Modbus address	3330,3331	CANopen address	0x2B41,0x00
PtP0.67	Data	32bit	Data format	DEC
	Modbus address	3334,3335	CANopen address	0x2B43,0x00
PtP0.69	Data	32bit	Data format	DEC
	Modbus address	3338,3339	CANopen address	0x2B45,0x00
PtP0.71	Data	32bit	Data format	DEC
	Modbus address	3342,3343	CANopen address	0x2B47,0x00
PtP0.73	Data	32bit	Data format	DEC
	Modbus address	3346,3347	CANopen address	0x2B49,0x00
PtP0.75	Data	32bit	Data format	DEC
	Modbus address	3350,3351	CANopen address	0x2B4B,0x00
PtP0.77	Data	32bit	Data format	DEC
	Modbus address	3354,3355	CANopen address	0x2B4D,0x00
PtP0.79	Data	32bit	Data format	DEC
	Modbus address	3358,3359	CANopen address	0x2B4F,0x00
PtP0.81	Data	32bit	Data format	DEC
	Modbus address	3362,3363	CANopen address	0x2B51,0x00
PtP0.83	Data	32bit	Data format	DEC
	Modbus address	3366,3367	CANopen address	0x2B53,0x00
PtP0.85	Data	32bit	Data format	DEC
	Modbus address	3370,3371	CANopen address	0x2B55,0x00

PtP0.87	Data	32bit	Data format	DEC
	Modbus address	3374,3375	CANopen address	0x2B57,0x00
PtP0.89	Data	32bit	Data format	DEC
	Modbus address	3378,3379	CANopen address	0x2B59,0x00
PtP0.91	Data	32bit	Data format	DEC
	Modbus address	3382,3383	CANopen address	0x2B5B,0x00
PtP0.93	Data	32bit	Data format	DEC
	Modbus address	3386,3387	CANopen address	0x2B5D,0x00
PtP0.95	Data	32bit	Data format	DEC
	Modbus address	3390,3391	CANopen address	0x2B5F,0x00
PtP0.97	Data	32bit	Data format	DEC
	Modbus address	3394,3395	CANopen address	0x2B61,0x00
PtP0.99	Data	32bit	Data format	DEC
	Modbus address	3398,3399	CANopen address	0x2B63,0x00

PtP1.00	Control word of 50 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP1.02	Control word of 51 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP1.04	Control word of 52 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP1.06	Control word of 53 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP1.08	Control word of 54 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP1.10	Control word of 55 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP1.12	Control word of 56 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP1.14	Control word of 57 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP1.16	Control word of 58 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP1.18	Control word of 59 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP1.20	Control word of 60 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP1.22	Control word of 61 step	Setting range	Default	Unit	Available mode
		0~0x7FFFFFFF	0x00000000	-	P
PtP1.24	Control word of 62 step	Setting range	Default	Unit	Available mode

		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.26	Control word of 63 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.28	Control word of 64 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.30	Control word of 65 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.32	Control word of 66 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.34	Control word of 67 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.36	Control word of 68 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.38	Control word of 69 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.40	Control word of 70 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.42	Control word of 71 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.44	Control word of 72 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.46	Control word of 73 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.48	Control word of 74 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.50	Control word of 75 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.52	Control word of 76 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.54	Control word of 77 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.56	Control word of 78 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.58	Control word of 79 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.60	Control word of 80 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.62	Control word of 81 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.64	Control word of 82 step	Setting range	Default	Unit	Available mode			

		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.66	Control word of 83 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.68	Control word of 84 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.70	Control word of 85 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.72	Control word of 86 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.74	Control word of 87 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.76	Control word of 88 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.78	Control word of 89 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.80	Control word of 90 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.82	Control word of 91 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.84	Control word of 92 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.86	Control word of 93 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.88	Control word of 94 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.90	Control word of 95 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.92	Control word of 96 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.94	Control word of 97 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.96	Control word of 98 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			
PtP1.98	Control word of 99 step	Setting range	Default	Unit	Available mode			
		0~0x7FFFFFFF	0x00000000	-	P			

This group of parameters are used to set the control word of the 50~99 point. Refer to PtP0.00 for detailed instruction.

PtP1.00	Data size	32bit	Data format	HEX
	Modbus address	3400,3401	CANopen address	0x2C00,0x00
PtP1.02	Data size	32bit	Data format	HEX

	Modbus address	3404,3405	CANopen address	0x2C02,0x00
PtP1.04	Data size	32bit	Data format	HEX
	Modbus address	3408,3409	CANopen address	0x2C04,0x00
PtP1.06	Data size	32bit	Data format	HEX
	Modbus address	3412,3413	CANopen address	0x2C06,0x00
PtP1.08	Data size	32bit	Data format	HEX
	Modbus address	3416,3417	CANopen address	0x2C08,0x00
PtP1.10	Data size	32bit	Data format	HEX
	Modbus address	3420,3421	CANopen address	0x2C0A,0x00
PtP1.12	Data size	32bit	Data format	HEX
	Modbus address	3424,3425	CANopen address	0x2C0C,0x00
PtP1.14	Data size	32bit	Data format	HEX
	Modbus address	3428,3429	CANopen address	0x2C0E,0x00
PtP1.16	Data size	32bit	Data format	HEX
	Modbus address	3432,3433	CANopen address	0x2C10,0x00
PtP1.18	Data size	32bit	Data format	HEX
	Modbus address	3436,3437	CANopen address	0x2C12,0x00
PtP1.20	Data size	32bit	Data format	HEX
	Modbus address	3440,3441	CANopen address	0x2C14,0x00
PtP1.22	Data size	32bit	Data format	HEX
	Modbus address	3444,3445	CANopen address	0x2C16,0x00
PtP1.24	Data size	32bit	Data format	HEX
	Modbus address	3448,3449	CANopen address	0x2C18,0x00
PtP1.26	Data size	32bit	Data format	HEX
	Modbus address	3452,3453	CANopen address	0x2C1A,0x00
PtP1.28	Data size	32bit	Data format	HEX
	Modbus address	3456,3457	CANopen address	0x2C1C,0x00
PtP1.30	Data size	32bit	Data format	HEX
	Modbus address	3460,3461	CANopen address	0x2C1E,0x00
PtP1.32	Data size	32bit	Data format	HEX
	Modbus address	3464,3465	CANopen address	0x2C20,0x00
PtP1.34	Data size	32bit	Data format	HEX
	Modbus address	3468,3469	CANopen address	0x2C22,0x00
PtP1.36	Data size	32bit	Data format	HEX
	Modbus address	3472,3473	CANopen address	0x2C24,0x00
PtP1.38	Data size	32bit	Data format	HEX
	Modbus address	3476,3477	CANopen address	0x2C26,0x00
PtP1.40	Data size	32bit	Data format	HEX
	Modbus address	3480,3481	CANopen address	0x2C28,0x00
PtP1.42	Data size	32bit	Data format	HEX

	Modbus address	3484,3485	CANopen address	0x2C2A,0x00
PtP1.44	Data size	32bit	Data format	HEX
	Modbus address	3488,3489	CANopen address	0x2C2C,0x00
PtP1.46	Data size	32bit	Data format	HEX
	Modbus address	3492,3493	CANopen address	0x2C2E,0x00
PtP1.48	Data size	32bit	Data format	HEX
	Modbus address	3496,3497	CANopen address	0x2C30,0x00
PtP1.50	Data size	32bit	Data format	HEX
	Modbus address	3500,3501	CANopen address	0x2C32,0x00
PtP1.52	Data size	32bit	Data format	HEX
	Modbus address	3504,3505	CANopen address	0x2C34,0x00
PtP1.54	Data size	32bit	Data format	HEX
	Modbus address	3508,3509	CANopen address	0x2C36,0x00
PtP1.56	Data size	32bit	Data format	HEX
	Modbus address	3512,3513	CANopen address	0x2C38,0x00
PtP1.58	Data size	32bit	Data format	HEX
	Modbus address	3516,3517	CANopen address	0x2C3A,0x00
PtP1.60	Data size	32bit	Data format	HEX
	Modbus address	3520,3521	CANopen address	0x2C3C,0x00
PtP1.62	Data size	32bit	Data format	HEX
	Modbus address	3524,3525	CANopen address	0x2C3E,0x00
PtP1.64	Data size	32bit	Data format	HEX
	Modbus address	3528,3529	CANopen address	0x2C40,0x00
PtP1.66	Data size	32bit	Data format	HEX
	Modbus address	3532,3533	CANopen address	0x2C42,0x00
PtP1.68	Data size	32bit	Data format	HEX
	Modbus address	3536,3537	CANopen address	0x2C44,0x00
PtP1.70	Data size	32bit	Data format	HEX
	Modbus address	3540,3541	CANopen address	0x2C46,0x00
PtP1.72	Data size	32bit	Data format	HEX
	Modbus address	3544,3545	CANopen address	0x2C48,0x00
PtP1.74	Data size	32bit	Data format	HEX
	Modbus address	3548,3549	CANopen address	0x2C4A,0x00
PtP1.76	Data size	32bit	Data format	HEX
	Modbus address	3552,3553	CANopen address	0x2C4C,0x00
PtP1.78	Data size	32bit	Data format	HEX
	Modbus address	3556,3557	CANopen address	0x2C4E,0x00
PtP1.80	Data size	32bit	Data format	HEX
	Modbus address	3560,3561	CANopen address	0x2C50,0x00
PtP1.82	Data size	32bit	Data format	HEX

	Modbus address	3564,3565	CANopen address	0x2C52,0x00
PtP1.84	Data size	32bit	Data format	HEX
	Modbus address	3568,3569	CANopen address	0x2C54,0x00
PtP1.86	Data size	32bit	Data format	HEX
	Modbus address	3572,3573	CANopen address	0x2C56,0x00
PtP1.88	Data size	32bit	Data format	HEX
	Modbus address	3576,3577	CANopen address	0x2C58,0x00
PtP1.90	Data size	32bit	Data format	HEX
	Modbus address	3580,3581	CANopen address	0x2C5A,0x00
PtP1.92	Data size	32bit	Data format	HEX
	Modbus address	3584,3585	CANopen address	0x2C5C,0x00
PtP1.94	Data size	32bit	Data format	HEX
	Modbus address	3588,3589	CANopen address	0x2C5E,0x00
PtP1.96	Data size	32bit	Data format	HEX
	Modbus address	3592,3593	CANopen address	0x2C60,0x00
PtP1.98	Data size	32bit	Data format	HEX
	Modbus address	3596,3597	CANopen address	0x2C62,0x00

PtP1.01	Position of 50 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.03	Position of 51 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.05	Position of 52 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.07	Position of 53 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.09	Position of 54 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.11	Position of 55 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.13	Position of 56 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.15	Position of 57 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.17	Position of 58 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.19	Position of 59 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.21	Position of 60 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		

PtP1.23	Position of 61 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.25	Position of 62 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.27	Position of 63 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.29	Position of 64 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.31	Position of 65 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.33	Position of 66 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.35	Position of 67 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.37	Position of 68 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.39	Position of 69 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.41	Position of 70 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.43	Position of 71 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.45	Position of 72 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.47	Position of 73 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.49	Position of 74 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.51	Position of 75 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.53	Position of 76 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.55	Position of 77 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.57	Position of 78 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.59	Position of 79 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP1.61	Position of 80 step	Setting range	Default	Unit	Available mode		

		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP1.63	Position of 81 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP1.65	Position of 82 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP1.67	Position of 83 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP1.69	Position of 84 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP1.71	Position of 85 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP1.73	Position of 86 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP1.75	Position of 87 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP1.77	Position of 88 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP1.79	Position of 89 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP1.81	Position of 90 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP1.83	Position of 91 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP1.85	Position of 92 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP1.87	Position of 93 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP1.89	Position of 94 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP1.91	Position of 95 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP1.93	Position of 96 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP1.95	Position of 97 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP1.97	Position of 98 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP1.99	Position of 99 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			

This group of parameters are used to set the target position of 50~99 point. Attribute CMD determines the command mode of the step, P0.37 is invalid for the step.

PtP1.01	Data size	32bit	Data format	DEC
	Modbus address	3402,3403	CANopen address	0x2C03,0x00
PtP1.03	Data size	32bit	Data format	DEC
	Modbus address	3406,3407	CANopen address	0x2C03,0x00
PtP1.05	Data size	32bit	Data format	DEC
	Modbus address	3410,3411	CANopen address	0x2C05,0x00
PtP1.07	Data size	32bit	Data format	DEC
	Modbus address	3414,3415	CANopen address	0x2C07,0x00
PtP1.09	Data size	32bit	Data format	DEC
	Modbus address	3418,3419	CANopen address	0x2C09,0x00
PtP1.11	Data size	32bit	Data format	DEC
	Modbus address	3422,3423	CANopen address	0x2C0B,0x00
PtP1.13	Data size	32bit	Data format	DEC
	Modbus address	3426,3427	CANopen address	0x2C0D,0x00
PtP1.15	Data size	32bit	Data format	DEC
	Modbus address	3430,3431	CANopen address	0x2C0F,0x00
PtP1.17	Data size	32bit	Data format	DEC
	Modbus address	3434,3435	CANopen address	0x2C11,0x00
PtP1.19	Data size	32bit	Data format	DEC
	Modbus address	3438,3439	CANopen address	0x2C13,0x00
PtP1.21	Data size	32bit	Data format	DEC
	Modbus address	3442,3443	CANopen address	0x2C15,0x00
PtP1.23	Data size	32bit	Data format	DEC
	Modbus address	3446,3447	CANopen address	0x2C17,0x00
PtP1.25	Data size	32bit	Data format	DEC
	Modbus address	3450,3451	CANopen address	0x2C19,0x00
PtP1.27	Data size	32bit	Data format	DEC
	Modbus address	3454,3455	CANopen address	0x2C1B,0x00
PtP1.29	Data size	32bit	Data format	DEC
	Modbus address	3458,3459	CANopen address	0x2C1D,0x00
PtP1.31	Data size	32bit	Data format	DEC
	Modbus address	3462,3463	CANopen address	0x2C1F,0x00
PtP1.33	Data size	32bit	Data format	DEC
	Modbus address	3466,3467	CANopen address	0x2C21,0x00
PtP1.35	Data size	32bit	Data format	DEC
	Modbus address	3470,3471	CANopen address	0x2C23,0x00
PtP1.37	Data size	32bit	Data format	DEC

	Modbus address	3474,3475	CANopen address	0x2C25,0x00
PtP1.39	Data size	32bit	Data format	DEC
	Modbus address	3478,3479	CANopen address	0x2C27,0x00
PtP1.41	Data size	32bit	Data format	DEC
	Modbus address	3482,3483	CANopen address	0x2C29,0x00
PtP1.43	Data size	32bit	Data format	DEC
	Modbus address	3486,3487	CANopen address	0x2C2B,0x00
PtP1.45	Data size	32bit	Data format	DEC
	Modbus address	3490,3491	CANopen address	0x2C2D,0x00
PtP1.47	Data size	32bit	Data format	DEC
	Modbus address	3494,3495	CANopen address	0x2C2F,0x00
PtP1.49	Data size	32bit	Data format	DEC
	Modbus address	3498,3499	CANopen address	0x2C31,0x00
PtP1.51	Data size	32bit	Data format	DEC
	Modbus address	3502,3503	CANopen address	0x2C33,0x00
PtP1.53	Data size	32bit	Data format	DEC
	Modbus address	3506,3507	CANopen address	0x2C35,0x00
PtP1.55	Data size	32bit	Data format	DEC
	Modbus address	3510,3511	CANopen address	0x2C37,0x00
PtP1.57	Data size	32bit	Data format	DEC
	Modbus address	3514,3515	CANopen address	0x2C39,0x00
PtP1.59	Data size	32bit	Data format	DEC
	Modbus address	3518,3519	CANopen address	0x2C3B,0x00
PtP1.61	Data size	32bit	Data format	DEC
	Modbus address	3522,3523	CANopen address	0x2C3D,0x00
PtP1.63	Data size	32bit	Data format	DEC
	Modbus address	3526,3527	CANopen address	0x2C3F,0x00
PtP1.65	Data size	32bit	Data format	DEC
	Modbus address	3530,3531	CANopen address	0x2C41,0x00
PtP1.67	Data size	32bit	Data format	DEC
	Modbus address	3534,3535	CANopen address	0x2C43,0x00
PtP1.69	Data size	32bit	Data format	DEC
	Modbus address	3538,3539	CANopen address	0x2C45,0x00
PtP1.71	Data size	32bit	Data format	DEC
	Modbus address	3542,3543	CANopen address	0x2C47,0x00
PtP1.73	Data size	32bit	Data format	DEC
	Modbus address	3546,3547	CANopen address	0x2C49,0x00
PtP1.75	Data size	32bit	Data format	DEC
	Modbus address	3550,3551	CANopen address	0x2C4B,0x00
PtP1.77	Data size	32bit	Data format	DEC

	Modbus address	3554,3555	CANopen address	0x2C4D,0x00
PtP1.79	Data size	32bit	Data format	DEC
	Modbus address	3558,3559	CANopen address	0x2C4F,0x00
PtP1.81	Data size	32bit	Data format	DEC
	Modbus address	3562,3563	CANopen address	0x2C51,0x00
PtP1.83	Data size	32bit	Data format	DEC
	Modbus address	3566,3567	CANopen address	0x2C53,0x00
PtP1.85	Data size	32bit	Data format	DEC
	Modbus address	3570,3571	CANopen address	0x2C55,0x00
PtP1.87	Data size	32bit	Data format	DEC
	Modbus address	3574,3575	CANopen address	0x2C57,0x00
PtP1.89	Data size	32bit	Data format	DEC
	Modbus address	3578,3579	CANopen address	0x2C59,0x00
PtP1.91	Data size	32bit	Data format	DEC
	Modbus address	3582,3583	CANopen address	0x2C5B,0x00
PtP1.93	Data size	32bit	Data format	DEC
	Modbus address	3586,3587	CANopen address	0x2C5D,0x00
PtP1.95	Data size	32bit	Data format	DEC
	Modbus address	3590,3591	CANopen address	0x2C5F,0x00
PtP1.97	Data size	32bit	Data format	DEC
	Modbus address	3594,3595	CANopen address	0x2C61,0x00
PtP1.99	Data size	32bit	Data format	DEC
	Modbus address	3598,3599	CANopen address	0x2C63,0x00

PtP2.00	Control word of 100 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.02	Control word of 101 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.04	Control word of 102 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.06	Control word of 103 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.08	Control word of 104 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.10	Control word of 105 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.12	Control word of 106 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.14	Control word of 107 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		

PtP2.16	Control word of 108 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.18	Control word of 109 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.20	Control word of 110 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.22	Control word of 111 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.24	Control word of 112 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.26	Control word of 113 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.28	Control word of 114 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.30	Control word of 115 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.32	Control word of 116 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.34	Control word of 117 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.36	Control word of 118 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.38	Control word of 119 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.40	Control word of 120 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.42	Control word of 121 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.44	Control word of 122 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.46	Control word of 123 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.48	Control word of 124 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.50	Control word of 125 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.52	Control word of 126 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		
PtP2.54	Control word of 127 step	Setting range	Default	Unit	Available mode		
		0~0x7FFFFFFF	0x00000000	-	P		

This group of parameters are used to set the control word of 100~127 point. Refer to PtP0.00 for detailed instruction.				
PtP2.00	Data size	32bit	Data format	HEX
	Modbus address	3600,3601	CANopen address	0x2D00,0x00
PtP2.02	Data size	32bit	Data format	HEX
	Modbus address	3604,3605	CANopen address	0x2D02,0x00
PtP2.04	Data size	32bit	Data format	HEX
	Modbus address	3608,3609	CANopen address	0x2D04,0x00
PtP2.06	Data size	32bit	Data format	HEX
	Modbus address	3612,3613	CANopen address	0x2D06,0x00
PtP2.08	Data size	32bit	Data format	HEX
	Modbus address	3616,3617	CANopen address	0x2D08,0x00
PtP2.10	Data size	32bit	Data format	HEX
	Modbus address	3620,3621	CANopen address	0x2D0A,0x00
PtP2.12	Data size	32bit	Data format	HEX
	Modbus address	3624,3625	CANopen address	0x2D0C,0x00
PtP2.14	Data size	32bit	Data format	HEX
	Modbus address	3628,3629	CANopen address	0x2D0E,0x00
PtP2.16	Data size	32bit	Data format	HEX
	Modbus address	3632,3633	CANopen address	0x2D10,0x00
PtP2.18	Data size	32bit	Data format	HEX
	Modbus address	3636,3637	CANopen address	0x2D12,0x00
PtP2.20	Data size	32bit	Data format	HEX
	Modbus address	3640,3641	CANopen address	0x2D14,0x00
PtP2.22	Data size	32bit	Data format	HEX
	Modbus address	3644,3645	CANopen address	0x2D16,0x00
PtP2.24	Data size	32bit	Data format	HEX
	Modbus address	3648,3649	CANopen address	0x2D18,0x00
PtP2.26	Data size	32bit	Data format	HEX
	Modbus address	3652,3653	CANopen address	0x2D1A,0x00
PtP2.28	Data size	32bit	Data format	HEX
	Modbus address	3656,3657	CANopen address	0x2D1C,0x00
PtP2.30	Data size	32bit	Data format	HEX
	Modbus address	3660,3661	CANopen address	0x2D1E,0x00
PtP2.32	Data size	32bit	Data format	HEX
	Modbus address	3664,3665	CANopen address	0x2D20,0x00
PtP2.34	Data size	32bit	Data format	HEX
	Modbus address	3668,3669	CANopen address	0x2D22,0x00
PtP2.36	Data size	32bit	Data format	HEX
	Modbus address	3672,3673	CANopen address	0x2D24,0x00

PtP2.38	Data size	32bit	Data format	HEX
	Modbus address	3676,3677	CANopen address	0x2D26,0x00
PtP2.40	Data size	32bit	Data format	HEX
	Modbus address	3680,3681	CANopen address	0x2D28,0x00
PtP2.42	Data size	32bit	Data format	HEX
	Modbus address	3684,3685	CANopen address	0x2D2A,0x00
PtP2.44	Data size	32bit	Data format	HEX
	Modbus address	3688,3689	CANopen address	0x2D2C,0x00
PtP2.46	Data size	32bit	Data format	HEX
	Modbus address	3692,3693	CANopen address	0x2D2E,0x00
PtP2.48	Data size	32bit	Data format	HEX
	Modbus address	3696,3697	CANopen address	0x2D30,0x00
PtP2.50	Data size	32bit	Data format	HEX
	Modbus address	3700,3701	CANopen address	0x2D32,0x00
PtP2.52	Data size	32bit	Data format	HEX
	Modbus address	3704,3705	CANopen address	0x2D34,0x00
PtP2.54	Data size	32bit	Data format	HEX
	Modbus address	3708,3709	CANopen address	0x2D36,0x00

PtP2.01	Position of 100 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP2.03	Position of 101 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP2.05	Position of 102 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP2.07	Position of 103 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP2.09	Position of 104 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP2.11	Position of 105 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP2.13	Position of 106 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP2.15	Position of 107 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP2.17	Position of 108 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP2.19	Position of 109 step	Setting range	Default	Unit	Available mode		
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P		
PtP2.21	Position of 110 step	Setting range	Default	Unit	Available mode		

		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP2.23	Position of 111 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP2.25	Position of 112 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP2.27	Position of 113 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP2.29	Position of 114 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP2.31	Position of 115 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP2.33	Position of 116 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP2.35	Position of 117 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP2.37	Position of 118 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP2.39	Position of 119 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP2.41	Position of 120 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP2.43	Position of 121 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP2.45	Position of 122 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP2.47	Position of 123 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP2.49	Position of 124 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP2.51	Position of 125 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP2.53	Position of 126 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			
PtP2.55	Position of 127 step	Setting range	Default	Unit	Available mode			
		$-(2^{31}-1) \sim (2^{31}-1)$	0	pulse	P			

This group of parameters are used to set the target position of 100~127 point. Attribute CMD determines the command mode of the step position. P0.37 is invalid for the step.

PtP2.01	Data size	32bit	Data format	DEC
	Modbus address	3602,3603	CANopen address	0x2D01,0x00
PtP2.03	Data size	32bit	Data format	DEC

	Modbus address	3606,3607	CANopen address	0x2D03,0x00
PtP2.05	Data size	32bit	Data format	DEC
	Modbus address	3610,3611	CANopen address	0x2D05,0x00
PtP2.07	Data size	32bit	Data format	DEC
	Modbus address	3614,3615	CANopen address	0x2D07,0x00
PtP2.09	Data size	32bit	Data format	DEC
	Modbus address	3618,3619	CANopen address	0x2D09,0x00
PtP2.11	Data size	32bit	Data format	DEC
	Modbus address	3622,3623	CANopen address	0x2D0B,0x00
PtP2.13	Data size	32bit	Data format	DEC
	Modbus address	3626,3627	CANopen address	0x2D0D,0x00
PtP2.15	Data size	32bit	Data format	DEC
	Modbus address	3630,3631	CANopen address	0x2D0F,0x00
PtP2.17	Data size	32bit	Data format	DEC
	Modbus address	3634,3635	CANopen address	0x2D11,0x00
PtP2.19	Data size	32bit	Data format	DEC
	Modbus address	3638,3639	CANopen address	0x2D13,0x00
PtP2.21	Data size	32bit	Data format	DEC
	Modbus address	3642,3643	CANopen address	0x2D15,0x00
PtP2.23	Data size	32bit	Data format	DEC
	Modbus address	3646,3647	CANopen address	0x2D17,0x00
PtP2.25	Data size	32bit	Data format	DEC
	Modbus address	3650,3651	CANopen address	0x2D19,0x00
PtP2.27	Data size	32bit	Data format	DEC
	Modbus address	3654,3655	CANopen address	0x2D1B,0x00
PtP2.29	Data size	32bit	Data format	DEC
	Modbus address	3658,3659	CANopen address	0x2D1D,0x00
PtP2.31	Data size	32bit	Data format	DEC
	Modbus address	3662,3663	CANopen address	0x2D1F,0x00
PtP2.33	Data size	32bit	Data format	DEC
	Modbus address	3666,3667	CANopen address	0x2D21,0x00
PtP2.35	Data size	32bit	Data format	DEC
	Modbus address	3670,3671	CANopen address	0x2D23,0x00
PtP2.37	Data size	32bit	Data format	DEC
	Modbus address	3674,3675	CANopen address	0x2D25,0x00
PtP2.39	Data size	32bit	Data format	DEC
	Modbus address	3678,3679	CANopen address	0x2D27,0x00
PtP2.41	Data size	32bit	Data format	DEC
	Modbus address	3682,3683	CANopen address	0x2D29,0x00
PtP2.43	Data size	32bit	Data format	DEC

	Modbus address	3686,3687	CANopen address	0x2D2B,0x00
PtP2.45	Data size	32bit	Data format	DEC
	Modbus address	3690,3691	CANopen address	0x2D2D,0x00
PtP2.47	Data size	32bit	Data format	DEC
	Modbus address	3694,3695	CANopen address	0x2D2F,0x00
PtP2.49	Data size	32bit	Data format	DEC
	Modbus address	3698,3699	CANopen address	0x2D31,0x00
PtP2.51	Data size	32bit	Data format	DEC
	Modbus address	3702,3703	CANopen address	0x2D33,0x00
PtP2.53	Data size	32bit	Data format	DEC
	Modbus address	3706,3707	CANopen address	0x2D35,0x00
PtP2.55	Data size	32bit	Data format	DEC
	Modbus address	3710,3711	CANopen address	0x2D37,0x00

## 6.9 Factory parameters (P8,P9 and P10)

## 6.10 State monitoring

### 6.10.1 User monitoring parameters (R0 group)

R0.00	Motor speed	Display range	Precision	Unit
		-10000.0~10000.0	0.1	r/min

Display the actual speed of the servo motor

**Note:** This parameter is processed with filtering when displaying.

R0.00	Data size	32bit	Data format	DEC
	Modbus address	4000,4001	CANopen address	0x3000,0x00

R0.01	Speed command	Display range	Precision	Unit
		-10000.0~10000.0	0.1	r/min

Display the current speed command of the servo motor.

**Note:** If the ACC/DEC time is enabled, the speed command is processed by the ACC/DEC time.

R0.01	Data size	32bit	Data format	DEC
	Modbus address	4002,4003	CANopen address	0x3001,0x00

R0.02	Feedback pulse accumulation	Display range	Precision	Unit
		-(2 <sup>63</sup> -1)~(2 <sup>63</sup> -1)	1	pulse

Accumulate and display the feedback accumulation pulse of the servo motor encoder. With sign and the unit is the user unit.

R0.02	Data size	64bit	Data format	DEC
	Modbus address	4004,4005, 4006,4007	CANopen address	0x3002,0x00 0x3002,0x01

R0.03	Command pulse accumulation	Display range -(2 <sup>63</sup> -1)~(2 <sup>63</sup> -1)	Precision 1	Unit pulse
-------	----------------------------	---	----------------	---------------

Accumulate and display the command pulse accumulation. With sign and the unit is the user unit.

R0.03	Data size Modbus address	64bit 4008,4009, 4010,4011	Data format CANopen address	DEC 0x3003,0x00 0x3003,0x01
-------	-----------------------------	----------------------------------	--------------------------------	-----------------------------------

R0.04	Retention pulse	Display range -(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	Precision 1	Unit pulse
-------	-----------------	---	----------------	---------------

Display the number of retention pulses of the position deviation counter. The unit is the user unit

R0.04	Data size Modbus address	32bit 4012,4013	Data format CANopen address	DEC 0x3004,0x00
-------	-----------------------------	--------------------	--------------------------------	--------------------

R0.05	Hybrid control deviation	Display range -(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	Precision 1	Unit pulse
-------	--------------------------	---	----------------	---------------

This parameter is used to display the tolerance between the encoder feedback position and the grating feedback position in full-closed up mode. With sign, and the unit is the user unit.

R0.05	Data size Modbus address	32bit 4014,4015	Data format CANopen address	DEC 0x3005,0x00
-------	-----------------------------	--------------------	--------------------------------	--------------------

R0.06	Current torque	Display range -500.0~500.0	Precision 0.1	Unit %
-------	----------------	-------------------------------	------------------	-----------

Display the actual torque at present. If the rated torque of servo motor is 100.0%, the actual value will be converted to percentage value to be displayed.

R0.06	Data size Modbus address	16bit 4016,4017	Data format CANopen address	DEC 0x3006,0x00
-------	-----------------------------	--------------------	--------------------------------	--------------------

R0.07	DC voltage of main circuit	Display range 0.0~1000.0	Precision 0.1	Unit V
-------	----------------------------	-----------------------------	------------------	-----------

Display the DC voltage of main circuit.

R0.07	Data size Modbus address	16bit 4018,4019	Data format CANopen address	DEC 0x3007,0x00
-------	-----------------------------	--------------------	--------------------------------	--------------------

R0.08	DC voltage of control power	Display range 0.0~1000.0	Precision 0.1	Unit V
-------	-----------------------------	-----------------------------	------------------	-----------

Display the DC voltage of control power.

R0.08	Data size Modbus address	16bit 4020,4021	Data format CANopen address	DEC 0x3008,0x00
-------	-----------------------------	--------------------	--------------------------------	--------------------

<b>R0.09</b>	Output voltage	Display range	Precision	Unit
		0.0~1000.0	0.1	Vrms
Display the valid value of the current output voltage.				
<b>R0.09</b>	Data size	16bit	Data format	DEC
	Modbus address	4022,4023	CANopen address	0x3009,0x00
<b>R0.10</b>	Output current	Display range	Precision	Unit
		0.00~1000.00	0.01	Arms
Display the valid value of the output current.				
<b>R0.10</b>	Data size	16bit	Data format	DEC
	Modbus address	4024,4025	CANopen address	0x300A,0x00
<b>R0.11</b>	Drive temperature	Display range	Precision	Unit
		-55.0~180.0	0.1	°C
Display the current temperature of the IGBT module.				
<b>R0.11</b>	Data size	16bit	Data format	DEC
	Modbus address	4026,4027	CANopen address	0x300B,0x00
<b>R0.12</b>	Torque limit	Display range	Precision	Unit
		-500.0~500.0	0.1	%
Display the actual torque limit at present. If the rated torque is 100.0%, the actual value will be converted to percentage value to be displayed.				
<b>R0.12</b>	Data size	16bit	Data format	DEC
	Modbus address	4028,4029	CANopen address	0x300C,0x00
<b>R0.13</b>	Encoder feedback value	Display range	Precision	Unit
		0~1048575	1	pulse
Display the current encoder feedback value.				
<b>R0.13</b>	Data size	32bit	Data format	DEC
	Modbus address	4030,4031	CANopen address	0x300D,0x00
<b>R0.14</b>	Rotor relative to Z pulse position	Display range	Precision	Unit
		0~1048575	1	pulse
Display the mechanical absolute position of the motor in one encoder cycle. The unit is encoder resolution.				
<b>R0.14</b>	Data size	32bit	Data format	DEC
	Modbus address	4032,4033	CANopen address	0x300E,0x00
<b>R0.15</b>	Inertia ratio of load	Display range	Precision	Unit

		0~10000	1	%
Display the predicted value of the ratio of rotational inertia of the servo motor to that of the load converted onto the servo motor's shaft.				
R0.15	Data size	16bit	Data format	DEC
	Modbus address	4034,4035	CANopen address	0x300F,0x00
R0.16	Output power	Display range -500.0~500.0	Precision 0.1	Unit %
Display the output mechanical power of the drive. If the rated power of servo motor is 100.0%, the actual value will be converted to the percentage value to be displayed.				
<b>Note:</b> The negative value means the motor is in power generation state.				
R0.16	Data size	16bit	Data format	DEC
	Modbus address	4036,4037	CANopen address	0x3010,0x00
R0.17	Motor load ratio	Display range 0.0~500.0	Precision 0.1	Unit %
Display the actual motor load ratio. If the rated power is 100.0%, the actual value will be converted to the percentage value to be displayed.				
R0.18	Data size	16bit	Data format	DEC
	Modbus address	4038,4039	CANopen address	0x3011,0x00
R0.18	Molecule of actual electric gear ratio	Display range 0~(2 <sup>31</sup> -1)	Precision 1	Unit -
Display the molecule coefficient of actual electric gear ratio				
R0.18	Data size	32bit	Data format	DEC
	Modbus address	4040,4041	CANopen address	0x3012,0x00
R0.19	Denominator of actual electric gear ratio	Display range 1~(2 <sup>31</sup> -1)	Precision 1	Unit -
Display the denominator coefficient of actual electric gear ratio				
R0.19	Data size	32bit	Data format	DEC
	Modbus address	4042,4043	CANopen address	0x3013,0x00
R0.20	Position command speed	Display range -10000~10000	Precision 0.1	Unit r/min
Display the speed value corresponds to the position command.				
R0.20	Data size	32bit	Data format	DEC
	Modbus address	4044,4045	CANopen address	0x3014,0x00

<b>R0.21</b>	Motor speed (filtering)	Display range	Precision	Unit
		-10000~10000	0.1	r/min

Display the speed of the servo motor after filtering process.

<b>R0.21</b>	Data size	32bit	Data format	DEC
	Modbus address	4046,4047	CANopen address	0x3015,0x00

<b>R0.22</b>	Point state	Display range	Precision	Unit
		-1~215	1	-

Display the execution state of point control: -1: no point control executed; 0-15: step number of the point under executing; adding 200 to the step number means the step execution is finished.

<b>R0.22</b>	Data size	16bit	Data format	DEC
	Modbus address	4048,4049	CANopen address	0x3016,0x00

<b>R0.23</b>	Feedback of encoder absolute position	Display range	Precision	Unit
		-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	1	pulse

Display the feedback value of encoder absolute position, this value will change to 0 after zero-clearing operation.

<b>R0.23</b>	Data size	32bit	Data format	DEC
	Modbus address	4050,4051	CANopen address	0x3017,0x00

<b>R0.24</b>	EEPROM data state of the encoder	Display range	Precision	Unit
		0~3	-	-

Display the EEPROM state when EEPROM has no motor data or the data is not normal, the system will use the internal motor parameters.

Setting value	State
【0】	No EEPROM
1	EEPROM no data
2	EEPROM data error
3	EEPROM data normal

<b>R0.24</b>	Data size	16bit	Data format	DEC
	Modbus address	4052,4053	CANopen address	0x3018,0x00

<b>R0.25</b>	Circles of multi-turn encoder	Display range	Precision	Unit
		-32768~32767	0	-

Display the circles of multi-turn encoder.

<b>R0.25</b>	Data size	16bit	Data format	DEC
	Modbus address	4054, 4055	CANopen address	0x3019, 0x00

R0.26	Available encoder type	Display range	Precision	Unit
		0~6	-	-

Display the available encoder type.

Setting value	Meaning
【0】	Optical encoder
1	17-bit absolute value encoder
2	20-bit absolute value encoder
3	17-bit absolute value encoder and optical encoder
4	20-bit absolute value encoder and optical encoder
5	12-bit rotary transformer encoder
6	16-bit rotary transformer encoder

R0.26	Data size	16bit	Data format	DEC
	Modbus address	4056, 4057	CANopen address	0x301A, 0x00

R0.27	EtherCAT clock synchronous correction state	Display range	Precision	Unit
		0~1	-	-

Display whether the internal clock of drive is synchronized with DC Sync0 when EtherCAT communication synchronization mode adopts DC mode.

Setting value	Meaning
【0】	Unsynchronized
1	Synchronized

R0.27	Data size	16bit	Data format	DEC
	Modbus address	4058, 4059	CANopen address	0x301B, 0x00

R0.28	State of CANopen state machine machine	Display range	Precision	Unit
		0~18	-	-

The current state of CANopen state machine in CAN communication and the state of CoE(CANopen over EtherCAT) state machine in EtherCAT communication

Setting value	Communication mode	Meaning
【0】	CAN	Invalid
1		Init
2		Pre-Op
5		Stop
8		Op(Operational)
11		Init

	12		Pre-Op	
	14		Safe-Op	
	18		Op(Operational)	

R0.28	Data size	16bit	Data format	DEC
	Modbus address	4060, 4061	CANopen address	0x301C, 0x00

R0.29	Node of PROFIBUS-DP slave station	Display range	Precision	Unit
		0~99	-	-

Display the received node of PROFIBUS-DP slave station and correspond to the position of rotary switch.

R0.29	Data size	16bit	Data format	DEC
	Modbus address	4062,4063	CANopen address	0x301D,0x00

R0.30	System state	Display range	Precision	Unit
		0~6	-	-

Display the system state.

Setting value	State
【0】	Initialization
1	The high voltage
2	Ready
3	Operation
4	Forced to stop
5	Fault
6	STO-In

R0.30	Data size	16bit	Data format	DEC
	Modbus address	4064,4065	CANopen address	0x301E,0x00

R0.31	IGBT state	Display range	Precision	Unit
		0~1	-	-

Display the IGBT state.

Setting value	State
【0】	Off
1	On

R0.31	Data size	16bit	Data format	DEC
	Modbus address	4066,4067	CANopen address	0x301F,0x00

<b>R0.32</b>	Current mode	Display range	Precision	Unit	
		0~8	-	-	
Display the current control mode.					
		Setting value	State		
		【0】	Position mode		
		1	Speed mode		
		2	Torque mode		
		3	Speed-position mode		
		4	Speed-torque mode		
		5	Position-torque mode		
		6	Full closed loop mode		
		7	CANopen mode		
		8	Factory mode		
<b>R0.32</b>	Data size	16bit	Data format	DEC	
	Modbus address	4068,4069	CANopen address	0x3020,0x00	
<b>R0.33</b>	Power on time	Display range	Precision	Unit	
		0~(2 <sup>31</sup> -1)	1	s	
Display the total power on time of the drive.					
<b>R0.33</b>	Data size	32bit	Data format	DEC	
	Modbus address	4070,4071	CANopen address	0x3021,0x00	
<b>R0.34</b>	Operation time	Display range	Precision	Unit	
		0~(2 <sup>31</sup> -1)	1	s	
Display the total servo enabling operation time of the drive.					
<b>R0.34</b>	Data size	32bit	Data format	DEC	
	Modbus address	4072,4073	CANopen address	0x3022,0x00	
<b>R0.35</b>	DSP software version	Display range	Precision	Unit	
		0.00~10.00	0.01	-	
Display the DSP software version.					
<b>R0.35</b>	Data size	16bit	Data format	DEC	
	Modbus address	4074,4075	CANopen address	0x3023,0x00	
<b>R0.36</b>	FPGA software version	Display range	Precision	Unit	
		0.00~10.00	0.01	-	
Display the FPGA software version.					
<b>R0.36</b>	Data size	16bit	Data format	DEC	

	Modbus address	4076,4077	CANopen address	0x3024,0x00
R0.37	Communication card software version	Display range	Precision	Unit
		0.00~10.00	0.01	-
Display the communication card software version.				
R0.37	Data size	16bit	Data format	DEC
	Modbus address	4078,4079	CANopen address	0x3025,0x00
R0.38	Drive serial No.1	Display range	Precision	Unit
		0~65535	1	-
Display the drive serial No.1				
R0.38	Data size	16bit	Data format	DEC
	Modbus address	4080,4081	CANopen address	0x3026,0x00
R0.39	Drive serial No.2	Display range	Precision	Unit
		0~65535	1	-
Display the drive serial No.2				
R0.39	Data size	16bit	Data format	DEC
	Modbus address	4082,4083	CANopen address	0x3027,0x00
R0.40	Drive serial No.3	Display range	Precision	Unit
		0~65535	1	-
Display the drive serial No.3				
R0.40	Data size	16bit	Data format	DEC
	Modbus address	4084,4085	CANopen address	0x3028,0x00
R0.41	Drive serial No.4	Display range	Precision	Unit
		0~65535	1	-
Display the drive serial No.4				
R0.41	Data size	16bit	Data format	DEC
	Modbus address	4086,4087	CANopen address	0x3029,0x00
R0.42	Drive serial No.5	Display range	Precision	Unit
		0~65535	1	-
Display the drive serial No.5				
R0.42	Data size	16bit	Data format	DEC
	Modbus address	4088,4089	CANopen address	0x302A,0x00
R0.43	Drive serial No.6	Display range	Precision	Unit
		0~65535	1	-

Display the drive serial No.6				
R0.43	Data size	16bit	Data format	DEC
	Modbus address	4090,4091	CANopen address	0x302B,0x00
Display the feedback value of absolute position of grating ruler (2 <sup>nd</sup> encoder) in single circle.				
R0.44	Absolute position of grating ruler (2 <sup>nd</sup> encoder) in single circle	Display range 0~2 <sup>23</sup>	Precision 1	Unit pulse
Display the actual speed of the servo motor.				
R0.44	Data size	32bit	Data format	DEC
	Modbus address	4092, 4093	CANopen address	0x302C, 0x00
R0.45	Feedback of 2 <sup>nd</sup> encoder speed	Display range -10000.0~10000.0	Precision 0.1	Unit r/min
Detecting speed of speed observer.				
R0.46	Observing speed of speed observer	Display range -10000.0~10000.0	Precision 0.1	Unit r/min
R0.46	Data size	32bit	Data format	DEC
	Modbus address	4096,4097	CANopen address	0x302E,0x00
R0.47	Feedback speed of speed observer	Display range -10000.0~10000.0	Precision 0.1	Unit r/min
Feedback speed of speed observer				
R0.47	Data size	32bit	Data format	DEC
	Modbus address	4098,4099	CANopen address	0x302F,0x00
R0.48	Observing disturbance torque of disturbance observer	Display range -1000.0~1000.0	Precision 0.1	Unit %
Compensation torque of disturbance observer				
R0.48	Data size	32bit	Data format	DEC
	Modbus address	4100,4101	CANopen address	0x3030,0x00
R0.49	Compensation value of full closed-loop vibration suppressor	Display range -10000.0~10000.0	Precision 0.1	Unit r/min
Compensation value of full closed-loop vibration suppressor				
R0.49	Data size	32bit	Data format	DEC
	Modbus address	4102,4103	CANopen address	0x3031,0x00
R0.51	Observe load inertia ratio in real time	Display range	Precision	Unit

		0~10000	1	%
Display load inertia ratio observed in real time.				
R0.51	Data size	16bit	Data format	DEC
	Modbus address	4106,4107	CANopen address	0x3033,0x00
R0.52	Accumulation of the 2 <sup>nd</sup> encoder position feedback	(-2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	Precision	Unit
R0.52	Accumulation of gantry synchronization position (the 2 <sup>nd</sup> encoder).	(-2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	Precision	Unit
R0.53	Gantry synchronization position deviation	(-2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	Precision	Unit
R0.53	Gantry synchronization position deviation	(-2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	Precision	Unit
R0.54	Grating ruler (the 2 <sup>nd</sup> encoder)position feedback value	0~2 <sup>23</sup>	Precision	Unit
R0.54	Display the feedback position of grating ruler (2 <sup>nd</sup> encoder).	0~2 <sup>23</sup>	Precision	Unit
R0.55	Encoder circle number offset after zero clearing of multi-turn position	-32767~32767	Precision	Unit
R0.55	Display the offset of encoder circles after zero clearing of multi-turn position.	-32767~32767	Precision	Unit
R0.55	Encoder feedback value offset after zero clearing of multi-turn position	(-2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	Precision	Unit
R0.56	Encoder feedback value offset after zero clearing of multi-turn position	(-2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	Precision	Unit
R0.56	Display the offset of encoder feedback value after zero clearing of multi-turn position.	(-2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	Precision	Unit
R0.56	Encoder feedback value offset after zero clearing of multi-turn position	(-2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	Precision	Unit
R0.57	Accumulation of 2 <sup>nd</sup> encoder position feedback	(-2 <sup>63</sup> -1)~(2 <sup>63</sup> -1)	Precision	Unit
R0.57	Accumulation of 2 <sup>nd</sup> encoder position feedback	(-2 <sup>63</sup> -1)~(2 <sup>63</sup> -1)	Precision	Unit
R0.57	Data size	64bit	Data format	DEC
R0.57	Modbus address	4118,4119,4120,4121	CANopen address	0x3039,0x00

R0.99	Fault code	Display range		Precision	Unit
		-32768~32767		1	-
Display fault code, the hundreds are main fault code, tens and ones are sub-fault code.					
R0.99	Data size	16bit	Data format		DEC
	Modbus address	4198,4199	CANopen address		0x3063,0x00

### 6.10.2 IO monitoring parameters (R1)

R1.00	Digital input state	Display range		Precision	Unit
		0x000~0x3FF		-	-
R1.01	Digital output state	Display range		Precision	Unit
		0x00~0x3F		-	-

This value is arranged in digital order and indicates the hex number of digital terminal state. When a terminal is in ON state, its corresponding bit is 1. When a terminal is in OFF state, its corresponding bit is 0. Then, this binary number is converted into a hexadecimal number. For example, 000000001011 is denoted as 0x00B.

The digital input state is denoted as 3-digit hexadecimal number. The arrangement sequence of the digital input is listed as below: (the digits not listed are filled with 0).

BIT9	BIT8	BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0
SI10	SI9	SI8	SI7	SI6	SI5	SI4	SI3	SI2	SI1

The digital output state is denoted as 2-digit hexadecimal number. The arrangement sequence of the digital output is listed as below: (the digits not listed are filled with 0)

BIT5	BIT4	BIT3	BIT2	BIT1	BIT0
SO6	SO5	SO4	SO3	SO2	SO1

R1.00	Data size	16bit	Data format		HEX
	Modbus address	4200,4201	CANopen address		0x3100,0x00
R1.01	Data size	16bit	Data format		HEX
	Modbus address	4202,4203	CANopen address		0x3101,0x00

R1.02	Original voltage of analog input 1	Display range		Precision	Unit
		-10.000~10.000		0.001	V

Display the original voltage value of analog input channel 1

R1.02	Data size	32bit	Data format		DEC
	Modbus address	4204,4205	CANopen address		0x3102,0x00

R1.03	Original voltage of analog input 2	Display range		Precision	Unit
		-10.000~10.000		0.001	V

Display the original voltage value of analog input channel 2

R1.03	Data size	32bit	Data format		DEC
	Modbus address	4206,4207	CANopen address		0x3103,0x00

R1.04	Original voltage of analog input 3	Display range -10.000~10.000	Precision 0.001	Unit V
Display the original voltage value of analog input channel 3				
R1.04	Data size Modbus address	32bit 4208,4209	Data format CANopen address	DEC 0x3104,0x00
R1.05	Voltage of analog input 1	Display range -10.000~10.000	Precision 0.001	Unit V
Display the calibrated voltage value of analog input channel 1.				
R1.05	Data size Modbus address	32bit 4210,4211	Data format CANopen address	DEC 0x3105,0x00
R1.06	Voltage of analog input 2	Display range -10.000~10.000	Precision 0.001	Unit V
Display the calibrated voltage value of analog input channel 2				
R1.06	Data size Modbus address	32bit 4212,4213	Data format CANopen address	DEC 0x3106,0x00
R1.07	Voltage of analog input 3	Display range -10.000~10.000	Precision 0.001	Unit V
Display the calibrated voltage value of analog input channel 3				
R1.07	Data size Modbus address	32bit 4214,4215	Data format CANopen address	DEC 0x3107,0x00
R1.08	Voltage of analog output 1	Display range -10.000~10.000	Precision 0.001	Unit V
Display the output voltage value after offset treatment of analog output channel 1				
R1.08	Data size Modbus address	32bit 4216,4217	Data format CANopen address	DEC 0x3108,0x00
R1.09	Voltage of analog output 2	Display range -10.000~10.000	Precision 0.001	Unit V
Display the output voltage value after offset treatment of analog output channel 2				
R1.09	Data size Modbus address	32bit 4218,4219	Data format CANopen address	DEC 0x3109,0x00
R1.10	Voltage of analog output 3	Display range -10.000~10.000	Precision 0.001	Unit V
Display the output voltage value after offset treatment of analog output channel 3				
R1.10	Data size	32bit	Data format	DEC

	Modbus address	4220,4221	CANopen address	0x310A,0x00
R1.11	Cumulative value of pulse input	Display range -(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	Precision 1	Unit pulse
Accumulate and display the received pulse number from external pulse input.				
R1.11	Data size Modbus address	32bit 4222,4223	Data format CANopen address	DEC 0x310B,0x00
R1.12	Pulse position command	Display range -(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	Precision 1	Unit pulse
Display the position command value in each pulse input detection cycle (0.125ms by default).				
R1.12	Data size Modbus address	32bit 4224,4225	Data format CANopen address	DEC 0x310C,0x00
R1.13	Pulse speed command	Display range -10000.0~10000.0	Precision 0.1	Unit r/min
Pulse speed command is the speed command corresponds to pulse position command.				
R1.13	Data size Modbus address	32bit 4226,4227	Data format CANopen address	DEC 0x310D,0x00
R1.14	Analog compensation speed	Display range -10000.0~10000.0	Precision 0.1	Unit r/min
Display analog compensation speed.				
R1.14	Data size Modbus address	32bit 4228,4229	Data format CANopen address	DEC 0x310E,0x00
R1.15	Analog compensation torque	Display range -1000.0~1000.0	Precision 0.1	Unit %
Display analog compensation torque				
R1.15	Data size Modbus address	32bit 4230,4231	Data format CANopen address	DEC 0x310F,0x00
R1.16	Value of DI capture encoder	Display range -(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	Precision 1	Unit pulse
Display the encoder value captured by DI input.				
R1.16	Data size Modbus address	32bit 4232,4233	Data format CANopen address	DEC 0x3110,0x00

### 6.10.3 Factory monitoring parameters (R2)

### 6.10.4 Fault record parameter (R3)

<b>R3.00</b>	Fault code record	Display range	Precision	Unit	
		-	-	-	
Display the fault code when the fault occurs.					
The default is the latest 1 fault record.					
<b>R3.01</b>	Power on time when fault occurs	Display range	Precision	Unit	
		0~(2 <sup>31</sup> -1)	1	s	
Display the power on time when the fault occurs.					
<b>R3.02</b>	Operation time when fault occurs	Display range	Precision	Unit	
		0~(2 <sup>31</sup> -1)	1	s	
Display the operation time when fault occurs.					
<b>R3.03</b>	Motor speed when fault occurs	Display range	Precision	Unit	
		-20000~20000	1	r/min	
Display the motor speed when fault occurs.					
<b>R3.04</b>	Speed command when fault occurs	Display range	Precision	Unit	
		-20000~20000	1	r/min	
Display the speed command when fault occurs.					
<b>R3.05</b>	Feedback pulse accumulation when fault occurs	Display range	Precision	Unit	
		-(2 <sup>63</sup> -1)~(2 <sup>63</sup> -1)	1	pulse	
Display the feedback pulse accumulation when fault occurs.					
<b>R3.06</b>	Command pulse accumulation when fault occurs	Display range	Precision	Unit	
		-(2 <sup>63</sup> -1)~(2 <sup>63</sup> -1)	1	pulse	
Display the command pulse accumulation when fault occurs.					
<b>R3.07</b>	Stranded pulse when fault occurs	Display range	Precision	Unit	
		-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	1	pulse	
Display the stranded pulse when fault occurs.					
<b>R3.08</b>	Current torque when fault occurs	Display range	Precision	Unit	
		-500.0~500.0	0.1	%	
Display the current torque when fault occurs.					
<b>R3.09</b>	Main circuit DC voltage when fault occurs	Display range	Precision	Unit	
		0.0~1000.0	0.1	V	

Display the main circuit DC voltage when fault occurs.				
--	--	--	--	--

<b>R3.10</b>	Output voltage at fault	Display range	Precision	Unit
		0.0~1000.0	0.1	Vrms

Display the valid value of the output voltage when the fault occurs.				
--	--	--	--	--

<b>R3.11</b>	Output current at fault	Display range	Precision	Unit
		0.0~1000.0	0.1	Arms

Display the valid value of the output current when the fault occurs.				
--	--	--	--	--

<b>R3.20</b>	Latest fault record	Display range	Precision	Unit
		-	-	-

Displays the fault record of the previous fault.				
--	--	--	--	--

<b>R3.21</b>	Latest 2 fault record	Display range	Precision	Unit
		-	-	-

Display the fault record of the latest 2 fault.				
---	--	--	--	--

<b>R3.22</b>	Latest 3 fault record	Display range	Precision	Unit
		-	-	-

Display the fault record of the latest 3 fault.				
---	--	--	--	--

<b>R3.23</b>	Latest 4 fault record	Display range	Precision	Unit
		-	-	-

Display the fault record of the latest 4 fault.				
---	--	--	--	--

<b>R3.24</b>	Latest 5 fault record	Display range	Precision	Unit
		-	-	-

Display the fault record of the latest 5 fault.				
---	--	--	--	--

<b>R3.25</b>	Latest 6 fault record	Display range	Precision	Unit
		-	-	-

Display the fault record of the latest 6 fault.				
---	--	--	--	--

<b>R3.26</b>	Latest 7 fault record	Display range	Precision	Unit
		-	-	-

Display the fault record of the latest 7 fault.				
---	--	--	--	--

<b>R3.27</b>	Latest 8 fault record	Display range	Precision	Unit
		-	-	-

Display the fault record of the latest 8 fault.				
---	--	--	--	--

R3.28	Latest 9 fault record	Display range	Precision	Unit
		-	-	-
Display the fault record of the latest 9 fault.				
R3.29	Latest 10 fault record	Display range	Precision	Unit
		-	-	-
Display the fault record of the latest 10 fault.				

# Chapter 7 Commissioning

## 7.1 Operation instruction of inertia identification

Inertia identification is divided into online mode and offline mode.

### 1. Online inertia identification:

It is necessary to set following parameters when online inertia identification is selected:

- 1).P1.00; 2.P1.08. If P1.00 and P1.08 is larger than 0, the online mode is valid. If the inertia identification requirements are met, (1. the speed is larger than 150r/min;  
2). the ACC time is longer than 20 ms;  
3).the continuous acceleration range is more than 150r/min;  
4). in 0.3 seconds, the speed can accelerate from 0r/min to 3000 r/min), the identification result will be updated to P1.01 and written into EEPROM in every 30 minutes automatically.

### 2. Offline inertia identification:

It is necessary to set following parameters when offline inertia identification is selected: 1.P1.05; 2.P1.06. 3. P1.07. The offline mode is available by the auxiliary function EF-JId of the panel operation. Refer to section 5.2.5.5 for the procedure. The offline mode is not affected by P1.00 and P1.08.

Before executing the auxiliary function of EF-JId, set P1.05 according to the operation mode of the motor, set P1.06 according to the rotating cycle and set P1.07 according to the mechanical rigidity.

The stronger the mechanical rigidity, the smaller the ACC/DEC time constant. Set P1.05 to 1 or 2. The smaller the value of P1.06 and P1.07 is, the more correct the identification result.

When executing the auxiliary function of EF-JId, please ensure P1.05 and P1.06 meet the needs; otherwise, there may be damage to the machine. Press Mode key can stop the execution.

If the execution EF-JId is finished normally, the identification result will be saved into P1.01 automatically. If there is fault, P1.01 will keep the result before identification. If it reports Er25-7, increase P1.06 or reduce P1.07.

The precision of the identification result will be affected if following occur: 1. Mechanical rigidity is low; 2. The load inertia change too fast; 3. There is a space; 4. The external disturbance changes too fast.

## 7.2 General method for parameters adjusting

There are two kinds of parameters adjustment:

1. Automatic adjustment setting of rigid choice. The inertia ratio of the load can be counted manually.

There are 32 steps of rigidity for the gain setting of the loop.

- ◆ The adjustment needs to be carried out to the actual situation:

Mechanical structure	Rigid set
Big handling, transmission equipment	0~13
Belt drive mechanism	5~16
Ball screw + Belt drive	5~16
Manipulator	15~22
Direct ball screw or rigid bodies	18~25

The bigger the set value, the faster the system response, however, noise and vibration may come along. Please make corresponding setting according to the action of mechanical device.

2. Manual adjustment. If the servo system has vibration or the control performance is not good, adjusting the parameters of speed loop and position loop to improve system performance or remove vibration.

Gain of the speed loop: mainly used to determine the response speed of the speed loop. Under the precondition the mechanical system does not vibrate, the larger the set value, the faster the response speed.

Speed loop integration time constant: the speed loop has an integrator which can reflect minor input. This integrator can delay the operation of the servo system. Therefore, when time constant increases, the response becomes slower, and the required positioning setting time is longer. When the load inertia is large or the mechanical system is likely to vibrate, the loop integration time parameter must be large enough to avoid the vibration of the mechanical system.

Torque command filter: in some cases the mechanical system may resonate, generating vibration noise in sharp tone. At this time filtering via notch filter must be performed to eliminate resonance.

Gain of the position loop: the response of the servo system is determined by the gain of the position loop. When the gain of the position loop is set to a high value, the response speed will increase and the time required for positioning will be shortened. If you want to set the gain of the position loop to a high value, the rigidity and natural frequency of the mechanical system must be very high.

Generally, the gain of the speed loop should be larger than the gain of the position loop whenever possible. When the position gain is much larger than the speed gain, the system may overshoot under the action of the step signal, which will seriously damage the system performance. Parameters of the system always mutually limit each other. If the gain of the position loop increases only, the command outputted by the position loop may become unstable. This may cause the reaction of the servo system to become unstable. In general cases, we can adjust the system by referring to the follow procedures:

- 1) First set the gain of the position loop to a low value, then, under the precondition that abnormal sound and vibration are not generated, gradually increase the gain of the speed loop to the maximum.
- 2) Gradually decrease the gain of the speed loop while increasing the gain of the position loop. Under the precondition that the whole response is free from overshoot and vibration, set the gain of the

position loop to the maximum.

3) Speed loop integral time constant depends on the length of the positioning time. Please decrease this value as small as possible under the precondition that the mechanical system does not vibrate.

4) After that, finely adjust the gain of the position loop, speed loop and the integration time constant to find their optimal values.

Hereunder we illustrate several typical cases (in each case, only one parameter is changed relative to a case when the parameters are appropriate):

- ◆ Parameters are appropriate

In this case the parameters are set relatively appropriate. The motor speed can closely follow the position command, the speed has basically no overshoot, and the positioning time is relatively short.

- ◆ Speed loop integral time constant is relatively small

The speed loop of the servo drive must have high reaction speed. When the speed fluctuates, it indicates that the stability of the speed loop is damaged due to the shorting integration time of the speed loop. This causes the servo motor to run unstably at fluctuating speed.

- ◆ Speed loop integration time constant is relatively large

In this case, there is no apparent difference with the case when the parameters are appropriate. The influence of the speed loop integration on the speed follow-up position command is not very high, but too large speed loop integration time will delay the reaction time of the speed loop.

- ◆ Gain of the speed loop is relatively high

In this case, the motor speed will fluctuate. The influence is the same as the case when the speed loop integration time is too short. Both of them must keep coordinated. While increasing the gain of the speed loop, the speed loop integration time must also be increased. Otherwise the servo system will oscillate.

- ◆ Gain of the speed loop is too low

Decreasing the gain of the speed loop will cause fluctuation of the motor speed to fluctuate. By comparing with the case when the speed gain is too high we can know that the fluctuation frequency of the motor speed is lower in this case which fully indicates that increasing the gain of the speed loop can heighten the operating frequency of the system, improve the quick response performance of the system, and effectively overcome the influence of the interference.

- ◆ Gain of the position loop is excessively low

In the servo system, the operating frequency of the position loop is much lower than the speed loop. When the gain of the position loop is too low, the system is difficult to eliminate the position deviation formed during speed response. This can cause prolongation of the time interval of the motor speed follow-up position command.

- ◆ Gain of the position loop is excessively high

In the position servo system, the gain of the position loop also affects the stability. At this time, as the gain of the position loop is excessively high, it makes the motor speed to fluctuate. Additionally, comparing with the case when the gain of the position loop is too low we can know that the pure time delay of the response to the position command of the motor speed is decreased.

- ◆ Gain of the position loop is too low

When we adjust the gain of the position loop to a low value, the motor speed follow-up position command represents obvious lag and the positioning time is prolonged largely. The high accuracy and high response performance of the positioning system are seriously affected.

### 7.2.1 Adjustment of the gain of the position loop

The position control block diagram of the SV-DA200 series servo drive is shown in the figure below.

The gain parameters that can be adjusted in the position mode are marked out on the block diagram.

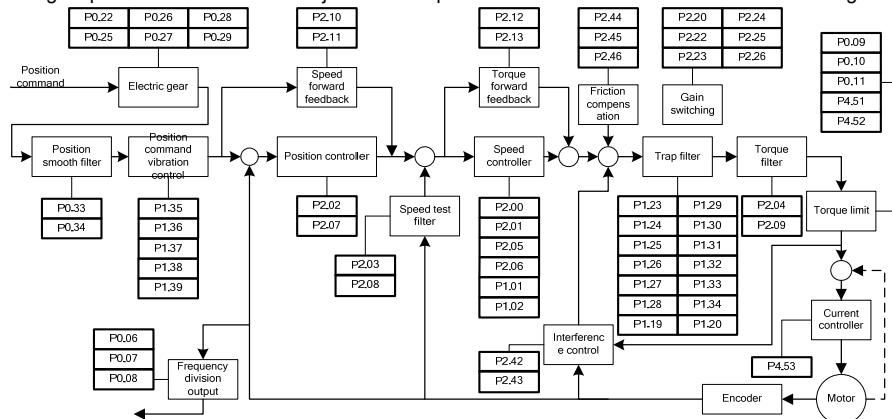


Fig. 7-1 Block diagram of position control

The general procedures for parameter adjustment in the position mode are:

#### 1) Initial setting of the parameters

The defaults of the parameters can be recovered by the default parameter recovering operation (see chapter 5.2.4 for details).

#### 2) Adjustment of the gain of the position loop

When the servo motor is running with default parameters, if the system oscillation occurs with buzz, the position gain(P2.02, P2.07) should be adjusted smaller. If the system rigidity is relatively small, the position gain should be adjusted larger.

#### 3) Adjustment of the position smoothing filter

During position control, if the position pulse commands input frequency varies largely, it may be caused by a larger impulse. At this time the position smoothing filters time constant(P0.33) or position

command FIR filter (P0.34) should be adjusted to moderate the impulse.

#### 4) Adjustment of the electronic gear

If the pulse transmission frequency of the pulse generator is restricted, or the transmission frequency does not meet the mechanical requirements, we can change the pulse input frequency by adjusting the value of the electronic gear parameters (P0.25, P0.26, P0.27, P0.28 and P0.29) to meet the requirements for position control.

#### 5) Adjustment of position feed-forward

In the case the retention pulse is large or fault-free follow-up is required, we can improve the position follow-up performance by adjusting the speed feed-forward gain parameter (P2.10) and speed feed-forward gain filter parameter (P2.11).However, it should be noted that if the speed feed-forward gain is too large, it may cause system oscillation.

#### 6) Frequency division of the feedback pulse output

If the feedback pulse needs to be outputted, the frequency division coefficient of pulse output (P0.06, P0.07) can be used to change the frequency of the output pulse.

### 7.2.2 Adjustment of the gain of the speed loop

The speed control block diagram of the SV-DA200 series servo drive is shown in the figure below.

The gain parameters that can be adjusted in the speed mode are marked on the block diagram.

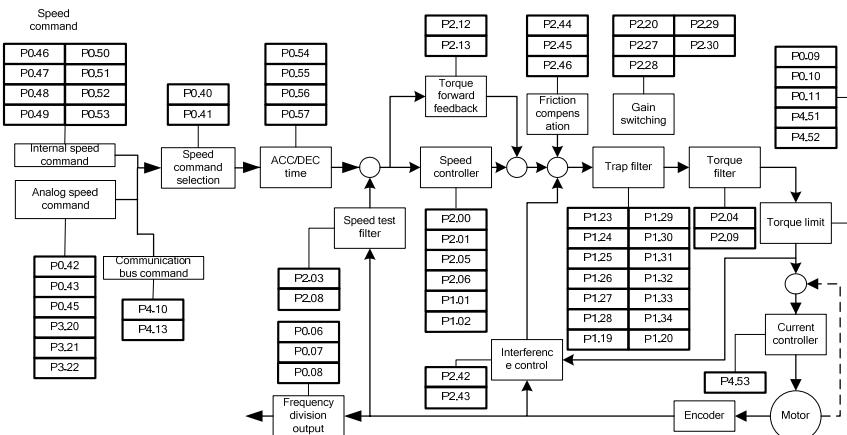


Fig. 7-2 Block diagram of speed control

The general procedures for parameter adjustment in the speed mode are:

#### 1) Initial setting of the parameters

The defaults of the parameters can be recovered by the default parameter recovering operation (see chapter 5.2.4 for details).

#### 2) Adjustment of the gain of the speed loop

When the servo motor is running with default parameters, if the system oscillation occurs with buzz, the speed gain (P2.00, P2.05) should be adjusted smaller. If the system rigidity is relatively small or the speed fluctuates largely, the speed gain should be adjusted larger.

### 3) Adjustment of the speed integration time constant

When the gain of the speed loop is increased, the speed integration time constant (P2.01, P2.06) should be increased at the same time. Similarly, when the gain of the speed loop is decreased, the speed integration time constant should be decreased at the same time.

### 4) Adjustment of the ACC/DEC time

If the speed varies violently during starting, it may cause large impulse or even overcurrent. At this time we adjust the ACC time (P0.54) to smoothen the speed rise. Similarly, we can adjust the DEC time (P0.55) to smoothen the speed fall during stopping.

### 5) S curve ACC/DEC adjustment

If the requirement for smooth variation of speed cannot be met by adjusting the ACC/DEC time, we can adjust the S curve ACC/DEC time (P0.56, P0.57) to make it change more smoothly.

### 6) Adjustment of the speed smoothing filter

In the case where the analog speed command is inputted, we can adjust the analog speed command filter (P3.21) to make the speed change smoothly.

### 7) Adjustment of torque feed-forward

If the speed follow-up performance is still poor after above parameter adjustment, we can adjust the torque feed-forward gain (P2.12) and torque forward feedback filter time (P2.13) to improve the speed follow-up performance. It should be noted however that too large torque feed-forward gain may affect the stability of the system.

### 8) Adjustment of speed filter

The performance of the speed loop can be improved by adjusting P2.04/P2.09 and P2.03/P2.08.

### 9) Adjustment of notch filtering

Refer to chapter 7.2.

### 10) Frequency division of the feedback pulse output

If the feedback pulse of the encoder needs to be outputted, the frequency division output coefficient (P0.06, P0.07) can be used to change the frequency of the output pulse.

### 11) Interference control adjustment

If the gain is small, the load changes or there is sudden external interference torque, it can adjust P2.42 and P2.43 to reduce the interference and improve the performance.

### 12) Friction compensation adjustment

If the following performance of the motor is bad during the direction changing of forward and reverse rotation, it can adjust P2.45 and P2.46 to improve the performance.

### 7.2.3 Adjustment of the gain of the torque loop

The torque control block diagram of the SV-DA200 series servo drive is shown in the figure below. The gain parameters that can be adjusted in the torque mode are marked out on the block diagram.

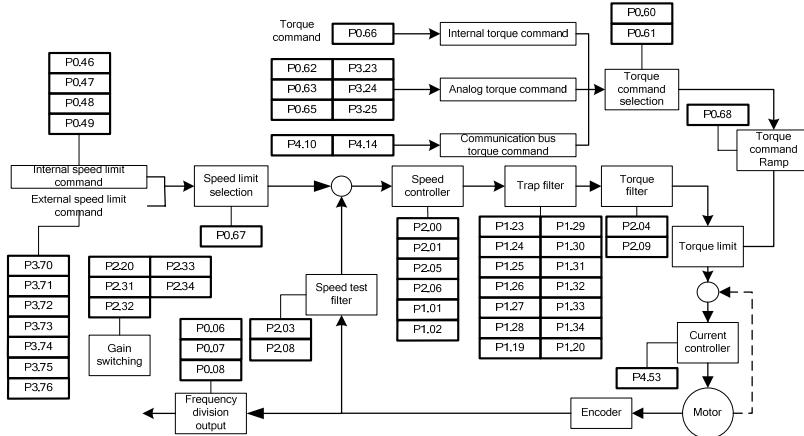


Fig. 7-3 Block diagram of torque control

The general procedures for parameter adjustment in the torque mode are:

- Initial setting of the parameters

The defaults of the parameters can be recovered by the default parameter recovering operation (see chapter 5.2.4 for details).

- Adjustment of the torque smoothing filter

In the case the analog torque command is inputted, we can adjust the torque smoothing filter time constant to make the torque change smoothly.

- Frequency division of the feedback pulse output

If the feedback pulse of the encoder needs to be outputted, the frequency division coefficient of pulse output can be used to change the frequency of the output pulse.

### 7.2.4 Full closed loop gain adjustment

The gain parameters which can be adjusted are listed as the figure below:

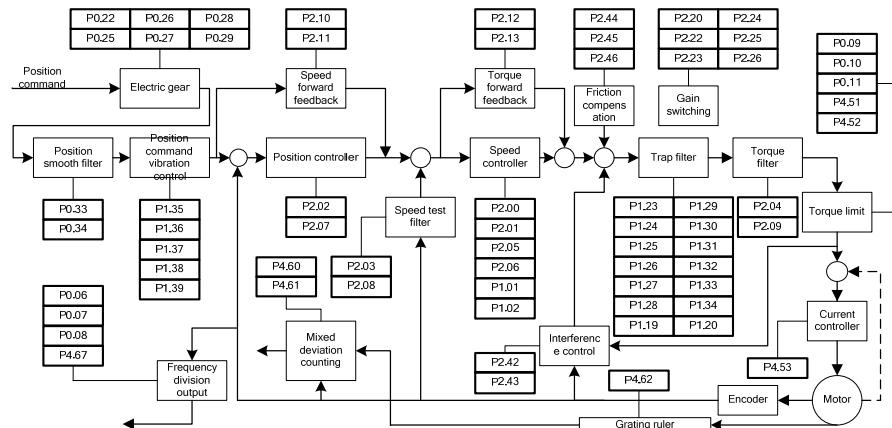


Figure 7-4 Block diagram of Full closed loop

Refer to the adjustment steps of position mode in section 7.2.1.

### 7.3 Suppression of mechanical resonance

The mechanical system has a certain resonant frequency. If the response speed of the servo is improved, the system may resonate (oscillation and abnormal noise) near the mechanical resonant frequency. The resonance of the mechanical system can be effectively suppressed by setting the parameters of the notch filters.

The notch filters achieve the goal of suppressing mechanical resonance by decreasing the gain of certain frequency. We can set the frequency to be suppressed as well as the suppression extent with relevant parameters.

This servo drive is equipped with four notch filters which can be set by the 1<sup>st</sup> notch filter parameter (P1.23, P1.24, P1.25), 2<sup>nd</sup> notch filter parameter (P1.26, P1.27, P1.28),,3<sup>rd</sup> notch filter parameter (P1.29, P1.30, P1.31) and 4<sup>th</sup> notch filter parameter (P1.32, P1.33, P1.34). The 1<sup>st</sup> and 2<sup>nd</sup> notch filter parameters need to be set manually; the 3<sup>rd</sup> and 4<sup>th</sup> notch filter parameters can be set by online self-adaption. The position of notch filter in speed loop is shown in fig. 7-2.

**Note:**

The notch filter is the lag factor for the servo system, so, if the center frequency of control width is large, the vibration may be strengthened. It is recommended to increase the width unit it meets the requirements.

The relationship between the Q value, width and depth:

Q value of the notch wave =center frequency of the notch wave /width of the notch wave

If the width of the notch is 0, the width of the filter is the deviation between two frequencies when the power of the center frequency drops to -3dB.

The width of the filter means the ratio of input and output, and the intensity attenuation 20log (P1.25%, P1.28%, P1.31%, P1.34%) dB.

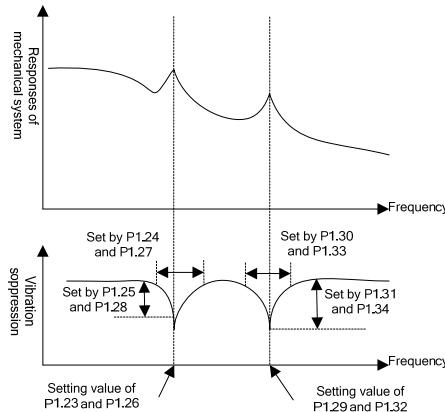


Figure 7-5 Schematic diagram of setting of the trap wave filters

## 7.4 Gain switching function

Gain switching operation is performed through internal data or external signal:

- 1) Can switch to lower gain to suppress vibration in the state when the motor is stopped;
- 2) Can switch to higher gain to shorten the positioning time in the state the motor is stop;
- 3) Can switch to high gain to obtain better command follow-up performance in the state when the motor is running.
- 4) Can switch between different gain settings through external signal according to the conditions of load, equipment and so on.

•Position control and full closed loop control (●: valid, —: invalid)

Condition setting of gain switching			Parameters setting of position control and full close loop control mode		
P2.22	Switch to the 2 <sup>nd</sup> gain	Figure	Delay time <sup>*1</sup>	Level	Lag <sup>*2</sup>
			P2.23	P2.24	P2.25
0	Fixed on the 1 <sup>st</sup> gain		-	-	-
1	Fixed on the 2 <sup>nd</sup> gain		-	-	-
2	Gain switch input		-	-	-
3	Torque command	1	●	●(0.1%)	●(0.1%)
4	Speed command	3	●	●(r/min)	●(r/min)
5	Position deviation	4	●	● <sup>*3</sup> (pulse)	● <sup>*3</sup> (pulse)

6	With position command	5	•	-	-
7	Position not finished	6	•	-	-
8	Actual speed	3	•	•(r/min)	•(r/min)
9	With position command +speed command	7	•	•(r/min) <sup>*5</sup>	•(r/min) <sup>*5</sup>

## • Speed control mode

Condition setting of gain switching			Parameters setting of speed control mode		
P2.27	Switch to the 2 <sup>nd</sup> gain	Figure	Delay time <sup>*1</sup>	Level	Lag <sup>*2</sup>
			P2.28	P2.29	P2.30
0	Fixed on the 1 <sup>st</sup> gain		-	-	-
1	Fixed on the 2 <sup>nd</sup> gain		-	-	-
2	Gain switch input		-	-	-
3	Torque command	1	•	•(0.1%)	•(0.1%)
4	Speed command variable	2	-	• <sup>*4</sup> (10(r/min)/s)	• <sup>*4</sup> (10(r/min)/s)
5	Speed command	3	•	•(r/min)	•(r/min)

## • Torque control mode

Condition setting of gain switching			Parameters setting of torque control mode		
P2.31	Switch to the 2 <sup>nd</sup> gain	Figure	Delay time <sup>*1</sup>	Level	Lag <sup>*2</sup>
			P2.32	P2.33	P2.34
0	Fixed on the 1 <sup>st</sup> gain		-	-	-
1	Fixed on the 2 <sup>nd</sup> gain		-	-	-
2	Gain switch input		-	-	-
3	Torque command	1	•	•(0.1%)	•(0.1%)


\*1 Delay time (P2.23,P2.28,P2.32) is only valid when the 2<sup>nd</sup> gain to the 1<sup>st</sup> gain








\*2 The definition of lag (P2.25,P2.30,P2.34) is shown as the figure below.

\*3 The encoder and external grating ruler can be designated in the control mode.

\*4 If 10r/min speed changing in 1s, the setting value is 1.

\*5 If P2.22=9, the delay time, level and lag have different meaning (see figure 7).

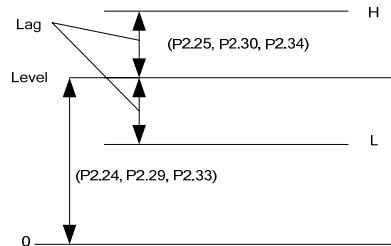

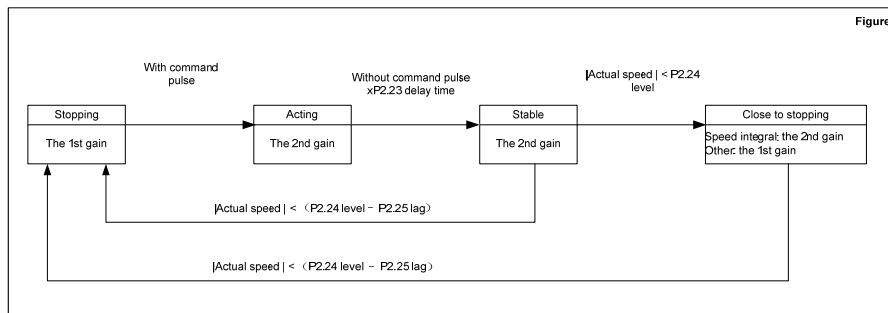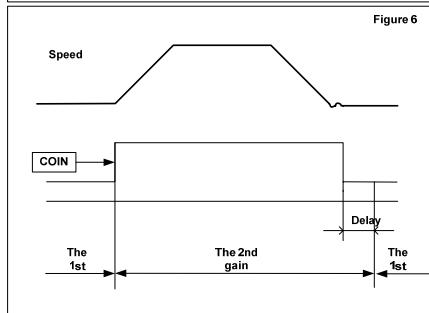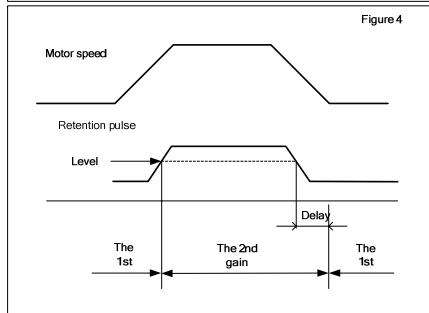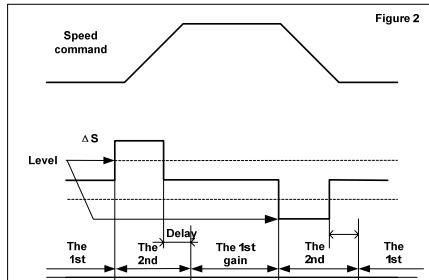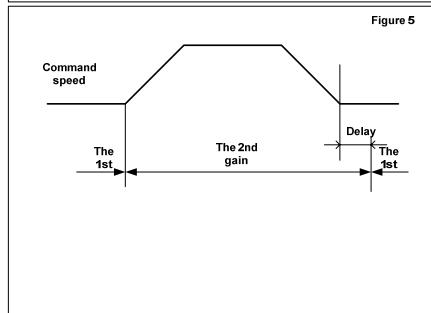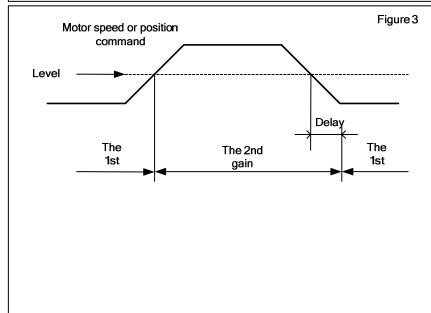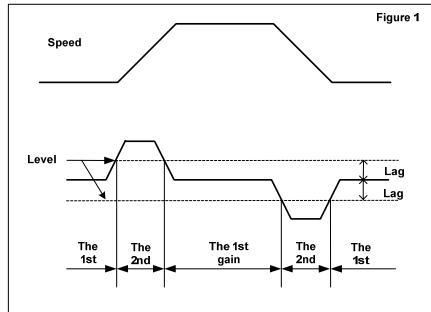

# Chapter 8 Communication

## 8.1 Instruction

SV-DA200 servo drives provide RS485, CANopen and PROFIBUS-DP communication interface. Asynchronous serial half-duplex communication between 31 servo drives and NC or PLC is available through the RS485 interface; asynchronous serial half-duplex communication between 127 servo drives and NC or PLC is available through the CAN interface; asynchronous serial half-duplex communication between 100 servo drives and NC or PLC is available through the PROFIBUS-DP interface.

- ◆ Read/write the function parameters of the servo drives
- ◆ Monitor the operating state of the servo drives
- ◆ Form a multi-axis control system

There are three kinds of communication interface USB, CANopen and Ethernet between the servo drive and PC. And the PC has functions of parameter calibration, condition monitoring and data access to the drive. External communication card is needed for Ethernet communication.

## 8.2 RS485 communication protocol

The SV-DA200 provide RS485 communication interface. It adopts international standard ModBus communication protocol to perform master-slave communication. The user can realize centralized control through PC/PLC, upper control PC, etc. (set the control command, running frequency of the inverter, modify relevant function codes, monitor and control the operating state and fault information of the inverter and so on) to adapt specific application requirements.

### 8.2.1 Protocol content

The Modbus serial communication protocol defines the frame content and usage format in asynchronous transmission which includes: master polling, and the format of the broadcast frame and the slave answering frame. The frame of the master includes: the slave address (or the broadcast frame), commands, digit and error checkout. The slave answering also applies the same structure: action confirmation, digit returning and error checkout. If there is a mistake during the frame receiving of the slave or the slave cannot finish the action which the master requires, it will respond an error frame to the master as a response.

### 8.2.2 Protocol instructions

The communication protocol of the SV-DA200 series servo drives is an asynchronous serial Master-Slave communication protocol. The master is the only device in the network to build up the protocol (named as inquiry/command), while the other devices (the slaves) can respond to or do action to the inquiry/command of the master through providing digits. The master in this manual

means PC, industrial control devices and PLC. The slaves mean the servo drives and other control devices with the same communication protocol. The master can communicate with a certain slave, as well as, send broadcast message to all slaves. For the separately-visiting inquiry/command of the master, the slave should return a message as the response. While for the broadcast message, the slave needs not to do so.

### 8.2.3 Communication frame structure

Modbus protocol supports RTU mode only. The user can set serial communication parameters, such as, the baud rate and the checkout means.

#### 8.2.3.1 RTU mode

Each 8bit bytes in the message frame contains two 4bit hex characters.

Table 8-1: The message frame in RTU mode

The start bit	Device address	Command code	Data	LRC checkout	The tailed
T1-T2-T3-T4	8Bit	8Bit	n 8Bit(s)	16Bit	T1-T2-T3-T4

The Modbus minimum idle time between frames should be no less than 3.5 bytes. The network device is detecting, even during the interval time, the network bus. When the first field (the address field) is received, the corresponding device decodes next transmitting character. When the interval time is at least 3.5 byte, the message ends.

The whole message frame in RTU mode is a continuous transmitting flow. If there is an interval time (more than 1.5 bytes) before the completion of the frame, the receiving device will renew the uncompleted message and suppose the next byte as the address field of the new message. As such, if the new message follows the previous one within the interval time of 3.5 bytes, the receiving device will deal with it as the same with the previous message. If these two phenomena all happen during the transmission, the CRC will generate a fault message to respond to the sending devices.

### 8.2.4 Command code and the communication data instructions

#### 8.2.4.1 Command code: 03H

Function: read N words (can read no more than 16 words continuously).

For example, the servo drive with the slave address of 01H, if its starting address is 03F2H, read 2 words continuously, and then the structure of the frame is:

Table 8-2 The master device request command

START	T1-T2-T3-T4 (transmission time of 3.5 bytes)
ADDR	01H
CMD	03H
High bit of start address	03H

Low bit of start address	F2H
High bit of data number	00H
Low bit of data number	02H
Low bit of CRC CHK	65H
High bit of CRC CHK	BCH
END	T1-T2-T3-T4 (transmission time of 3.5 bytes)

Table 8-3 The slave device reply

START	T1-T2-T3-T4 (transmission time of 3.5 bytes)
ADDR	01H
CMD	03H
Byte number	04H
Higher bit of 03F2H	00H
Low bit of 03F2H	C8H
High bit of 03F3H	00H
Low bit of 03F3H	00H
Low bit of CRC CHK	7BH
High bit of CRC CHK	CDH
END	T1-T2-T3-T4 (transmission time of 3.5 bytes)

#### 8.2.4.2 Command code: 10H

Function: write N words (N≥2)

For example, write 300(0000012CH) into address 03F2H, slave device address 01H. And then the structure of the frame is:

Table 8-4 The master device request command

START	T1-T2-T3-T4 (transmission time of 3.5 bytes)
ADDR	01H
CMD	10H
High bit of data address	03H
Low bit of data address	F2H
High bit of data number	00H
Low bit of data number	02H
Byte number	04H
High bit of 1 <sup>st</sup> word of data content	01H
Low bit of 1 <sup>st</sup> word of data content	2CH

High bit of 2 <sup>nd</sup> word of data content	00H
Low bit of 2 <sup>nd</sup> word of data content	00H
Low bit of CRC CHK	A9H
High bit of CRC CHK	F7H
END	T1-T2-T3-T4 (transmission time of 3.5 bytes)

Table 8-5 The slave device reply command

START	T1-T2-T3-T4 (transmission time of 3.5 bytes)
ADDR	01H
CMD	10H
High bit of start address	03H
Low bit of start address	F2H
High bit of data number	00H
Low bit of data number	02H
Low bit of CRC CHK	E0H
High bit of CRC CHK	7FH
END	T1-T2-T3-T4 (transmission time of 3.5 bytes)

## 8.2.5 Error checkout of the communication frame

The error checkout of the frame can be divided into two parts: the bit checkout of the byte and the whole data checkout of the frame (CRC check or LRC check).

### 8.2.5.1 Bit checkout of the byte

The user can select different bit checkouts or non-checkout, which impacts the check bit setting of each byte.

The definition of even checkout: add an even check bit before the data transmission to illustrate the number of “1” in the data transmission is odd number or even number. When it is even, the check byte is “0”, otherwise, the check byte is “1”. This method is used to stabilize the parity of the data.

The definition of odd checkout: add an odd check bit before the data transmission to illustrate the number of “1” in the data transmission is odd number or even number. When it is odd, the check byte is “0”, otherwise, the check byte is “1”. This method is used to stabilize the parity of the data.

For example, when transmitting “11001110”, there are five “1” in the data. If the even checkout is applied, the even check bit is “1”; if the odd checkout is applied; the odd check bit is “0”. The even and odd check bit is calculated on the check bit position of the frame. And the receiving devices also carry out even and odd checkout. If the parity of the receiving data is different from the setting value, there is an error in the communication.

### 8.2.5.2 CRC check

The checkout uses RTU frame format. The frame includes the frame error detection field which is based on the CRC calculation method. The CRC field is two bytes, including 16-bit binary values. It is added into the frame after calculated by transmitting device. The receiving device recalculates the CRC of the received frame and compares them with the value in the received CRC field. If the two CRC values are different, there is an error in the communication.

During CRC, 0xFFFF will be stored. And then, deal with the continuous 6-above bytes in the frame and the value in the register. Only the 8Bit data in every character is effective to CRC, while the start bit, the tailed and the odd and even check bit is ineffective.

During the generating CRC, each 8-bit is XOR with the register content, the result shifts toward the min. effective bit while the max. effective bit is filled with 0. LSB is extracted for detection. If LSB is 1, the register is XOR with the preset value independently, if LSB is 0, no action. The whole process will be repeated 8 times. After the last bit (8<sup>th</sup> bit) completes, the next 8-bit byte will be XOR with the current value of register independently. Finally, the value in the register is the CRC value after all bytes in the frame are executed.

The calculation of CRC applies the international standard CRC checkout principles. When the user is editing CRC calculation, he can refer to the relative standard CRC calculation to write the required CRC calculation program.

### 8.2.6 Fault Responses

The slave uses functional code fields and fault addresses to indicate it is a normal response or some error occurs (named as objection response). For normal responses, the slave shows corresponding function codes, digital address or sub-function codes as the response. For objection responses, the slave returns a code which equals the normal code, but the first byte is logic 1.

**Example:** When the master sends a message to the slave, requiring it to read a group of address data of servo device function codes, there will be following function codes:

0 0 0 0 0 0 1 1 (Hex 03H)

For normal responses, the slave responds the same codes, while for objection responses, it will return:

1 0 0 0 0 0 1 1 (Hex 83H)

Besides the function codes modification for the objection fault, the slave will respond a byte of abnormal code which defines the error reason.

When the master receives the response for the objection, in a typical processing, it will send the message again or modify the corresponding order.

Table 8-6 Meaning of error code

Modbus abnormal code		
Code	Name	Meaning
01H	Illegal function	Receiving function codes from the upper devices is not allowable. This may because these function codes can only be applied to new devices or the slave device is dealing with this requirement in a wrong situation.
02H	Illegal data address	For servo drives, the required data address is not allowed; especially the mix of the register address and transmitting byte numbers is invalid.
03H	Illegal data value	The data value received is beyond the range of address parameters, leading the parameter modification invalid.
11H	Check error	In the frame message sent by the upper devices, if the CRC check bit of RTU format or the LRC check bit of ASCII format is different from the check number calculated by below devise, check error will be reported.

## 8.3 CANopen communication protocol

### 8.3.1 CANopen instructions

CANopen is the high level communication protocol on the control area network, includes the applications communication agreement and equipment sub-agreement in embedded system. The basic CANopen devices and sub communication protocols are in CAN in Automation (CiA) draft standard 301. And there are some expansion for some sub-agreement based on CiA 301, for example, CiA 402 for dynamic control.

### 8.3.2 CANopen hardware configuration

Refer to section 3.6 for the definitions and functions of pins of CAN communication terminals (CN3).

See the table below:

Baud rate	Communication length
1Mbit/s	25m
500kbit/s(default)	100m
250kbit/s	250m
125kbit/s	500m
50kbit/s	1000m
20kbit/s	2500m

**Note:**

1. All CANL and CANH pins of the slave station can be connected directly with series connection other than y connection.

2. The resistance of 120 ohms is needed between the master station end and the last node.
3. In order to avoid interference, CAN cable is shielded twisted-pair cable.
4. The longer connection needs higher drive ability of the CAN chip.

### 8.3.3 CANopen software configuration

Configure following three parameters before the application of CANopen:

1. Set P0.03 through LED panel or ServoPlorer software to 7 [CANopen mode];
2. Set P4.02 through LED panel or ServoPlorer software(0:1Mbps; 1:500kbps; 2: 250kbps; 3:125kbps; 4:50kbps; 5:20kbps);
3. Set P4.05 through LED panel or ServoPlorer software(range:1~127)

**Note:**

1. Above three parameters are valid after restarting, so it is necessary to repower again or reset the drive.
2. The node number of slave station cannot be the same as the node number of master station and other slave station (CNC or PLC).
3. Synchronous signal is generated by the master station or be configured by the slave station. The unit of synchronous communication cycle is 1us and the minimum unit of SV-DA200 is 1000 us (1ms);
4. 0x1017 parameters is needed to be configured when the main station needs the slave station to send a heartbeat message, the Unit is 1ms;
5. The drive will shut down automatically to ensure safety when CANopen state machine exits from OP state.

### 8.3.4 CANopen functions

SV-DA200 servo drive is the standard slave station of CANopen and support some parameters of 301 standard protocol and 402 dynamic control protocol.

The basic protocol supporting CANopen: NMT, SYNC, SDO, PDO, EMCY.

The pre-definition collection includes 4 receiving PDO (Receive-PDO), 4 sending PDO(Transmit-PDO), 1 SDO(occupying 2 CAN-ID), 1 emergency target and 1 node error control (Node-Error-Control)ID, and it also supports NMT-Module-Control service and SYNC signal.

Table 8-7 Specifications of CiA 402 protocol

Index	Object Type	Name	Data Type	Access	Mappable
6040 <sub>h</sub>	VAR	Control word	UNSIGNED16	RW	Y
6041 <sub>h</sub>	VAR	Status word	UNSIGNED16	RO	Y
6042 <sub>h</sub>	VAR	vl target velocity	INTEGER16	RW	Y
6043 <sub>h</sub>	VAR	vl velocity demand	INTEGER16	RO	Y
6044 <sub>h</sub>	VAR	vl control effort	INTEGER16	RO	Y

6046 <sub>h</sub>	ARRAY	vl velocity min max amount	UNSIGNED32	RW	Y
6047 <sub>h</sub>	ARRAY	vl velocity min max	UNSIGNED32	RW	Y
6048 <sub>h</sub>	RECORD	vl velocity acceleration	UNSIGNED32	RW	Y
6049 <sub>h</sub>	RECORD	vl velocity deceleration	UNSIGNED32	RW	Y
6060 <sub>h</sub>	VAR	Mode of operation	INTEGER8	RW	Y
6061 <sub>h</sub>	VAR	Mode of operation display	INTEGER8	RO	Y
6062 <sub>h</sub>	VAR	Position demand value	INTEGER32	RO	Y
6063 <sub>h</sub>	VAR	Position actual value*	INTEGER32	RO	Y
6064 <sub>h</sub>	VAR	Position actual value	INTEGER32	RO	Y
6065 <sub>h</sub>	VAR	Following error window	UNSIGNED32	RW	Y
6066 <sub>h</sub>	VAR	Following error time out	UNSIGNED16	RW	Y
6067 <sub>h</sub>	VAR	Position window	UNSIGNED32	RW	Y
6069 <sub>h</sub>	VAR	Velocity sensor actual value	INTEGER32	RO	Y
606B <sub>h</sub>	VAR	Velocity demand value	INTEGER32	RO	Y
606C <sub>h</sub>	VAR	Velocity actual value	INTEGER32	RO	Y
606D <sub>h</sub>	VAR	Velocity window	UNSIGNED16	RW	Y
606F <sub>h</sub>	VAR	Velocity threshold	UNSIGNED16	RW	Y
6071 <sub>h</sub>	VAR	Target torque	INTEGER16	RW	Y
6072 <sub>h</sub>	VAR	Max torque	UNSIGNED16	RW	Y
6073 <sub>h</sub>	VAR	Max current	UNSIGNED16	RO	Y
6074 <sub>h</sub>	VAR	Torque demand value	INTEGER16	RO	Y
6075 <sub>h</sub>	VAR	Motor rated current	UNSIGNED32	RO	Y
6076 <sub>h</sub>	VAR	Motor rated torque	UNSIGNED32	RO	Y
6077 <sub>h</sub>	VAR	Torque actual value	INTEGER16	RO	Y
6078 <sub>h</sub>	VAR	Current actual value	INTEGER16	RO	Y
6079 <sub>h</sub>	VAR	DC link circuit voltage	UNSIGNED32	RO	Y
607A <sub>h</sub>	VAR	Target position	INTEGER32	RW	Y
607C <sub>h</sub>	VAR	Home offset	INTEGER32	RW	Y
607D <sub>h</sub>	ARRAY	Software position limit	INTEGER32	RW	Y
6080 <sub>h</sub>	VAR	Max motor speed	UNSIGNED32	RW	Y
6081 <sub>h</sub>	VAR	Profile velocity	UNSIGNED32	RW	Y
6083 <sub>h</sub>	VAR	Profile acceleration	UNSIGNED32	RW	Y
6084 <sub>h</sub>	VAR	Profile deceleration	UNSIGNED32	RW	Y
6085 <sub>h</sub>	VAR	Quick stop deceleration	UNSIGNED32	RW	Y

6086 <sub>h</sub>	VAR	Motion profile type	INTEGER16	RO	Y
6087 <sub>h</sub>	VAR	Torque slope	UNSIGNED32	RW	Y
6088 <sub>h</sub>	VAR	Torque profile type	INTEGER16	RO	Y
6093 <sub>h</sub>	ARRAY	Position factor	UNSIGNED32	RW	Y
6098 <sub>h</sub>	VAR	Homing method	INTEGER8	RW	Y
6099 <sub>h</sub>	ARRAY	Homing speeds	UNSIGNED32	RW	Y
60C0 <sub>h</sub>	VAR	Interpolation sub mode select	INTEGER16	RO	Y
60C1 <sub>h</sub>	ARRAY	Interpolation data record	INTEGER32	RW	Y
60C2 <sub>h</sub>	RECORD	Interpolation time period	INTEGER8	RW	Y
60F4 <sub>h</sub>	VAR	Following error actual value	INTEGER32	RO	Y
60F8 <sub>h</sub>	VAR	Max slippage	INTEGER32	RW	Y
60FA <sub>h</sub>	VAR	Control effort	INTEGER32	RO	Y
60FC <sub>h</sub>	VAR	Position demand value*	INTEGER32	RO	Y
60FD <sub>h</sub>	VAR	Digital inputs	UNSIGNED32	RO	Y
60FE <sub>h</sub>	ARRAY	Digital outputs	UNSIGNED32	RO	Y
60FF <sub>h</sub>	VAR	Target velocity	INTEGER32	RW	Y

Table 8-8 CANopen fault code

Display	Fault name	32-bit fault code(16-bit Error Code+16-bit additional message)
Er01-0	IGBT fault	FF01-0101h
Er02-0	Encoder fault-The encoder wire break	7300-0200h
Er02-1	Encoder fault-Encoder feedback error is too large	7300-0201h
Er02-2	Encoder fault-Parity error	7300-0202h
Er02-3	Encoder fault-CRC error	7300-0203h
Er02-4	Encoder fault-Frame error	7300-0204h
Er02-5	Encoder fault-Short frame error	7300-0205h
Er02-6	Encoder fault-Encoder overtime	7300-0206h
Er02-7	Encoder fault-FPGA overtime	7300-0207h
Er02-8	Encoder fault-Low voltage alarm of the encoder	7300-0208h
Er02-9	Encoder fault-Undervoltage alarm of the encoder	7300-0209h
Er02-a	Encoder fault-Encoder over-temperature	7300-020Ah
Er02-b	Encoder fault-EEPROM write error	7300-020Bh
Er03-0	Current sensor fault-U phase IGBT fault	7300-0300h
Er03-1	Current sensor fault-V phase IGBT fault	7300-0301h

<b>Display</b>	<b>Fault name</b>	<b>32-bit fault code(16-bit Error Code+16-bit additional message)</b>
Er03-2	Current sensor fault–W phase IGBT fault	7300-0302h
Er04-0	System initialization fault	FF01-0400h
Er05-1	Setting fault–Motor model error	FF01-0501h
Er05-2	Setting fault–Motor and drive model error	FF01-0502h
Er05-3	Setting fault–Software limit setting error	FF01-0503h
Er05-4	Setting fault–Returning origin mode setting fault	FF01-0504h
Er05-5	Setting fault–Position control overflow fault	FF01-0505h
Er07-0	Regeneration discharge overload fault	7100-0700h
Er08-0	Analog input overvoltage fault–Analog speed command	5441-0800h
Er08-1	Analog input overvoltage fault–Analog torque command	5442-0801h
Er08-2	Analog input overvoltage fault–Analog input 3	5443-0802h
Er09-0	EEPROM fault–Read-write fault	5530-0900h
Er09-1	EEPROM fault–data check fault	5530-0901h
Er10-0	Hardware fault–FPGA fault	5544-0A00h
Er10-1	Hardware fault–Communication card fault	5544-0A01h
Er10-2	Hardware fault–Grounding short circuit fault	5544-0A02h
Er10-3	Hardware fault–External input fault	5544-0A03h
Er10-4	Hardware fault–E-stop fault	4458-0A04h
Er11-1	Software fault–Reentrant cycle mission	6100-0B01h
Er11-2	Software fault–Illegal operation	6100-0B02h
Er12-0	IO fault–Repeat digital input distribution	FF01-0C00h
Er12-2	IO fault–Pulse input frequency is too high	FF01-0C01h
Er13-0	Main circuit overvoltage fault	3110-0D00h
Er13-1	Main circuit undervoltage fault	3120-0D01h
Er14-0	Undervoltage control power fault	5200-0E00h
Er18-0	Motor overload fault	2310-1200h
Er19-0	Speed fault–Overspeed fault	7180-1300h
Er20-0	Speed deviation fault	8400-1400h
Er22-0	Deviation fault–Position deviation	8500-1600h
Er22-1	Deviation fault–Hybrid control deviation is too	FF01-1601h

<b>Display</b>	<b>Fault name</b>	<b>32-bit fault code(16-bit Error Code+16-bit additional message)</b>
	large	
Er22-2	Position increment overflow fault	FF01-1602h
Er22-3	CANopen fault-Sync signal timeout	FF01-1603h
Er23-0	Drive over-temperature fault	4210-1700h
Er24-0	PROFIBUS-DP fault-PWK parameters ID error	8100-1800h
Er24-1	PROFIBUS-DP fault-PWK Parameters beyond the range	8100-1801h
Er24-2	PROFIBUS-DP fault-PWK Parameters are read-only	8100-1802h
Er24-3	PROFIBUS-DP fault-PZD Configuration parameter does not exist	8100-1803h
Er24-4	PROFIBUS-DP fault-PZD Configuration parameter attributes do not match	8100-1804h
Er25-6	Application fault-Offside of returning origin	FF01-1903h
Er25-7	Application fault-Inertia identification failed	FF01-1903h
Er26-0	CANopen fault-SDO overtime	FF01-1A00h
Er26-1	CANopen fault-SDO index does not exist	FF01-1A01h
Er26-2	CANopen fault-SDO sub index does not exist	FF01-1A02h
Er26-3	CANopen fault-SDO data length error	FF01-1A03h
Er26-4	CANopen fault-SDO write data beyond the range	FF01-1A04h
Er26-5	CANopen fault-Read-only and non-modifiable	FF01-1A05h
Er26-6	CANopen fault-PDO mapping length error	FF01-1A06h
Er26-7	CANopen fault-PDO mapping data does not exist	FF01-1A07h
Er26-8	CANopen fault-PDO is not allowed to be changed during operating	FF01-1A08h
Er26-9	CANopen fault-PDO mapping is not allowed	FF01-1A09h
Er26-a	CANopen fault-Sync signal is too fast	FF01-1A0Ah
Er26-b	CANopen fault-Receiving fault	FF01-1A0Bh
Er26-c	CANopen fault-Sending fault	FF01-1A0Ch
Er26-d	CANopen fault-Sync signal repeat	FF01-1A0Dh
Er26-e	CANopen fault-Bus load rate is too high	FF01-1A0Eh
Er26-f	CANopen fault-Parameter modification state error	FF01-1A0Fh

## 8.4 PROFIBUS-DP communication protocol


### 8.4.1 Brief introduction to PROFIBUS-DP protocol

PROFIBUS is a fieldbus standard used in automation technology and promoted in 1987 by Germany's Siemens and other 14 companies and five research institutions. PROFIBUS is short for PROcess Field BUS.

PROFIBUS DP is used in factory automation applications, it can control many sensors and actuators by a central controller and master the state of each module by the standard or diagnostic function.

### 8.4.2 PROFIBUS-DP hardware configuration

The front side of PROFIBUS-DP communication card is as the figure below:

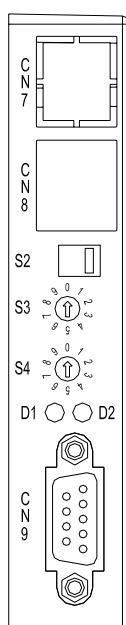

Name	Meaning
S2	PROFIBUS-DP communication terminal resistance selection switch: Press down: terminal resistance valid Hold on: terminal resistance invalid
S3	PROFIBUS-DP station address setting button: ten
S4	PROFIBUS-DP station address setting button: one
D1	PROFIBUS-DP diagnostic lights (red): Keep on: PRODIBUS-DP communication offline: Flicker (frequency 1Hz): configuration failure Flicker (frequency 2Hz): parameters configuration failure Flicker (frequency 4Hz): ASIC initialization failure; Off: PRODIBUS-DP communication online and trouble-free.
D2	PROFIBUS-DP communication On-Line status indicators (green): On: online Off: offline
CN7,CN8	Ethernet/EtherCAT communication interface
CN9	PROFIBUS-DP communication interface


Scope of PROFIBUS-DP communication rate is from 9.6Kbps to 12Mbps, which corresponds to the transmission distance range from 100m to 1200m:

Baud rate	Communication length
12Mbit/s	100m
1.5Mbit/s(default)	200m
500kbit/s	400m

Baud rate	Communication length
187.5kbit/s	1000m
93.75kbit/s	1200m
19.2kbit/s	1200m
9.6kbit/s	1200m

**Note:**

1. PROFIBUS-DP communication card provides two rotary switches (S3, S4) to set the communication address on PROFIBUS-DP network. These two rotary switches of binary are used to set the ones and tens of the communication address. The valid range of the communication address is 0~99 and after modification, it is necessary to repower on.
2. It is necessary to use  $150\Omega$  twisted pair cables according to the electric transmission mode of EIA-485 standards.
3. The last node between the master station and the slave station needs to connect a terminal resistance as the figure below:

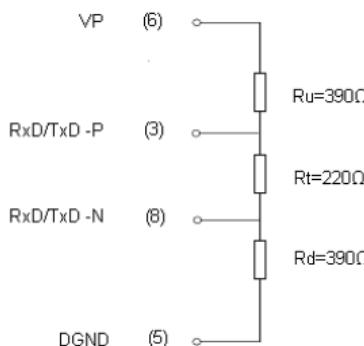

4. The bus transmission baud rate can be identified automatically after the power on of PROFIBUS-DP communication card.

#### 8.4.3 PROFIBUS-DP software configuration

"Master-slave" mode is available between the data transmission between the main control module and slave control module and SV-DA200 servo drive is always the slave. In real-time control, the cycle data is used for the command setting and state monitoring and the non-cycle communication function is used for the diagnosis and troubleshooting of the data transmission.

The drive control needs parameter and process data. The non-cycle data is used to control commands and drives. The process data is cycle data for servo drive control. SV-DA200 only supports PROFIBUS-DP V0 protocol version (support PKW+PZD mode) and PPO type 5. DP-V0 is the basic communication protocol version and only supports cycle data exchange (MSO

communication). It has the basic configuration for parameters definition and diagnose.

PROFIBUS cycle transmission message applies 32 Byte transmission modes and the data format is as below:

0~7(Byte)	8~31(Byte)
PKW	PZD

Of which, PKW is used for the transmission of non-cycle data for the configuration of drive parameters and for the read-write operation. PZD is used in the transmission of cycle data, such as control word, speed command, position command, torque command or state word, speed response, position response, torque response; PZD data can be used for the data of transmission configuration parameters.

#### PKW message format:

PKW									
PKW number(Byte)	1	2	3	4	5	6	7	8	
	PKE	IND* <sup>1</sup>				PWE			

\*<sup>1</sup> IND is the communication ID (the same as Modbus address), PWE is the parameter value.

#### Format of PKE message:

PKE																
Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	AK (task or response identification ID)				SPM (reserved as 0)				Reserved							

#### AK task ID:

Master station—> slave station						Slave station—> Master station						
Task ID	Function					Positive response ID	Negative response ID					
0	No task						0	0				
1	Read parameters						1, 2	7				
2	Write parameters(single word)						1	7				
3	Write parameters(double word)						2	7				
13	Write parameters(single word) save EE						1	7				
14	Write parameters(double word) save EE						2	7				

#### PZD message format:

PZD												
WORD*1	0	1	2	3	4	5	6	7	8	9	10	11
Down	CW	Speed command	Position command*2	Torque command	Reserved	Configuration Parameter 1	Configuration Parameter 2	Configuration Parameter 3				

PZD												
WORD*1	0	1	2	3	4	5	6	7	8	9	10	11
Up	SW	Speed feedback	Position feedback	Torque feedback	Reserved	Configuration feedback	Configuration setting	Configuration setting	Parameter 1	Parameter 2	Parameter 3	

\*<sup>1</sup> the length of WORD is 16bit.

\*<sup>2</sup> the fixed content of PZD is: the position command is P4.12; the speed command is P4.13; the torque command is P4.14, the speed feedback is R0.21, the position feedback is R0.02 and the torque feedback is R0.06.

The meaning of each bit in CW (control word) is listed below:

Bit	Function
0	Digital input block (0: digital input valid; 1: CW valid) * <sup>1</sup>
1	Servo enable
2	Fault clear
3	E-stop
4	Positive drive disabled
5	Negative drive disabled
6	HOME switch signal
7	HOME trigger
8	Control mode switch
9	Gain switch
10	Inertia ratio switch
11	Torque limit switch
12	Zero speed clamp
13	Retention pulse clear
14	Vibration control switch
15	Reserved

\*<sup>1</sup> When Bit0 is set to 0, the internal software of the drive will use digital input as the source of the corresponding function; when it is 1, the digital input is shielded and the corresponding control bit is used as the function source.

The meaning of each bit in SW (state word) is listed as below:

Bit	Function
0	Servo output ready
1	Servo operation output

Bit	Function
2	Fault output
3	Alarm output
4	External brake clear
5	Position command or not
6	Positioning finished
7	Control mode switching state
8	Speed matching
9	Speed reaching
10	Speed limiting
11	Speed command or not
12	Speed zero output
13	Torque limiting
14	Zeroing finished
15	PZD controlling

**Note:**

1. All used words and double-words are transmitted by the format of **Big-Endian**, which means the high byte or high word will be transmitted and then the low byte or low word.
2. PZD configuration parameters include setting parameters and feedback parameters for the designated parameter content. The corresponding parameters can be designated by P4.80, P4.81, P4.82, P4.83, P4.84 and P4.85.
3. GSD is a word file for the identification of PROFIBUS-DP device. GSD file includes the data information of a DP slave on the standard DP master station. GSD file has vendor information, supports communication transmission ratio, time information, characters, optional parts and I/O information as the base of master station parameters. The user can download GSD file on the company website for networking.

## 8.5 Upper PC software

### 8.5.1 ServoPlorer upper pc software

ServoPlorer V4.0 is the PC monitoring and commissioning software of DA200 servo drive with following functions:

1. Real-time monitoring to the state parameters
2. Online modification of the parameters setting
3. To support USB, 4-channel waveform monitoring, the minimum resolution is 0.125ms
4. Bulk parameters saved to folders and downloaded to servo drives

5. Fault display and fault record reading
6. Multiple independent functional application interfaces (for example: frequency feature test, inertia identification, program JOG, ECAM, etc.)

### 8.5.2 Hardware

CPU	Above Pentium 4
Internal storage	More than 1G
Hard disk	More than 512M
Screen resolution	More than 1024*768
Communication interface	USB1.1

### 8.5.3 Software

Operation system	Windows XP,Vista,Windows7
.NET version	.NET Framework 4.0
Excel software	Excel2007, 2010 or above

### 8.5.4 Communication connection

The drive has USB interfaces through which the drive and the computer can be connected. The communication connection is as the figure below:

Connection	Operation	Instruction
Micro USB wire	Standard Micro-USB wire 	After power on, the USB wire can connect with the computer and to install the designated drive program


### 8.5.5 Software installation and operation

(The software installation program INVT ServoPloer V4.0 can be downloaded from the website of our company: [http://www.invt-tech.com/products\\_187\\_12.html](http://www.invt-tech.com/products_187_12.html)) During installation, automatically detect whether the user computer needs necessary plug-ins and pop up corresponding prompt messages. Ensure the software and hardware configuration of the computer meets the requirements in 8.5.2 and 8.5.3 before using.

The USB device drive program of the drive is in the drive folder in the directory of software installation (path: ..\ServoPloer\Drive\USB drive\). If necessary, the operation procedures for installing drive program in manual are as follows: My computer → Hardware device manager → Update drive program → Open the folder where drive program is → Select the folder labeled in the red box below

名称	大小	类型
amd64		文件夹
ia64		文件夹
license		文件夹
x86		文件夹
dirs	1 KB	文件
installer_x64.exe	25 KB	应用程序
installer_x86.exe	23 KB	应用程序
kinwayUSB.inf	8 KB	安装信息

When starting ServoPlorer software, double click ServoPlorer.exe in the directory of software installation as follows:



After starting the program, pop up a start-up interface and then the main interface of the software.



## 8.5.6 Program interface

The main interface includes four parts:

1. Menu bar and Tool strip, all kinds of interface and function of the entrance
2. Condition monitoring page on the left of main interface is used to monitor real-time feedback of status parameters
3. The parameter settings page on the right of main interface is used to modify the setting parameters
4. Display the current communication mode, communication condition, fault status and the information such as user permissions

### 8.5.7 Parameter setting

1. Find the line to the parameters to be modified in the parameter setting interface
2. Click the current value twice, if the permission is allowed, the corresponding bar will appear and then input right value
3. Send the modified parameters to the drive by two methods
  - a. Press carriage return at the edition window
  - b. Click the sending button [  ]

 P0.03	Control Mode Selection	 Position mode ▾
 P0.00	Motor Type	 2300

### 8.5.8 Help file


The software has the help file of chm format, including the operation instruction and detailed parameter information for the corresponding help.

The main window has the access to general documentation and the help button of each window can lead the user to relative chapter.

### 8.5.9 Oscilloscope

The oscilloscope function can be started by the oscilloscope button or the route of menu bar → tool → oscilloscope.

## User interface

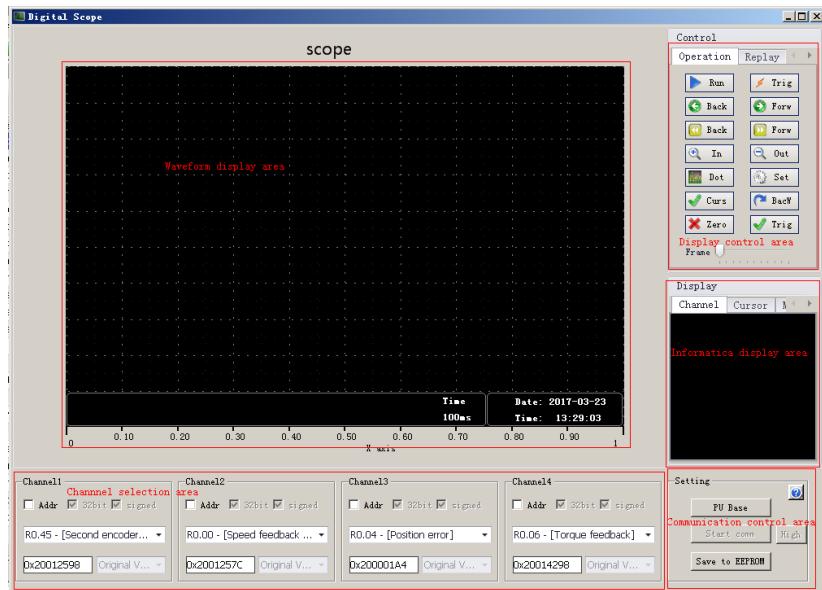

There are five areas:

1. Waveform display area: Draw waveform and auxiliary display elements, such as the cursor, gain, etc.
2. Channel selection area: Choose the display content of the channel monitoring, support parameter selection and two modes of the internal variable function codes
3. Display control area:
  - a. Operating interface: Control the starting, stopping, moving and magnifying of the oscilloscope waveform and the displaying of the cursor, zero and trigger threshold;
  - b. Page replay interface: Be used in the USB trigger mode and waveform file restoring mode, including the function of starting, stopping, and moving and position selection;
  - c. File operations interface: Saving and restoring of csv waveform file and the figures;
4. Communication control area: Control the starting and stopping of the oscilloscope communication, saving of the channel data, switching of the high-speed and low-speed oscilloscope (valid in the USB mode), setting in the trigger mode and help.
5. Information display area: Display the name of the current monitored content, display or hide the result and so on.

# Chapter 9 Faults and solutions

## 9.1 Meanings of the fault alarm codes and countermeasures

Code	Name	Causes	Countermeasures
Er01-0	IGBT fault	<p>The actual output current exceeds the specified value</p> <p>1. Drive fault (drive circuit, IGBT fault)</p> <p>2. Short circuit of motor cable U,V,W, or the motor cable is grounded or connected improperly</p> <p>3. Motor Burndown</p> <p>4. Reverse sequence of U, V, W phase</p> <p>5. Parameters are inappropriate and cause system divergence.</p> <p>6. ACC/DEC of start/stop process is too short</p> <p>7. Instantaneous load is too large</p>	<p>1. Remove the motor cables and enable the drive, if the fault persists, replace the drive</p> <p>2. Check the motor cables and wiring</p> <p>3. Reduce the value of P0.10 and P0.11</p> <p>4. Commission the loop parameters to stabilize the system and reduce the value of P0.12</p> <p>5. Increase the ACC/DEC time</p> <p>6. Replace with the drive with larger power</p> <p>7. Replace the motor</p>
Er02-0	Encoder fault– The encoder cable broken	<p>1. The encoder is not connected</p> <p>2. The encoder connector becomes loose</p>	<p>1. Check the encoder connector or replace the encoder cable if the cable is disconnected;</p> <p>2. Detect whether encoder power voltage is normal;</p> <p>3. Reduce the interference of the encoder, route the encoder and motor independently and connect the shielded cables of the encoder to FG</p>
Er02-1	Encoder fault–Encoder feedback error is too large	<p>3. One of U, V, W, A, B Z phase cables is broken.</p> <p>4. Reversed A/B phase of the encoder</p>	<p>3. Reduce the interference of the encoder, route the encoder and motor independently and connect the shielded cables of the encoder to FG</p> <p>4. If reporting encoder disconnection fault when power on, check whether the available drive encoder type is consistent with the available motor</p>
Er02-2	Encoder fault– Parity error	<p>5. Communication break or abnormal data caused by noise.</p>	<p>4. If reporting encoder disconnection fault when power on, check whether the available drive encoder type is consistent with the available motor</p>
Er02-3	Encoder fault–CRC check error	<p>6. Normal encoder communication but abnormal</p>	
Er02-4	Encoder fault–Frame error		

Code	Name	Causes	Countermeasures
Er02-5	Encoder fault–Short frame error	communication data 7. FPGA communication overtime	encoder type according to P0.01.
Er02-6	Encoder fault–Encoder overtime	8. The drive does not support the encoder type	
Er02-7	Encoder fault –FPGA overtime		
Er02-8	Encoder fault –Low voltage alarm of the encoder	If multi-turn encoder is used, the battery voltage of the external encoder is between 3.0V~3.2V	1. Check the battery connection in encoder cable 2. Check whether the external battery voltage of encoder is below 3.2V, if yes, change the battery 3. Change the battery when the drive is power on; otherwise the encoder data will be lost.
Er02-9	Encoder fault –Undervoltage alarm of the encoder battery	If multi-turn encoder is used, the battery voltage of the external encoder is between 2.5V~3.0V	1. Check the battery connection in the encoder cable 2. Check whether the voltage is below 3.0V, if yes, change the battery 3. Change the battery when the drive is power on; otherwise the encoder data will be lost.
Er02-a	Encoder fault –Encoder over-temperature	The feedback encoder temperature is higher than the set over-temperature value	1. Check the setting value of the over-temperature protection value 2. Stop the motor and reduce the encoder temperature
Er02-b	Encoder fault–EEPROM write-in error	If the motor is used with communication encoder, and when the drive updates the data to encoder EEPROM, there is communication transmission error or data check error	1.Check the encoder connection and reduce the interference to encoder communication 2.Write in for several times or change the motor
Er02-c	Encoder fault–EEPROM no data	If the motor is used with communication encoder, and	1.Select the current motor model through P0.00 and then carry out the

Code	Name	Causes	Countermeasures
		when read encoder EEPROM during power on, there is no data	encoder EEPROM writing through P4.97 2. Block the fault by P4.98, and then carry out corresponding initialization with the motor parameters in EEPROM
Er02-d	Encoder fault—EEPROM data check error	If the motor is used with communication encoder, and when read encoder EEPROM during power on, there is data check error	1. Check the encoder connection and reduce the encoder interference 2. Select the current motor model through P0.00 and then carry out the encoder EEPROM writing through P4.97 3. Shield the fault by P4.98, and then carry out corresponding initialization to the motor parameters
Er03-0	Current sensor fault—U phase current sensor fault	1. Current sensor or abnormal detection circuit	
Er03-1	Current sensor fault—V phase current sensor fault	2. Power on when the motor shaft is in a state of non-stationary	Repower on when the motor is in static state or change the drive
Er03-2	Current sensor fault—W phase current sensor fault		
Er04-0	System initialization fault	The self-inspection is not passed after initialization	1. Repower on 2. If the fault occurs for several times, change the drive
Er05-1	Setting fault—Motor model does not exist		1. Ensure the motor model is set correctly
Er05-2	Setting fault—Motor and drive model does not match	Wrong P0.00 setting	2. Ensure the motor parameter model matches with the power class of the drive.
Er05-3	Setting fault—Software limit setting	Software limit values setting is improper	Reset P0.35 and P0.36.

Code	Name	Causes	Countermeasures
	error	The setting value of P0.35 is less than or equal to the setting value of P0.36	
Er05-4	Setting fault–return to origin mode setting fault	Sub mode of P5.10 is set incorrectly	Set P5.10 according to the instructions
Er05-5	Setting fault– Point control travel overflow fault	The signal increment of idle travel of the bit exceeds $2^{31}-1$	The single travel cannot exceed $2^{31}-1$ in the absolute position mode
Er07-0	Regeneration of discharge overload fault	1. The power of the built-in braking resistor is relatively low 2. The motor speed is too high or the deceleration is too fast 3. The action limit of the external braking resistor is restricted to 10% of the duty ratio	1. Replace with an external braking resistor and increase the power 2. Modify the deceleration time and reduce regeneration discharge action rate 3. Reduce the motor speed 4. Improve the capacity of the motor and drive
Er08-0	Analog input overvoltage fault– Analog speed command	1. The voltage inputted to analog speed command terminal exceeds the setting value of P3.22	
Er08-1	Analog input overvoltage fault– Analog torque command	2. The voltage inputted to analog torque command terminal exceeds the setting value of P3.25	1. Set P3.22,P3.25,P3.75 correctly 2. Check the terminals wiring 3. Set P3.22,P3.25,P3.75 to 0 to disable the protection function
Er08-2	Analog input overvoltage fault– Analog input 3	3. The voltage inputted to analog input 3 terminal exceeds the setting value of P3.75	
Er09-0	EEPROM fault– Read-write fault	The data stored in data storage area is damaged when reading data from	1. Try again after repower on 2. If the problem reoccurs for many times, change the drive

Code	Name	Causes	Countermeasures
		EEPROM There is interference to EEPROM write operation	
Er09-1	EEPROM fault– data check fault	1. The data read from EEPROM when power on is different from that during writing 2. The drive DSP software version updates	1. Reset all parameters 2. If the problem reoccurs for many times, change the drive
Er10-0	Hardware fault– FPGA fault	FPGA chip fault	1. Repower on 2. If the problem reoccurs for many times, change the drive
Er10-1	Hardware fault– Communication card fault	External communication card fault	1. Repower on 2. If the problem reoccurs for many times, change the communication card
Er10-2	Hardware fault– Ground short circuit fault	During the earth test after power on, one of motor cables V,W is short-circuited to the ground	1. Check the connection of the motor cables 2. Change the motor cable or test whether the motor insulation aging or not
Er10-3	Hardware fault– External input fault	This fault occurs when the digital terminal configured as external fault input function acts.	1. Clear the external fault input and enable fault clearance; 2. Repower on the drive
Er10-4	Hardware fault– E-stop fault	This fault occurs when the digital terminal configured as E-stop button acts.	1. Clear the E-stop input and enable fault clearance; 2. Repower on the drive
Er10-5	Hardware fault– 485 communication fault	Strong EMI of 485 communication circuit causes drive serial communication alarms	1. Use twisted shielded pairs for 485 communication 2. Wiring communication cables and motor power cables separately
Er11-0	Software fault– Reentry of motor	1. CPU loading ratio is too high	1. Reduce the software function 2. Contact the customers service and

Code	Name	Causes	Countermeasures
	control mission	2.DSP software fault	change the DSP software
Er11-1	Software fault– Reentry of cycle mission		
Er11-2	Software fault - Illegal operation		
Er12-0	IO fault– Digital input distribution repeated	Two or more digital inputs are configured to the same functions	Reset P3.00~P3.09 and ensure there is no repeated setting
Er12-1	IO fault–Analog input distribution repeated	If the drive is standard, the analog input 3 is speed command	Set P3.70 to other value.
Er12-2	IO fault–Pulse input frequency is too high	The pulse input frequency detected by the drive is higher than the designated value  1. External input pulse signal frequency is too high.  2. Damage of internal drive pulse frequency detection circuit	1. Test whether the actual frequency exceeds the max. pulse frequency corresponds to P0.21  2. Reduce the external input pulse signal frequency  3. Change the drive if fault occur when external input signal is normal
Er13-0	DC fault–overvoltage fault	The DC voltage of the main circuit is higher than the designated value  1. The grid voltage is too high 2. No braking resistor or pipe during braking or the braking resistor is damaged 3. DEC time is too short during the stopping 4. The internal DC voltage test circuit is damaged	1. Check whether the grid input voltage exceeds the allowed value; 2. Check whether the internal braking resistor is loose or damaged; check whether external braking resistor is damaged; 3. Enlarge the setting value of ACC/DEC time 4. Monitor R0.07 when the drive is disabled, if it is abnormal and does not match with grid input voltage, change the drive
Er13-1	DC	The DC voltage of the main	1. Check whether the grid input

Code	Name	Causes	Countermeasures
	fault–undervoltage fault	circuit is less than the designated value 1. The grid voltage is too low 2. The buffer relay is not switched on 3. The drive output power is too large 4. The internal DC voltage test circuit is damaged	voltage is lower than the allowed value; 2. Repower on, and check whether there is pull-in noise of the relay; 3. Monitor R0.07 when the drive is disabled, if it is abnormal and does not match with grid input voltage, change the drive
Er14-0	Control circuit undervoltage fault	The DC voltage of the control power is less than the designated value 1. The grid voltage is too low 2. The internal control power DC voltage test circuit is damaged	1. Check whether the grid input voltage is lower than the allowed value; 2. Monitor R0.08 when the drive is disabled, If it is abnormal and does not match with grid input voltage, change the drive
Er18-0	Motor overload fault	1. Long-term overload running 2. The load is too heavy during short time	1. Replace with the drive and motor with larger power
Er19-0	Speed fault–Overspeed fault	The absolute value of the motor speed exceeds the setting value of P4.32 1. U, V, W phases of the motor are connected reversely 2. Incorrect setting of the electronic gear ratio or motor speed loop control parameters 3. The setting value of P4.32 is less than the setting value of P4.31 (max. speed limit) 4. Interference to the encoder	1. Check the electronic gear ratio 2. Check the setting of speed loop control parameters. 3. Check that the phase sequence of the motor cable are connected correctly 4. Check whether motor encoder connection is proper; 5. Replace with the motor with higher rotation speed.

Code	Name	Causes	Countermeasures
		feedback signal	
Er20-0	Speed deviation fault	<p>In non-torque mode, the deviation between motor speed and speed command exceeds the set value of P4.39</p> <p>1. U, V, W phases of the motor are connected reversely or motor cable is not connected.</p> <p>2. The motor load is so heavy that it causes motor stall</p> <p>3. Insufficient drive force that causes motor stall</p> <p>4. Speed loop control parameters setting is improper</p> <p>5. The set value of P4.39 is too small.</p>	<p>1. Check the phase sequence of motor cable and ensure right wiring</p> <p>2. Check whether the conveyer belt or chain or the workbench reaches the boundary or encounters obstacles.</p> <p>3. Check whether the loop control parameters are set correctly or the drive is damaged or servo system model is proper;</p> <p>4. Enlarge the setting value of P4.39</p> <p>5. Set P4.39 to 0 to disable speed deviation fault detection.</p>
Er22-0	Deviation fault–Position deviation	<p>1. Server response time is too slow, causing retention pulse number to exceed the setting value of P4.33</p> <p>2. The motor load is too heavy to cause motor stall</p> <p>3. The pulse input frequency is too high and exceeds the max. speed of motor.</p> <p>4. Position command input step change exceeds the setting value of P4.33</p>	<p>1. Check whether the conveyer belt or chain or the workbench reaches the boundary or encounters obstacles.</p> <p>2. Enlarge the position loop gain parameters or speed feedforward gain or P4.33</p> <p>3. Adjust the electronic gear ratio parameter</p> <p>4. Decrease the variation of position command input</p>
Er22-1	Deviation fault–Hybrid control deviation is too large	In full closed loop control, the deviation between the feedback position of grating	<p>1. Check the connection between the motor and load</p> <p>2. Check the connection between</p>

Code	Name	Causes	Countermeasures
		ruler and that of the encoder exceeds the setting value of P4.64	grating ruler and the drive 3.Check the setting of P4.60, P4.61 and P4.62
Er22-2	Position increment overflow fault	The position command of single variation after converting via electronic gear ratio exceeds $2^{31}-1$ .	1. Decrease the single variation quantity of position command 2. Modify the gear ratio to a proper range.
Er22-3	CANopen fault-Sync signal timeout	In the interpolation position mode, the time interval between two adjacent synchronization frame signals is longer than twice of the time period of communication	1.Check the communication circuit to improve communication reliability; 2. Confirm whether the generation interval of synchronous frame of the synchronous signal generation source is correct
Er22-4	CANopen fault-position command buffer full		
Er23-0	Drive over-temperature fault	1.The ambient temperature of the drive exceeds the designated value 2. Drive overload	1.Reduce the ambient temperature and improve the ventilation environment 2. Replace with a servo system with larger power 3. Prolong the ACC/DEC time and reduce the load
Er25-4	Application fault-encoder offset angle test failed	Abnormity occurred during encoder offset angle test.	Check whether the motor shaft can rotate freely, then repower on and carry out
Er25-5	Application fault-encoder offset angle test failed	The current feedback wave fluctuate violently during encoder offset angle test	Reduce P4.53 parameter setting, then repower on and carry out
Er25-6	Application fault-Offside of back to the origin	Encounter the limit switch or software limit during the returning to the origin	Modify the setting of P5.10, repower on and carry out
Er25-7	Application fault-Inertia identification	1.Vibration in stopping exceeds 3.5s	1.Improve the mechanical rigidity properly

Code	Name	Causes	Countermeasures
	failed	2. Too short ACC time 3. The identification speed is below 150r/min	2.Increase P1.07 3.Increase P1.06

## 9.2 CANopen communication fault code and countermeasures

Code	Name	Causes	Countermeasures
Er26-0	SDO overtime	No drive response within the given time after the master read and write SDO	Check the communication
Er26-1	SDO index does not exist	SDO read or write parameters, the corresponding index does not exist or is not supported	Check the index and modify EDS file
Er26-2	SDO sub index does not exist	SDO read or write parameters, the corresponding sub index does not exist or is not supported	Check the index and modify EDS file
Er26-3	SDO data length error	The length of SDO read or write command does not match with the data length in drive object dictionary.	Adjust the length of SDO R/W command according to the data length of drive object dictionary
Er26-4	SDO write data exceeds the range	The range of SDO write command exceeds the data range of drive object dictionary	Adjust written data of SDO according to the data range in object dictionary.
Er26-5	Read-only and non-modifiable	Modify the read-only parameters	Check whether the parameter to be written is read-only data.
Er26-6	PDO mapping length error	The mapping length of PDO data exceed 64 bit	Check the mapping length of PDO
Er26-7	PDO mapping data does not exist	PDO mapping data cannot be found in the object dictionary	Check PDO mapping data in the object dictionary
Er26-8	PDO not allowed to be changed in the operating	Modify the PDO mapping during operation	Switch CANOpen state to pre-workbench and then modify PDO mapping
Er26-9	PDO not allow the mapping	Map the parameters not allowed into PDO	Check whether there are read-only PDO parameters being mapped

Code	Name	Causes	Countermeasures
			into RPDO.
Er26-a	Sync signal is too fast	The received frame exceeds the range allowed by baud rate	1.Modify the interval of data frame transmission via master station or the interval of synchronization frame 2.Modify communication baud rate
Er26-b	Receiving fault	CAN communication offline or the received error exceed 128	1.Check communication wiring 2.Restart the servo drive
Er26-c	Transmission fault	CAN communication offline or received error exceed 128	1.Check communication wiring 2.Restart the servo drive
Er26-d	Sync signal repeat	Receive the synchronization signal of external input when synchronization signal is from slave station	Modify the configuration and ensure only there is only one synchronization signal generation source in one communication network.
Er26-e	Bus load rate is too high	In asynchronous work mode, the number of frames received by the slave exceeds the scope allowed by baud rate	1. Modify the interval of data frame transmission via master station 2. Modify the transmission mode of slave station TPDO 3. Modify communication baud rate
Er26-f	Parameter modification state error	Modify the parameter in the state not allowed	Adjust the CANopen machine to Pre-OP or OP state, and then try to modify the parameters
Er22-3	Sync signal timeout	In interpolation position mode, the time interval between two adjacent synchronization frame signals are longer than twice of the time period of communication	1.Check communication wiring to improve communication reliability. 2. Confirm whether the generation interval of synchronous frame of the synchronous signal generation source is correct

### 9.3 PROFIBUS-DP communication fault code and countermeasures

Code	Name	Causes	Countermeasures
Er24-0	PROFIBUS-DP fault -PWK ID	PWK ID error	Read the manual , ensure the ID of PWK corresponds to the

<b>Code</b>	<b>Name</b>	<b>Causes</b>	<b>Countermeasures</b>
	error		parameter ID
Er24-1	PROFIBUS-DP fault –PWK exceed the range	The setting of PWK exceed the range allowed by the corresponding parameter	Read the manual , ensure the PWK setting of PWK is in the range allowed by the corresponding parameter
Er24-2	PROFIBUS-DP fault –read-only PWK parameter	PWK parameter performs write operation to read-only parameters.	Read the manual , ensure the parameter can be read and written
Er24-3	PROFIBUS-DP fault –PZD does not exist	The selected ID is not right	Read the manual , ensure the ID corresponds to the corresponding parameter ID
Er24-4	PROFIBUS-DP fault –PZD not matching	The parameter is not valid instantly	Read the manual , ensure the parameter is valid instantly
Er24-8	EtherCAT fault-initialization fault	Poor contact of EtherCAT chip	Replace servo
Er24-9	EtherCAT fault-EEPROM fault	EtherCAT EEPROM has no data or data cannot be read	Use tools eg TwinCAT to download xml file to EtherCAT EEPROM;
Er24-a	EtherCAT fault-DC Sync0 signal is abnormal	Set to DC sync working mode, DC Sync0 interruption signal is not detected over a period of time	Check whether data loss occurred due to interference; Check whether EtherCAT master station works normally;
Er24-b	EtherCAT fault-offline fault	After enabling the drive, network cable is detected to be poorly connected or EtherCAT master station works abnormally.	Check whether network cable is connected properly which should go in from above and out from bottom; Check if there is any interference; Check whether EtherCAT master station works normally.
Er24-c	EtherCAT fault-PDO data loss fault	After the drive is enabled for a period of time, there is no PDO data received.	Check EtherCAT master station works normally; Check whether data loss occurred due to interference.

# Chapter 10 Appendix

## 10.1 List of function parameters

P – position mode; S – speed mode; T – torque mode; F –full closed loop mode

The function codes with the superscript of “1” indicate that these parameters can be valid only when the system is reset and restarted or repowered after disconnection.

The function codes with the superscript of “2” indicate that these parameters are valid when the servo drive stops. The modification during operation is invalid.

The function codes with the superscript of “\*” indicate that these parameters are not saved after power off.

Table 10-1 List of function parameters

Function code	Name	Unit	Range	Default	Mode
<b>P0 Basic control</b>					
P0.00 <sup>1</sup>	Motor model	-	0~9999999	236	PSTF
P0.01 <sup>1</sup>	Encoder type	-	1~12	4	PSTF
P0.02 <sup>1</sup>	Forward direction of motor rotation	-	0~1	0	PSTF
P0.03 <sup>1</sup>	Control mode	-	0~9	0	PSTF
P0.04*	Internal servo enabling	-	0~1	0	PSTF
P0.05	Jog speed	r/min	0~1000	200	PSTF
P0.06 <sup>1</sup>	Frequency division numerator of frequency division output	-	0~(2 <sup>31</sup> -1)	10000	PSTF
P0.07 <sup>1</sup>	Frequency division denominator of frequency division output	-	1~(2 <sup>31</sup> -1)	131072	PSTF
P0.08 <sup>1</sup>	Reverse of frequency division output	-	0~1	0	PSTF
P0.09	Torque limit mode setting	-	0~6	1	PSF
P0.10	Max torque limit 1	%	0.0~500.0	300.0	PSTF
P0.11	Max torque limit 2	%	0.0~500.0	300.0	PSF
P0.13 <sup>1</sup>	Power of the external braking resistor	W	0~5000	200	PSTF
P0.14 <sup>1</sup>	Resistance of the external braking resistor	Ω	1~1000	60	PSTF
P0.15	Default monitoring parameters	-	0~22	0	PSTF

Function code	Name	Unit	Range	Default	Mode
P0.16	Parameter modification operation locked	-	0~1	0	PSTF
P0.17	EEPROM write mode	-	0~1	0	PSTF
P0.18*	Factory password	-	0~65535	0	PSTF
P0.20 <sup>1</sup>	Position command	-	0~4	0	PF
P0.22 <sup>1</sup>	Pulse number required by the motor to rotate a circle	pulse	0~1048576	10000	PF
P0.23 <sup>1</sup>	Pulse input form	-	0~2	0	PF
P0.24 <sup>1</sup>	Pulse input direction reversing	-	0~1	0	PF
P0.25	Numerator of the 1 <sup>st</sup> electronic gear	-	0~(2 <sup>31</sup> -1)	0	PF
P0.26 <sup>2</sup>	Denominator of the electronic gear	-	1~(2 <sup>31</sup> -1)	10000	PF
P0.27	Numerator of the 2 <sup>nd</sup> electronic gear	-	0~(2 <sup>31</sup> -1)	0	PF
P0.28	Numerator of the 3 <sup>rd</sup> electronic gear	-	0~(2 <sup>31</sup> -1)	0	PF
P0.29	Numerator of the 4 <sup>th</sup> electronic gear	-	0~(2 <sup>31</sup> -1)	0	PF
P0.33 <sup>2</sup>	Smooth filtering of position command	ms	0.0~1000.0	0.0	PF
P0.34 <sup>2</sup>	FIR filtering of position command	ms	0.0~1000.0	0.0	PF
P0.35	Software limit of the forward position control	-	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	PF
P0.36	Software limit of the reverse position control	-	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	PF
P0.37	Position command mode	-	0~1	0	PF
P0.40	Speed command	-	0~5	1	S
P0.41	Setting of speed command direction	-	0~1	0	S
P0.42	Analog speed command gain	(r/min)/V	10~2000	100	S
P0.43	Analog speed command reverse	-	0~1	0	S
P0.45	Dead zone of analog speed	V	0.000~3.000	0.000	S

Function code	Name	Unit	Range	Default	Mode
	command				
P0.46	Internal speed 1/ Speed limit 1	r/min	-20000~20000	100	ST
P0.47	Internal speed 2/ Speed limit 2	r/min	-20000~20000	0	ST
P0.48	Internal speed 3/ Speed limit 3	r/min	-20000~20000	0	ST
P0.49	Internal speed 4/ Speed limit 4	r/min	-20000~20000	0	ST
P0.50	Internal speed 5	r/min	-20000~20000	0	S
P0.51	Internal speed 6	r/min	-20000~20000	0	S
P0.52	Internal speed 7	r/min	-20000~20000	0	S
P0.53	Internal speed 8	r/min	-20000~20000	0	S
P0.54	ACC time	ms	0~30000	0	S
P0.55	DEC time	ms	0~30000	0	S
P0.56	ACC time of S curve	ms	0~1000	0	S
P0.57	DEC time of S curve	ms	0~1000	0	S
P0.58	Zero speed clamp mode	-	0~3	0	ST
P0.59	Speed threshold of zero speed clamp	r/min	10~20000	30	S
P0.60	Torque command selection	-	0~3	1	T
P0.61	Torque command direction	-	0~1	0	T
P0.62	Analog torque command gain	0.1%/V	0~2000	100	PSTF
P0.63	Analog torque command reverse	-	0~1	0	PSTF
P0.65	Dead zone of analog torque command	V	0.000~3.000	0.000	PSTF
P0.66	Internal torque command	%	-500.0~500.0	0.0	T
P0.67	Speed limit mode setting	-	0~1	0	T
P0.68	RAMP time of torque command	ms	0~10000	0	T
P0.69	DEC time of fast stop	ms	0~10000	500	PSTF
P0.70	Absolute encoder setting	-	0~1	0	PSTF
P0.71*	Absolute encoder clearing	-	0~1	0	PSTF
P0.90	Max. speed limit of the control	r/min	0~1000	100	PST

Function code	Name	Unit	Range	Default	Mode
	mode switching				
P0.91	Positioning reference of the control mode switching	pulse	-1~2 <sup>23</sup>	-1	PST
P0.92	Exiting mode of the control mode switching	-	0~1	0	PST
<b>P1 Autotuning control</b>					
P1.00	On-line automatic setting	-	0~1	0	PSTF
P1.01	1 <sup>st</sup> inertia ratio	%	0~10000	250	PSTF
P1.02	2 <sup>nd</sup> inertia ratio	%	0~10000	250	PSTF
P1.03	Machine rigidity setting	-	0~31	13	PSTF
P1.04*	Inertia offline setting	-	0~1	0	PSTF
P1.05	Operation mode of inertia identification	-	0~3	0	PSTF
P1.06	Movable range of inertia identification	r	0.2~20.0	2	PSTF
P1.07	Time constant of inertia identification ACC time	ms	2~1000	200	PSTF
P1.08	Speed level of inertia identification	-	0~3	1	PSTF
P1.19	Valid resonance detection bit	%	0.2~100	5	PSTF
P1.20	Resonance test mode	-	0~7	0	PSTF
P1.21*	1 <sup>st</sup> mechanical resonance frequency	Hz	0~5000	5000	PSTF
P1.22*	2 <sup>nd</sup> mechanical resonance frequency	Hz	0~5000	5000	PSTF
P1.23	1 <sup>st</sup> notch frequency	Hz	50~5000	5000	PSTF
P1.24	Q value of 1 <sup>st</sup> notch	-	0.50~16.00	1.00	PSTF
P1.25	1 <sup>st</sup> notch depth	%	0~100	0	PSTF
P1.26	2 <sup>nd</sup> notch frequency	Hz	50~5000	5000	PSTF
P1.27	Q value of 2 <sup>nd</sup> notch	-	0.50~16.00	1.00	PSTF
P1.28	2 <sup>nd</sup> notch depth	%	0~100	0	PSTF
P1.29	3 <sup>rd</sup> notch frequency	Hz	50~5000	5000	PSTF
P1.30	Q value of 3 <sup>rd</sup> notch	-	0.50~16.00	1.00	PSTF

Function code	Name	Unit	Range	Default	Mode
P1.31	3 <sup>rd</sup> notch depth	%	0~100	0	PSTF
P1.32	4 <sup>th</sup> notch frequency	Hz	50~5000	5000	PSTF
P1.33	Q value of 4 <sup>th</sup> notch	-	0.50~16.00	1.00	PSTF
P1.34	4 <sup>th</sup> notch depth	%	0~100	0	PSTF
P1.35	Vibration control mode of position command	-	0~2	0	PF
P1.36	The 1 <sup>st</sup> vibration control frequency	Hz	0.0~200.0	0.0	PF
P1.37	The 1 <sup>st</sup> vibration control filter factor	-	0.00~1.00	1.00	PF
P1.38	The 2 <sup>nd</sup> vibration control frequency	Hz	0.0~200.0	0.0	PF
P1.39	The 2 <sup>nd</sup> vibration control filter factor	-	0.00~1.00	1.00	PF
<b>P2 Motor control</b>					
P2.00	1 <sup>st</sup> speed gain	Hz	0.0~3276.7	27.0	PSTF
P2.01	1 <sup>st</sup> speed integration time constant	ms	0.1~1000.0	21.0	PSTF
P2.02	1 <sup>st</sup> position gain	1/s	0.0~3276.7	48.0	PF
P2.03	The 1 <sup>st</sup> speed detection filter	Hz	100~5000	5000	PSTF
P2.04	1 <sup>st</sup> torque filter	ms	0.00~25.00	0.84	PSTF
P2.05	2 <sup>nd</sup> speed gain	Hz	0.0~3276.7	27.0	PSTF
P2.06	2 <sup>nd</sup> speed integration time constant	ms	0.1~1000.0	1000.0	PSTF
P2.07	2 <sup>nd</sup> position gain	1/s	0.0~3276.7	57.0	PF
P2.08	The 2 <sup>nd</sup> speed detection filter	Hz	100~5000	5000	PSTF
P2.09	2 <sup>nd</sup> torque filter	ms	0.00~25.00	0.84	PSTF
P2.10	Speed feed-forward gain	%	0.0~100.0	0.0	PF
P2.11	Speed feed-forward filter time	ms	0.00~64.00	0.50	PF
P2.12	Torque feed-forward gain	%	0.0~100.0	0.0	PSF
P2.13	Torque feed-forward filter time	ms	0.00~64.00	0.00	PSF
P2.14	1IPPI coefficient	%	0~1000	100	PSTF
P2.15	2IPPI coefficient	%	0~1000	100	PSTF

Function code	Name	Unit	Range	Default	Mode
P2.20	2 <sup>nd</sup> gain setting	-	0~1	1	PSTF
P2.22	Position control switching mode	-	0~9	0	PF
P2.23	Delay time of position control switching	ms	0~10000	0	PF
P2.24	Switching level of position control	-	0~20000	0	PF
P2.25	Switching delay of the position control	-	0~20000	0	PF
P2.26	Switching time of position gain	ms	0~10000	0	PF
P2.27	Switching mode of speed control	-	0~5	0	S
P2.28	Delay time of speed control switching	ms	0~10000	0	S
P2.29	Switching level of speed control	-	0~20000	0	S
P2.30	Switching delay of the speed control	-	0~20000	0	S
P2.31	Switching mode of torque control	-	0~3	0	T
P2.32	Delay time of torque control switching	ms	0~10000	0	T
P2.33	Switching level of torque control	-	0~20000	0	T
P2.34	Switching delay of the torque control	-	0~20000	0	T
P2.41	Whether disturbance observer is valid	-	0~2	0	PSTF
P2.42	Gain compensation of disturbance observer	%	0~100	0	PSF
P2.43	Cut-off frequency of disturbance observer	ms	0.00~25.00	0.53	PSF
P2.44	Torque command offset	%	-500.0~500.0	0.0	PSTF
P2.50	Whether full closed-loop vibration suppressor is effective	-	0~2	0	PSF
P2.51	Cut-off frequency of full closed-loop vibration suppressor	Hz	1.0~500.0	100.0	PSF
P2.52	Compensation gain of full	%	0~1000	0	PSF

Function code	Name	Unit	Range	Default	Mode
	closed-loop vibration suppressor				
P2.60	Whether speed observer is effective	-	0~2	0	PSTF
P2.61	Gain of the speed observer	Hz	1~500	100	PSTF
P2.70	Cut-off speed of friction compensation	r/min	0~1000	20	PST
P2.71	Forward torque coefficient of friction compensation	%/(10r/m in)	0~100	0	PST
P2.72	Reverse torque coefficient of friction compensation	%/(10r/m in)	-100~0	0	PST
P2.73	Valid selection of friction compensation	-	0~1	0	PST

**P3 I/O management**

P3.00 <sup>1</sup>	Input configuration of digital 1	-	0x000~0x133	0x003	PSTF
P3.01 <sup>1</sup>	Input configuration of digital 2	-	0x000~0x133	0x00D	PSTF
P3.02 <sup>1</sup>	Input configuration of digital 3	-	0x000~0x133	0x004	PSTF
P3.03 <sup>1</sup>	Input configuration of digital 4	-	0x000~0x133	0x016	PSTF
P3.04 <sup>1</sup>	Input configuration of digital 5	-	0x000~0x133	0x019	PSTF
P3.05 <sup>1</sup>	Input configuration of digital 6	-	0x000~0x133	0x01A	PSTF
P3.06 <sup>1</sup>	Input configuration of digital 7	-	0x000~0x133	0x001	PSTF
P3.07 <sup>1</sup>	Input configuration of digital 8	-	0x000~0x133	0x002	PSTF
P3.08 <sup>1</sup>	Input configuration of digital 9	-	0x000~0x133	0x007	PSTF
P3.09 <sup>1</sup>	Input configuration of digital 10	-	0x000~0x133	0x008	PSTF
P3.10 <sup>1</sup>	Output configuration of digital 1	-	0x000~0x11F	0x001	PSTF
P3.11 <sup>1</sup>	Output configuration of digital 2	-	0x000~0x11F	0x003	PSTF
P3.12 <sup>1</sup>	Output configuration of digital 3	-	0x000~0x11F	0x007	PSTF
P3.13 <sup>1</sup>	Output configuration of digital 4	-	0x000~0x11F	0x00D	PSTF
P3.14 <sup>1</sup>	Output configuration of digital 5	-	0x000~0x11F	0x005	PSTF
P3.15 <sup>1</sup>	Output configuration of digital 6	-	0x000~0x11F	0x00E	PSTF
P3.16	Function configuration of DI capture encoder	-	0~0x30A	0	PSTF
P3.20	Offset of analog input 1	V	-10.000~10.000	0.000	S
P3.21	Filter of analog input 1	ms	0.0~1000.0	1.0	S

Function code	Name	Unit	Range	Default	Mode
P3.22	Voltage protection of analog input 1	V	0.000~10.000	0.000	S
P3.23	Offset of analog input 2	V	-10.000~10.000	0.000	PSTF
P3.24	Filter of analog input 2	ms	0.0~1000.0	0.0	PSTF
P3.25	Voltage protection of analog input 2	V	0.000~10.000	0.000	PSTF
P3.26	Function selection of analog input 1	-	0~7	0	PSTF
P3.27	Function selection of analog input 2	-	0~7	3	PSTF
P3.28	Analog speed compensation gain	%	0.0~100.0	0.0	PSTF
P3.29	Analog torque compensation gain	%	0.0~100.0	0.0	PSTF
P3.30 <sup>1</sup>	AO 1 selection	-	0~19	0	PSTF
P3.31	AO 1 voltage gain	-	0~214748364	0	PSTF
P3.32 <sup>1</sup>	AO 2 selection	-	0~19	0	PSTF
P3.33	Voltage gain of AO 2	-	0~214748364	0	PSTF
P3.34	Offset quantity of AO1	V	-10.000~10.000	0.000	PSTF
P3.35	Offset quantity of AO2	V	-10.000~10.000	0.000	PSTF
P3.36 <sup>1</sup>	Analog output monitor setting	-	0~2	0	PSTF
P3.40 <sup>1</sup>	Travel limit switch shield	-	0~2	1	PSTF
P3.41 <sup>1</sup>	E-stop shield	-	0~1	1	PSTF
P3.43 <sup>1</sup>	Digital input filter	0.125ms	1~800	1	PSTF
P3.44	Command pulse input invalid setting disabled	-	0~1	0	PF
P3.45 <sup>1</sup>	Clear mode of retention pulse	-	0~1	1	PF
P3.50	Range of position arrival	pulse	0~262144	100	PF
P3.51	Output mode of position arrival	-	0~4	0	PF
P3.52	Retention time of position arrival output terminal	ms	0~30000	0	PF
P3.53	Speed matching range	r/min	10~20000	50	PSTF
P3.54	Speed reaching	r/min	10~20000	1000	PSTF

Function code	Name	Unit	Range	Default	Mode
P3.55	Zero speed range	r/min	10~20000	50	PSTF
P3.56	Locked time of servo after braking	ms	0~1000	50	PSTF
P3.57	Braking delay time of the electromagnetic brake	ms	0~30000	500	PSTF
P3.58 <sup>1</sup>	Motor speed during brake clearance	r/min	0~1000	30	PSTF
P3.59	Torque reaching range	%	5.0~300.0	50.0	T
P3.70 <sup>1</sup>	Function of analog input 3	-	0~7	4	PSTF
P3.71	Zero offset of analog input 3	V	-10.000~10.000	0.000	PSTF
P3.72	Dead zone of analog input 3	V	0.000~3.000	0.000	PSTF
P3.73	Gain of analog input 3	-	0~2000	300	PSTF
P3.74	Analog input 3 reverse	-	0~1	0	PSTF
P3.75	Voltage protection of analog input 3	V	0.000~10.000	0.000	PSTF
P3.76	Filter of analog input 3	ms	0.0~1000.0	0.0	PSTF
P3.77	Analog input deadzone mode	-	0~1	0	PSTF
P3.90	Pulse input filter	-	0~7	2	PSTF

**P4 Extension and application**

P4.01 <sup>1</sup>	485 local communication address	-	1~255	1	PSTF
P4.02 <sup>1</sup>	CAN communication baud rate	-	0~5	1	PSTF
P4.03 <sup>1</sup>	485 communication baud rate	-	0~3	1	PSTF
P4.04 <sup>1</sup>	485 communication parity mode	-	0~5	0	PSTF
P4.05 <sup>1</sup>	CAN communication node	-	1~127	1	PSTF
P4.06	485 communication fault clear mode	-	0~1	1	PSTF
P4.07 <sup>1</sup>	EtherCAT synchronous cycle	-	0~3	2	PSTF
P4.08 <sup>1</sup>	EtherCAT synchronous type	-	0~2	0	PSTF
P4.09 <sup>1</sup>	EtherCAT fault detection time	ms	0~10000	100	PSTF
P4.10 <sup>1</sup>	Upper PC	-	0~1	0	PSTF
P4.11*	Bus servo enabling	-	0~1	0	PSTF
P4.12*	Bus position command	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	PF

Function code	Name	Unit	Range	Default	Mode
P4.13*	Bus speed command	r/min	-20000~20000	0	S
P4.14*	Bus torque command	%	-500.0~500.0	0.0	T
P4.15*	Switching command of control mode	-	0~1	0	PSTF
P4.16*	Gain switching command	-	0~1	0	PSTF
P4.17*	Switching command of electronic gear ratio	-	0~3	0	PF
P4.18*	Inertia ratio switching command	-	0~1	0	PSTF
P4.19*	Zero speed clamp command	-	0~1	0	ST
P4.20*	Retention pulse clear	-	0~1	0	PF
P4.21*	Torque limit switching command	-	0~1	0	PSTF
P4.22*	External fault command	-	0~1	0	PSTF
P4.23*	E-stop command	-	0~1	0	PSTF
P4.24*	Switching input command of vibration control	-	0~1	0	PF
P4.30	Stop mode	-	0~3	0	PSTF
P4.31	Max speed limit	r/min	0~20000	5000	PSTF
P4.32	Overspeed level	r/min	0~20000	6000	PSTF
P4.33	Pulse range for over-position	pulse	0~134217748	100000	PF
P4.34 <sup>1</sup>	Brake overload detection enabling signal	-	0~2	0	PSTF
P4.36 <sup>1</sup>	Undervoltage protection of the main power supply	-	0~1	1	PSTF
P4.37	Undervoltage detection time of the main power supply	ms	70~2000	70	PSTF
P4.39	Speed tolerance	r/min	0~20000	0	PSF
P4.40	Forward speed limit	r/min	0~20000	20000	PSTF
P4.41	Reverse speed limit	r/min	-20000~0	-20000	PSTF
P4.42	Internal speed of high resolution rate	r/min	-20000.0~20000.0	0.0	PSTF
P4.50 <sup>1</sup>	Offset of encoder Z phase	pulse	0~1048575	0	PSTF
P4.51	Switching time 1 of the torque limit	ms/100%	0~4000	0	PSF

Function code	Name	Unit	Range	Default	Mode
P4.52	Switching time 2 of the torque limit	ms/100%	0~4000	0	PSF
P4.53	Current loop response adjustment	%	10.0~200.0	100.0	PSTF
P4.54 <sup>1</sup>	Initialization time after power on	ms	0~200000	0	PSTF
P4.60 <sup>1</sup>	Frequency division molecular of external grating ruler	-	0~1048576	0	F
P4.61 <sup>1</sup>	Frequency division denominator of external grating ruler	-	1~1048576	10000	F
P4.62 <sup>1</sup>	Direction reverse of external grating ruler	-	0~1	0	F
P4.63 <sup>1</sup>	Invalid Z phase offline detection of external grating ruler	-	0~1	0	F
P4.64 <sup>1</sup>	Large mixed deviation setting	pulse	0~134217728	160000	F
P4.65 <sup>1</sup>	Mixed deviation clearing	r	0~100	0	F
P4.66 <sup>1</sup>	Z phase setting of external grating ruler	us	1~400	1	F
P4.67 <sup>1</sup>	External grating ruler pulse output of AB phase	-	0~1	0	F
P4.68 <sup>1</sup>	External grating ruler (2 <sup>nd</sup> encoder) resolution	pulse	1~1048576	10000	PF
P4.69 <sup>1</sup>	Frequency division output source	-	0~3	0	PSTF
P4.70 <sup>1</sup>	External grating ruler (2 <sup>nd</sup> encoder) Z signal type	-	0~3	0	PSTF
P4.78 <sup>1</sup>	MotionNet node number	-	0~63	0	PSTF
P4.79 <sup>1</sup>	MotionNet baud rate	-	0~3	2	PSTF
P4.80	PZD setting parameter 1 configuration	-	1000~3999	1998	PSTF
P4.81	PZD setting parameter 2 configuration	-	1000~3999	1998	PSTF
P4.82	PZD setting parameter 3 configuration	-	1000~3999	1998	PSTF
P4.83	PZD feedback parameter 1 configuration	-	4000~5852	4012	PSTF

Function code	Name	Unit	Range	Default	Mode
P4.84	PZD feedback parameter 2 configuration	-	4000~5852	4018	PSTF
P4.85	PZD feedback parameter 3 configuration	-	4000~5852	4032	PSTF
P4.86 <sup>1</sup>	PPO type of DP communication	-	5	5	PSTF
P4.87	CANopen communication cycle	us	0~(2 <sup>31</sup> -1)	0	PSTF
P4.88	CANopen heartbeat cycle	ms	0~32767	1000	PSTF
P4.89	CANopen offline automatic stop	-	0~1	0	PSTF
P4.90*	Fault restore	-	0~1	0	PSTF
P4.91*	Parameters saving	-	0~1	0	PSTF
P4.92*	Restore to the factory value	-	0~1	0	PSTF
P4.93*	Read enabling of the fault record	-	0~1	0	PSTF
P4.94*	Clear enabling of fault record	-	0~1	0	PSTF
P4.95*	Group number of fault record	-	0~9	0	PSTF
P4.96*	Factory parameter	-	-	0	PSTF
P4.97*	EEPROM operation of communication encoder	-	0~1	0	PSTF
P4.98*	EEPROM data fault block of communication encoder	-	0~1	1	PSTF

**P5 Program JOG and point control (PTP)**

P5.00	JOG mode	-	0~6	0	P
P5.01	JOG movement amount	pulse	1~2 <sup>30</sup>	50000	P
P5.02	JOG speed setting	r/min	1~5000	500	P
P5.03	JOG ACC/DEC time	ms	2~10000	100	P
P5.04	JOG waiting time	ms	0~10000	100	P
P5.05	JOG cycle times	-	0~10000	1	P
P5.10 <sup>2</sup>	Returning mode	-	0~128	0	P
P5.11 <sup>1</sup>	Returning the origin automatically at power on	-	0~1	0	P
P5.12	High speed of the first step of returning origin	r/min	0~2000	100	P
P5.13	High speed of the second step of returning origin	r/min	0~60	20	P

Function code	Name	Unit	Range	Default	Mode
P5.14	Origin setting	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
P5.15*	Trigger command of returning origin	-	0~1	0	P
P5.16	Correlation action of returning origin		0~1	0	P
P5.17	Speed of reaching designated target after returning origin	-	0~3	0	P
P5.18	ACC/DEC time of reaching designated target after returning origin	r/min	1~5000	100	P
P5.19	Step trigger signal	ms	0~32767	300	P
P5.20*	Step trigger command	-	-1~2048	-1	P
P5.21	00 target speed	r/min	0~6000	20	P
P5.22	01 target speed	r/min	0~6000	50	P
P5.23	02 target speed	r/min	0~6000	100	P
P5.24	03 target speed	r/min	0~6000	200	P
P5.25	04 target speed	r/min	0~6000	300	P
P5.26	05 target speed	r/min	0~6000	500	P
P5.27	06 target speed	r/min	0~6000	600	P
P5.28	07 target speed	r/min	0~6000	800	P
P5.29	08 target speed	r/min	0~6000	1000	P
P5.30	09 target speed	r/min	0~6000	1300	P
P5.31	10 target speed	r/min	0~6000	1500	P
P5.32	11 target speed	r/min	0~6000	1800	P
P5.33	12 target speed	r/min	0~6000	2000	P
P5.34	13 target speed	r/min	0~6000	2300	P
P5.35	14 target speed	r/min	0~6000	2500	P
P5.36	15 target speed	r/min	0~6000	3000	P
P5.37	00 ACC/DEC time	ms	0~32767	200	P
P5.38	01 ACC/DEC time	ms	0~32767	300	P
P5.39	02 ACC/DEC time	ms	0~32767	500	P
P5.40	03 ACC/DEC time	ms	0~32767	600	P
P5.41	04 ACC/DEC time	ms	0~32767	800	P

Function code	Name	Unit	Range	Default	Mode
P5.42	05 ACC/DEC time	ms	0~32767	900	P
P5.43	06 ACC/DEC time	ms	0~32767	1000	P
P5.44	07 ACC/DEC time	ms	0~32767	1200	P
P5.45	08 ACC/DEC time	ms	0~32767	1500	P
P5.46	09 ACC/DEC time	ms	0~32767	2000	P
P5.47	10 ACC/DEC time	ms	0~32767	2500	P
P5.48	11 ACC/DEC time	ms	0~32767	3000	P
P5.49	12 ACC/DEC time	ms	0~32767	5000	P
P5.50	13 ACC/DEC time	ms	0~32767	8000	P
P5.51	14 ACC/DEC time	ms	0~32767	50	P
P5.52	15 ACC/DEC time	ms	0~32767	30	P
P5.53	00 delay time	ms	0~32767	0	P
P5.54	01 delay time	ms	0~32767	100	P
P5.55	02 delay time	ms	0~32767	200	P
P5.56	03 delay time	ms	0~32767	400	P
P5.57	04 delay time	ms	0~32767	500	P
P5.58	05 delay time	ms	0~32767	800	P
P5.59	06 delay time	ms	0~32767	1000	P
P5.60	07 delay time	ms	0~32767	1500	P
P5.61	08 delay time	ms	0~32767	2000	P
P5.62	09 delay time	ms	0~32767	2500	P
P5.63	10 delay time	ms	0~32767	3000	P
P5.64	11 delay time	ms	0~32767	3500	P
P5.65	12 delay time	ms	0~32767	4000	P
P5.66	13 delay time	ms	0~32767	4500	P
P5.67	14 delay time	ms	0~32767	5000	P
P5.68	15 delay time	ms	0~32767	5500	P
P5.69	Bit trigger buffer switch	-	0~1	0	P
P5.70	One-circle resolution of disk	pulse	$-(2^{31}-1) \sim (2^{31}-1)$	10000	P
P5.71	Zero-returning switch of disk	-	0~3	0	P
P5.72	Multi-turn mode	-	0~1	0	P

**P6 Application function**

Function code	Name	Unit	Range	Default	Mode
P6.00	Forward slow jogging speed	r/min	0~6000	5	P
P6.01	Reverse slow jogging speed	r/min	-6000~0	-5	P
P6.02	Position latch function switch	-	0~1	0	P
P6.03	Position latch save mode	-	0~1	0	P
P6.04	Forward fast jogging speed	r/min	0~6000	60	P
P6.05	Reverse fast jogging speed	r/min	-6000~0	-60	P
P6.06	Terminal JOG valid	-	0~1	1	P
P6.20	Turret function switch	-	0~1	0	P
P6.21	Turret number	handful	1~128	16	P
P6.22	One-cycle pulse number of turret	pulse	2~(2 <sup>31</sup> -1)	10000	P
P6.23	Starting bit of turret	pulse	-(2 <sup>31</sup> -2)~(2 <sup>31</sup> -2)	0	P
P6.30	Gantry synchronization function switch	-	0~1	0	P
P6.31	Synchronous speed control gain	Hz	0.0~3276.7	0	P
P6.32	Synchronous speed control integral	ms	0.1~1000	1000	P
P6.33	Synchronous position control gain	1/s	0.0~3276.7	1000	P
P6.34	Synchronous compensation torque filter	ms	0.00~64.00	0.00	P
P6.35	Synchronization compensation speed filter	ms	0.00~64.00	0.00	P
P6.36	Synchronization control frequency bandwidth	%	0~1000	0	P
P6.37	Gantry synchronization master/slave selection	-	0~1	0	P
P6.38	Gantry synchronization alignment retreat distance	pulse	-(2 <sup>31</sup> -2)~(2 <sup>31</sup> -2)	10000	P
P6.39	Gantry synchronization alignment retreat speed	r/min	1~200	60	P
P6.40	Gantry synchronization alignment approaching speed	r/min	1~60	5	P
P6.41	Gantry synchronization	-	0~1	0	P

Function code	Name	Unit	Range	Default	Mode
	alignment direction				
<b>PtP0 Point control (PTP)</b>					
PtP0.00	Control word of 00 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.01	Position of 00 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.02	Control word of 01 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.03	Position of 01 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.04	Control word of 02 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.05	Position of 02 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.06	Control word of 03 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.07	Position of 03 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.08	Control word of 04 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.09	Position of 04 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.10	Control word of 05 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.11	Position of 05 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.12	Control word of 06 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.13	Position of 06 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.14	Control word of 07 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.15	Position of 07 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.16	Control word of 08 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.17	Position of 08 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.18	Control word of 09 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.19	Position of 09 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.20	Control word of 10 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.21	Position of 10 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.22	Control word of 11 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.23	Position of 11 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.24	Control word of 12 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.25	Position of 12 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.26	Control word of 13 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.27	Position of 13 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.28	Control word of 14 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.29	Position of 14 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P

Function code	Name	Unit	Range	Default	Mode
PtP0.30	Control word of 15 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.31	Position of 15 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.32	Control word of 16 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.33	Position of 16 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.34	Control word of 17 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.35	Position of 17 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.36	Control word of 18 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.37	Position of 18 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.38	Control word of 19 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.39	Position of 19 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.40	Control word of 20 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.41	Position of 20 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.42	Control word of 21 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.43	Position of 21 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.44	Control word of 22 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.45	Position of 22 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.46	Control word of 23 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.47	Position of 23 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.48	Control word of 24 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.49	Position of 24 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.50	Control word of 25 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.51	Position of 25 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.52	Control word of 26 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.53	Position of 26 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.54	Control word of 27 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.55	Position of 27 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.56	Control word of 28 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.57	Position of 28 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.58	Control word of 29 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.59	Position of 29 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.60	Control word of 30 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.61	Position of 30 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P

Function code	Name	Unit	Range	Default	Mode
PtP0.62	Control word of 31 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.63	Position of 31 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.64	Control word of 32 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.65	Position of 32 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.66	Control word of 33 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.67	Position of 33 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.68	Control word of 34 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.69	Position of 34 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.70	Control word of 35 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.71	Position of 35 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.72	Control word of 36 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.73	Position of 36 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.74	Control word of 37 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.75	Position of 37 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.76	Control word of 38 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.77	Position of 38 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.78	Control word of 39 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.79	Position of 39 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.80	Control word of 40 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.81	Position of 40 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.82	Control word of 41 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.83	Position of 41 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.84	Control word of 42 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.85	Position of 42 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.86	Control word of 43 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.87	Position of 43 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.88	Control word of 44 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.89	Position of 44 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.90	Control word of 45 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.91	Position of 45 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.92	Control word of 46 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.93	Position of 46 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P

Function code	Name	Unit	Range	Default	Mode
PtP0.94	Control word of 47 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.95	Position of 47 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.96	Control word of 48 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.97	Position of 48 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP0.98	Control word of 49 step	-	0~0x7FFFFFFF	0x00000000	P
PtP0.99	Position of 49 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P

**PtP1 point control (PTP)**

PtP1.00	Control word of 50 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.01	Position of 50 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.02	Control word of 51 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.03	Position of 51 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.04	Control word of 52 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.05	Position of 52 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.06	Control word of 53 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.07	Position of 53 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.08	Control word of 54 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.09	Position of 54 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.10	Control word of 55 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.11	Position of 55 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.12	Control word of 56 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.13	Position of 56 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.14	Control word of 57 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.15	Position of 57 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.16	Control word of 58 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.17	Position of 58 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.18	Control word of 59 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.19	Position of 59 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.20	Control word of 60 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.21	Position of 60 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.22	Control word of 61 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.23	Position of 61 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.24	Control word of 62 step	-	0~0x7FFFFFFF	0x00000000	P

Function code	Name	Unit	Range	Default	Mode
PtP1.25	Position of 62 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.26	Control word of 63 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.27	Position of 63 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.28	Control word of 64 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.29	Position of 64 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.30	Control word of 65 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.31	Position of 65 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.32	Control word of 66 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.33	Position of 66 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.34	Control word of 67 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.35	Position of 67 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.36	Control word of 68 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.37	Position of 68 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.38	Control word of 69 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.39	Position of 69 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.40	Control word of 70 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.41	Position of 70 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.42	Control word of 71 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.43	Position of 71 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.44	Control word of 72 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.45	Position of 72 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.46	Control word of 73 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.47	Position of 73 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.48	Control word of 74 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.49	Position of 74 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.50	Control word of 75 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.51	Position of 75 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.52	Control word of 76 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.53	Position of 76 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.54	Control word of 77 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.55	Position of 77 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.56	Control word of 78 step	-	0~0x7FFFFFFF	0x00000000	P

Function code	Name	Unit	Range	Default	Mode
PtP1.57	Position of 78 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.58	Control word of 79 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.59	Position of 79 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.60	Control word of 80 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.61	Position of 80 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.62	Control word of 81 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.63	Position of 81 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.64	Control word of 82 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.65	Position of 82 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.66	Control word of 83 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.67	Position of 83 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.68	Control word of 84 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.69	Position of 84 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.70	Control word of 85 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.71	Position of 85 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.72	Control word of 86 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.73	Position of 86 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.74	Control word of 87 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.75	Position of 87 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.76	Control word of 88 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.77	Position of 88 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.78	Control word of 89 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.79	Position of 89 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.80	Control word of 90 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.81	Position of 90 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.82	Control word of 91 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.83	Position of 91 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.84	Control word of 92 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.85	Position of 92 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.86	Control word of 93 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.87	Position of 93 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.88	Control word of 94 step	-	0~0x7FFFFFFF	0x00000000	P

Function code	Name	Unit	Range	Default	Mode
PtP1.89	Position of 94 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.90	Control word of 95 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.91	Position of 95 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.92	Control word of 96 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.93	Position of 96 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.94	Control word of 97 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.95	Position of 97 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.96	Control word of 98 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.97	Position of 98 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP1.98	Control word of 99 step	-	0~0x7FFFFFFF	0x00000000	P
PtP1.99	Position of 99 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
<b>PtP2 Point control (PTP)</b>					
PtP2.00	Control word of 100 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.01	Position of 100 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.02	Control word of 101 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.03	Position of 101 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.04	Control word of 102 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.05	Position of 102 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.06	Control word of 103 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.07	Position of 103 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.08	Control word of 104 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.09	Position of 104 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.10	Control word of 105 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.11	Position of 105 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.12	Control word of 106 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.13	Position of 106 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.14	Control word of 107 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.15	Position of 107 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.16	Control word of 108 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.17	Position of 108 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.18	Control word of 109 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.19	Position of 109 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P

Function code	Name	Unit	Range	Default	Mode
PtP2.20	Control word of 110 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.21	Position of 110 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.22	Control word of 111 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.23	Position of 111 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.24	Control word of 112 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.25	Position of 112 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.26	Control word of 113 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.27	Position of 113 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.28	Control word of 114 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.29	Position of 114 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.30	Control word of 115 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.31	Position of 115 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.32	Control word of 116 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.33	Position of 116 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.34	Control word of 117 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.35	Position of 117 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.36	Control word of 118 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.37	Position of 118 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.38	Control word of 119 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.39	Position of 119 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.40	Control word of 120 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.41	Position of 120 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.42	Control word of 121 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.43	Position of 121 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.44	Control word of 122 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.45	Position of 122 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.46	Control word of 123 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.47	Position of 123 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.48	Control word of 124 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.49	Position of 124 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.50	Control word of 125 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.51	Position of 125 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P

Function code	Name	Unit	Range	Default	Mode
PtP2.52	Control word of 126 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.53	Position of 126 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
PtP2.54	Control word of 127 step	-	0~0x7FFFFFFF	0x00000000	P
PtP2.55	Position of 127 step	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	0	P
<b>P8 P9 P10 Factory parameters</b>					
-	-	-	-	-	-

## 10.2 State monitoring

Function code	Name	Unit	Range	Mode
<b>R0 System monitoring parameter</b>				
R0.00	Motor speed	r/min	-10000.0~10000.0	PSTF
R0.01	Speed command	r/min	-10000.0~10000.0	PSTF
R0.02	Feedback pulse accumulation	pulse	-(2 <sup>63</sup> -1)~(2 <sup>63</sup> -1)	PF
R0.03	Command pulse accumulation	pulse	-(2 <sup>63</sup> -1)~(2 <sup>63</sup> -1)	PF
R0.04	Retention pulse	pulse	-(2 <sup>63</sup> -1)~(2 <sup>31</sup> -1)	PF
R0.05	Hybrid control deviation	pulse	-(2 <sup>63</sup> -1)~(2 <sup>31</sup> -1)	F
R0.06	Current torque	%	-500.0~500.0	PSTF
R0.07	DC voltage of main circuit	V	0.0~1000.0	PSTF
R0.08	Voltage of control power	V	0.0~1000.0	PSTF
R0.09	Output voltage	Vrms	0.0~1000.0	PSTF
R0.10	Output current	Arms	0.0~1000.0	PSTF
R0.11	Drive temperature	°C	-55.0~180.0	PSTF
R0.12	Torque limit	%	-500.0~500.0	PSTF
R0.13	Encoder feedback value	pulse	0~1048575	PSTF
R0.14	Position relative to Z pulse	pulse	0~1048575	PSTF
R0.15	Inertia ratio of load	%	0~10000	PSTF
R0.16	Output power	%	-500.0~500.0	PSTF
R0.17	Motor load ratio	%	0~500	PSTF
R0.18	Molecule of actual electric gear ratio	-	0~(2 <sup>31</sup> -1)	PF
R0.19	Denominator of actual electric gear ratio	-	1~(2 <sup>31</sup> -1)	PF
R0.20	Pulse speed command	r/min	-20000~20000	PF

Function code	Name	Unit	Range	Mode
R0.21	Motor speed (filtering)	r/min	-20000~20000	PSTF
R0.22	Bit state	-	-1~215	P
R0.23	Absolute position feedback of encoder	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	PSTF
R0.24	Encoder EEPROM data state	-	0~3	PSTF
R0.25	Circles of multi-circle encoder	-	-32768~32767	PSTF
R0.26	Available encoder type	-	0~6	PSTF
R0.27	EtherCAT clock synchronous correction state	-	0~1	PSTF
R0.28	State of CANopen state machine	-	0~18	PSTF
R0.29	Node of PROFIBUS-DP slave station	-	0~99	PSTF
R0.30	System state	-	0~5	PSTF
R0.31	IGBT state	-	0~1	PSTF
R0.32	Current mode	-	0~7	PSTF
R0.33	Power on time	s	0~(2 <sup>31</sup> -1)	PSTF
R0.34	Operation time	s	0~(2 <sup>31</sup> -1)	PSTF
R0.35	DSP software version	-	0.00~10.00	PSTF
R0.36	FPGA software version	-	0.00~10.00	PSTF
R0.37	Communication card software version	-	0.00~10.00	PSTF
R0.38	Drive serial No.1	-	0~65535	PSTF
R0.39	Drive serial No.2	-	0~65535	PSTF
R0.40	Drive serial No.3	-	0~65535	PSTF
R0.41	Drive serial No.4	-	0~65535	PSTF
R0.42	Drive serial No.5	-	0~65535	PSTF
R0.43	Drive serial No.6	-	0~65535	PSTF
R0.44	Absolute position of grating ruler (2 <sup>nd</sup> encoder) in single circle	pulse	0~1048575	PSTF
R0.45	Speed feedback of 2 <sup>nd</sup> encoder	r/min	-10000.0~10000.0	PSTF
R0.46	Observing speed of speed observer	r/min	-10000.0~10000.0	PSTF
R0.47	Feedback speed of speed observer	r/min	-10000.0~10000.0	PSTF
R0.48	Observing disturbance torque via disturbance observer	%	-1000.0~1000.0	PSTF
R0.49	Compensation value of full closed	r/min	-10000.0~10000.0	PSTF

Function code	Name	Unit	Range	Mode
	vibration suppressor			
R0.51	Observe load inertia ratio in real time	%	0~10000	PSTF
R0.52	Feedback accumulation of 2 <sup>nd</sup> encoder position	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	PSTF
R0.53	Gantry synchronization position deviation	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	PSTF
R0.54	Feedback value of grating ruler position	Pulse	0~2 <sup>23</sup>	PSTF
R0.55	Encoder circle no. deviation after clearing multi-turn position	-	-32768~32767	PSTF
R0.56	Encoder feedback value deviation after clearing multi-turn position	Pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	PSTF
R0.57	Feedback accumulation of 2 <sup>nd</sup> encoder position	pulse	-(2 <sup>63</sup> -1)~(2 <sup>63</sup> -1)	PSTF
R0.99	Fault code	-	-32768~32767	PSTF

**R1 IO monitoring parameter**

R1.00	Digital input state	-	0x000~0x3FF	PSTF
R1.01	Digital output state	-	0x00~0x3F	PSTF
R1.02	Original voltage of the analog input 1	-	-10.000~10.000	PSTF
R1.03	Original voltage of the analog input 2	-	-10.000~10.000	PSTF
R1.04	Original voltage of analog input 3	-	-10.000~10.000	PSTF
R1.05	Voltage of analog input 1	V	-10.000~10.000	PSTF
R1.06	Voltage of analog input 2	V	-10.000~10.000	PSTF
R1.07	Voltage of analog input 3	V	-10.000~10.000	PSTF
R1.08	Voltage of analog output 1	V	-10.000~10.000	PSTF
R1.09	Voltage of analog output 2	V	-10.000~10.000	PSTF
R1.10	Voltage of analog output 3	V	-10.000~10.000	PSTF
R1.11	Cumulative value of pulse input	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	PSTF
R1.12	Pulse position command	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	PSTF
R1.13	Pulse speed command	r/min	-10000.0~10000.0	PSTF
R1.14	Analog compensation speed	r/min	-10000.0~10000.0	PSTF
R1.15	Analog compensation torque	%	-1000.0~1000.0	PSTF
R1.16	DI capture encoder value	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	PSTF

**R2 Factory monitoring parameter**

Function code	Name	Unit	Range	Mode
-	-	-	-	-
<b>R3 Fault record parameter</b>				
R3.00	Fault code record	-	-	PSTF
R3.01	Power on time when fault occurs	s	0~(2 <sup>31</sup> -1)	PSTF
R3.02	Operation time when fault occurs	s	0~(2 <sup>31</sup> -1)	PSTF
R3.03	Motor speed when fault occurs	r/min	-20000~20000	PSTF
R3.04	Speed command when fault occurs	r/min	-20000~20000	PSTF
R3.05	Feedback pulse accumulation when fault occurs	pulse	-(2 <sup>63</sup> -1)~(2 <sup>63</sup> -1)	PF
R3.06	Command pulse accumulation when fault occurs	pulse	-(2 <sup>63</sup> -1)~(2 <sup>63</sup> -1)	PF
R3.07	Stranded pulse when fault occurs	pulse	-(2 <sup>31</sup> -1)~(2 <sup>31</sup> -1)	PF
R3.08	Current torque when fault occurs	%	-500.0~500.0	PSTF
R3.09	Main circuit DC voltage when fault occurs	V	0.0~1000.0	PSTF
R3.10	Output voltage at fault	Vrms	0.0~1000.0	PSTF
R3.11	Output current at fault	Arms	0.0~1000.0	PSTF
R3.20	Latest fault record	-	-	PSTF
R3.21	Latest 2 fault record	-	-	PSTF
R3.22	Latest 3 fault record	-	-	PSTF
R3.23	Latest 4 fault record	-	-	PSTF
R3.24	Latest 5 fault record	-	-	PSTF
R3.25	Latest 6 fault record	-	-	PSTF
R3.26	Latest 7 fault record	-	-	PSTF
R3.27	Latest 8 fault record	-	-	PSTF
R3.28	Latest 9 fault record	-	-	PSTF
R3.29	Latest 10 fault record	-	-	PSTF

## 10.3 General monitoring parameters

Table 10-3 Common monitoring parameters

Setting value of P0.15	Meaning	Sign	Unit	Corresponding parameter
【0】	Motor rotation speed	[SPdFb]	r/min	R0.00

Setting value of P0.15	Meaning	Sign	Unit	Corresponding parameter
1	Speed command	SPdc <del>nd</del> d	r/min	R0.01
2	Pulse feedback accumulation	PLSFB	pulse	R0.02
3	Pulse command accumulation	PLSc <del>nd</del> d	pulse	R0.03
4	Retention pulse	PLSER <del>1</del> 1	pulse	R0.04
5	Hybrid control deviation	PLSER <del>2</del> 2	pulse	R0.05
6	Current torque	trqFB	%	R0.06
7	Main circuit DC voltage	UbUS <del>1</del> 1	V	R0.07
8	Voltage of control power	UbUS <del>2</del> 2	V	R0.08
9	Output voltage	Uout	Vrms	R0.09
10	Output current	Iout	Arms	R0.10
11	Drive temperature	AdTn <del>P</del> P	°C	R0.11
12	Torque limit	trqL <del>mt</del> t	%	R0.12
13	Encoder feedback value	EncFB	pulse	R0.13
14	Rotor position relative to Z pulse	EncAbs	pulse	R0.14
15	Load inertia ratio	J-r	%	R0.15
16	Output power	Po <del>wer</del> r	%	R0.16
17	Motor load rate	Lo <del>ad</del> -r	%	R0.17
18	Molecule of actual electronic gear	nUN	-	R0.18
19	Denominator of actual electronic gear	dEn	-	R0.19
20	Pulse speed command	PLSSPd	r/min	R0.20
21	Instant speed	SPdFB <del>1</del> 1	r/min	R0.21
22	Bit state	PEPS <del>E</del> S <del>5</del> 5	-	R0.22

## 10.4 Fault code

The format of fault code is ErXX-X, of which, XX is the master code and X is the sub code.

**Er01-0**

Example: **Er01-0**, the master code is 01, the sub code is 0.

Table 10-4 Fault code illustration

Fault code	Name	Feature		
		History record	Can be cleared	Stop instantly
Er01-0	IGBT fault	●		●
Er02-0	Encoder fault-The encoder wire break	●		●

Fault code	Name	Feature		
		History record	Can be cleared	Stop instantly
Er02-1	Encoder fault–Encoder feedback error is too large	●		●
Er02-2	Encoder fault–Parity error	●		●
Er02-3	Encoder fault–CRC error	●		●
Er02-4	Encoder fault–Frame error	●		●
Er02-5	Encoder fault–A short frame error	●		●
Er02-6	Encoder fault–Encoder overtime	●		●
Er02-7	Encoder fault–FPGA overtime	●		●
Er02-8	Encoder fault–Low voltage alarm of the encoder	●		●
Er02-9	Encoder fault–Undervoltage alarm of the encoder	●		●
Er02-a	Encoder fault–Encoder over-temperature	●		●
Er02-b	Encoder fault–EEPROM write error	●		●
Er02-c	Encoder fault–EEPROM no data			●
Er02-d	Encoder fault–EEPROM data check error			●
Er03-0	Current sensor fault–U phase current sensor fault	●		●
Er03-1	Current sensor fault–V phase current sensor fault	●		●
Er03-2	Current sensor fault–W phase current sensor fault	●		●
Er04-0	System initialization fault	●		●
Er05-1	Setting fault–Motor model does not exist	●		●
Er05-2	Setting fault–Motor and drive model does not match	●		●
Er05-3	Setting fault–Software limit setting error	●	●	●
Er05-4	Setting fault–Returning origin mode setting fault	●	●	●
Er05-5	Setting fault–Bit control travel overflow fault	●	●	●
Er07-0	Regeneration discharge overload fault	●	●	●
Er08-0	Analog input overvoltage fault–Analog speed command	●	●	●
Er08-1	Analog input overvoltage fault–Analog torque command	●	●	●
Er08-2	Analog input overvoltage fault–Analog input 3	●	●	●
Er09-0	EEPROM fault–Read-write fault			●
Er09-1	EEPROM fault–data check fault			●
Er10-0	Hardware fault–FPGA fault	●		●
Er10-1	Hardware fault–Communication card fault	●	●	●
Er10-2	Hardware fault–Grounding short circuit fault	●		●
Er10-3	Hardware fault–External input fault	●	●	●

Fault code	Name	Feature		
		History record	Can be cleared	Stop instantly
Er10-4	Hardware fault–E-stop fault	●	●	●
Er10-5	Hardware fault–485 communication fault	●	●	●
Er11-1	Software fault–Reentrant cycle mission	●		●
Er11-2	Software fault–Illegal operation	●		●
Er12-0	IO fault–Digital input distribution repeated	●	●	●
Er12-2	IO fault–Pulse input frequency is too high	●	●	●
Er13-0	Main circuit overvoltage fault	●	●	●
Er13-1	Main circuit undervoltage fault		●	●
Er14-0	Undervoltage fault of control power		●	●
Er18-0	Motor overload fault	●	●	●
Er19-0	Speed fault–Overspeed fault	●	●	●
Er20-0	Speed deviation fault	●	●	●
Er22-0	Position deviation fault	●	●	●
Er22-1	Hybrid control deviation is too large	●	●	●
Er22-2	Position increment overflow fault	●	●	●
Er22-3	CANopen fault–Sync signal timeout	●	●	●
Er22-4	CANopen fault–position command buffer full	●	●	●
Er23-0	Over-temperature fault–drive over-temperature fault	●	●	●
Er24-0	PROFIBUS-DP fault–PWK parameters ID error		●	
Er24-1	PROFIBUS-DP fault–PWK Parameters exceeds the range			●
Er24-2	PROFIBUS-DP fault–PWK Parameters are read-only		●	
Er24-3	PROFIBUS-DP fault–PZD Configuration parameter does not exist			●
Er24-4	PROFIBUS-DP fault–PZD Configuration parameter properties do not match			●
Er24-8	EtherCAT fault–initialization fault	●		●
Er24-9	EtherCAT fault–EEPROM fault	●		●
Er24-a	EtherCAT fault–DC Sync0 signal is abnormal	●	●	●
Er24-b	EtherCAT fault–offline fault	●	●	●
Er24-c	EtherCAT fault–PDO data loss fault	●	●	●
Er25-4	Application fault– encoder offset angle test overtime	●		●

Fault code	Name	Feature		
		History record	Can be cleared	Stop instantly
Er25-5	Application fault– encoder offset angle test failure	●		●
Er25-6	Application fault–Offside of back to the origin	●		●
Er25-7	Application fault–Inertia identification failure	●	●	●
Er25-8	EtherCAT fault–communication card initialization fault	●		●
Er25-9	EtherCAT fault–communication card EEPROM fault	●		●
Er25-a	EtherCAT fault–abnormal DC Sync0 signal	●	●	●
Er25-b	EtherCAT fault–offline fault	●	●	●
Er25-c	EtherCAT fault–PDO data loss fault	●	●	●
Er26-0	CANopen fault–SDO overtime		●	
Er26-1	CANopen fault–SDO index does not exist		●	
Er26-2	CANopen fault–SDO sub index does not exist		●	
Er26-3	CANopen fault–SDO data length error		●	
Er26-4	CANopen fault–SDO W data exceeds the scope		●	
Er26-5	CANopen fault–Read-only cannot be modified		●	
Er26-6	CANopen fault–PDO mapping length error		●	
Er26-7	CANopen fault–PDO mapping data does not exist		●	
Er26-8	CANopen fault–PDO is not allowed to be modified during operating		●	
Er26-9	CANopen fault–PDO mapping is not allowed		●	
Er26-a	CANopen fault–Sync signal is too fast		●	
Er26-b	CANopen fault–Receive fault		●	
Er26-c	CANopen fault–Send failure		●	
Er26-d	CANopen fault–Sync signal repeat		●	
Er26-e	CANopen fault–The bus load rate is too high		●	
Er26-f	CANopen fault–Parameter modification state error		●	

## **10.5 Record table of parameter setting**



Service line: 400-700-9997; +86-21-34637660 Website: www.invt-tech.com

---

INVT INDUSTRIAL TECHNOLOGY (SHANGHAI) CO.,LTD.

No. 1 Building, No. 188 New Junhuan Road, Pujiang High Tech Park, Minhang District, Shanghai

**Industrial Automation:** ■ Frequency Inverter ■ Servo & Motion Control ■ Motor & Electric Spindle ■ PLC

■ HMI ■ Intelligent Elevator Control System ■ Traction Drive

**Electric Power** ■ SVG ■ Solar Inverter ■ UPS ■ Online Energy Management System



66001-00351

INVT Copyright.

Information may be subject to change without notice during product improving.

201703 (V1.1)